

Arcade Stick for Xbox Manual Instructions

- *joystick switch(Left joystick/D-Pad/Right joystick)
- *audio switch(headphones on/mic off/all off)
- *mode switch(joystick mode/controller mode)
- *view button
- *share button
- *menu button
- *joystick
- *star button
- *Xbox button
- *status LED
- *profile LED
- *profile button
- *power LED
- *2.4g receiver
- *microphone mute LED
- *3.5mm audio jack

Press the Xbox button to turn on the Arcade Stick.

Hold the Xbox button for 6 seconds to turn off the Arcade Stick.

Hold the Xbox button for 12 seconds to force the Arcade Stick off.

Windows

- * required system: Windows 10(1903) or above.

Wireless connection

1. connect the 2.4g receiver to the USB port of your Windows device.
2. turn the mode switch to controller mode.
3. press Xbox button to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the device, status LED stays solid.

wired connection

1. turn the mode switch to controller mode.
2. connect the Arcade Stick to your Windows device via USB cable, wait till the Arcade Stick is successfully recognized by the device, status LED stays solid.

Xbox

- * Xbox Series, Xbox One consoles are supported, Xbox 360 console is not supported.
- * The latest firmware version of your Xbox console is required.

Wireless connection

1. connect the 2.4g receiver to the USB port of your Xbox device.
2. turn the mode switch to joystick mode.
3. press Xbox button to turn on the Arcade Stick, wait till the Arcade Stick is successfully recognized by the Xbox console, status LED stays solid.

wired connection

1. turn the mode switch to joystick mode.
2. connect the Arcade Stick to your Xbox console via USB cable, wait till the Arcade Stick is successfully recognized by the Xbox console, status LED stays solid.

Button Swap

- * The profile LED will blink continuously when the swapped buttons are pressed.
 - * The swapped buttons will not be saved after the Arcade Stick is turned off.
 - * Joystick, view/menu/share and Xbox buttons are not supported.
1. press and hold any of the two buttons you would like to swap, then press the star button to swap them
 2. press and hold any of the two buttons which have been swapped and press the star button to cancel it

Volume Control

- *Beeps when adjusted to maximum/minimum
 - *Vibration when adjusted to middle value
-
- *Press and hold profile+up/down to turn up/down in-game volume
 - *Press and hold profile+left/right to adjust the balance between voice and game volume

Battery

- *Build-in 1000mAh Li-on rechargeable battery with 30 hours of play time(16 hours when connected with headphones) and with 4 hours charging time.

Status LED indicator

- low battery ---> red LED blinks
- battery charging --->green LED blinks
- battery full charged ---> green LED stays solid

Ultimate Software

- * Press profile button to activate the custom profile. The profile LED will not light up when using the default setting.

It gives you elite control over every piece of your Arcade Stick: customize button mapping, adjust stick & trigger sensitivity, and vibration control. Please visit support.8bitdo.com for the application.

Support

Please visit support.8bitdo.com for further information & additional support.

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a **Class B** digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.