



Internal Photographs

EUT - Open View

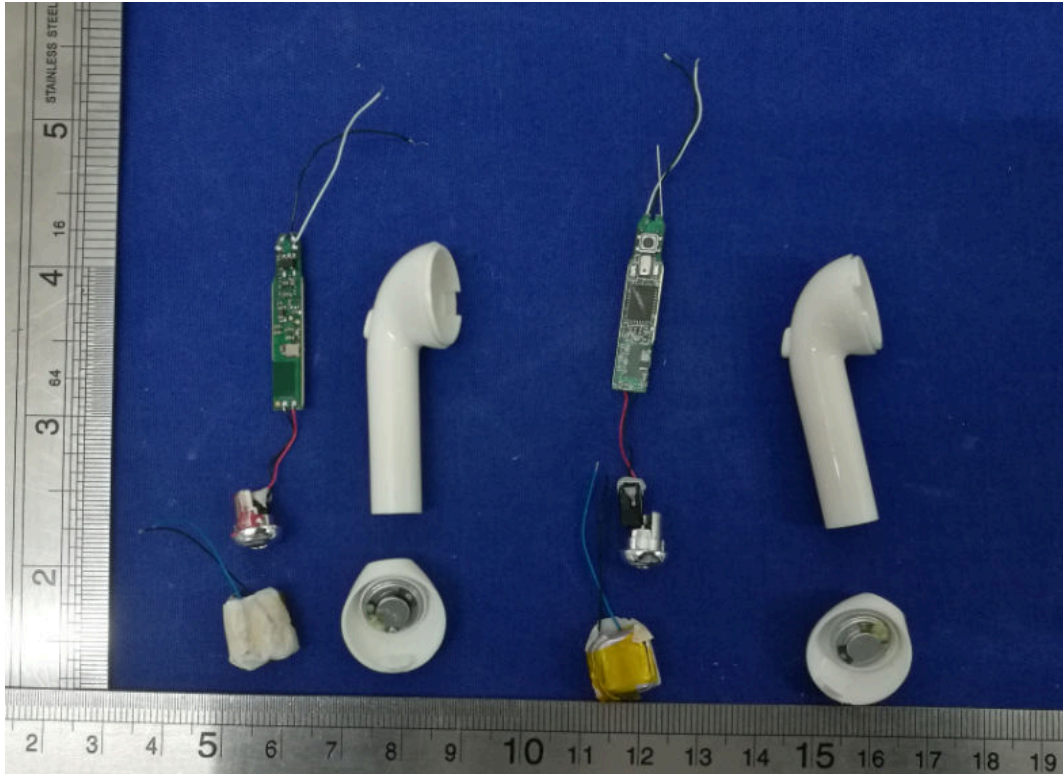


EUT - PCB View 1


Antenna location

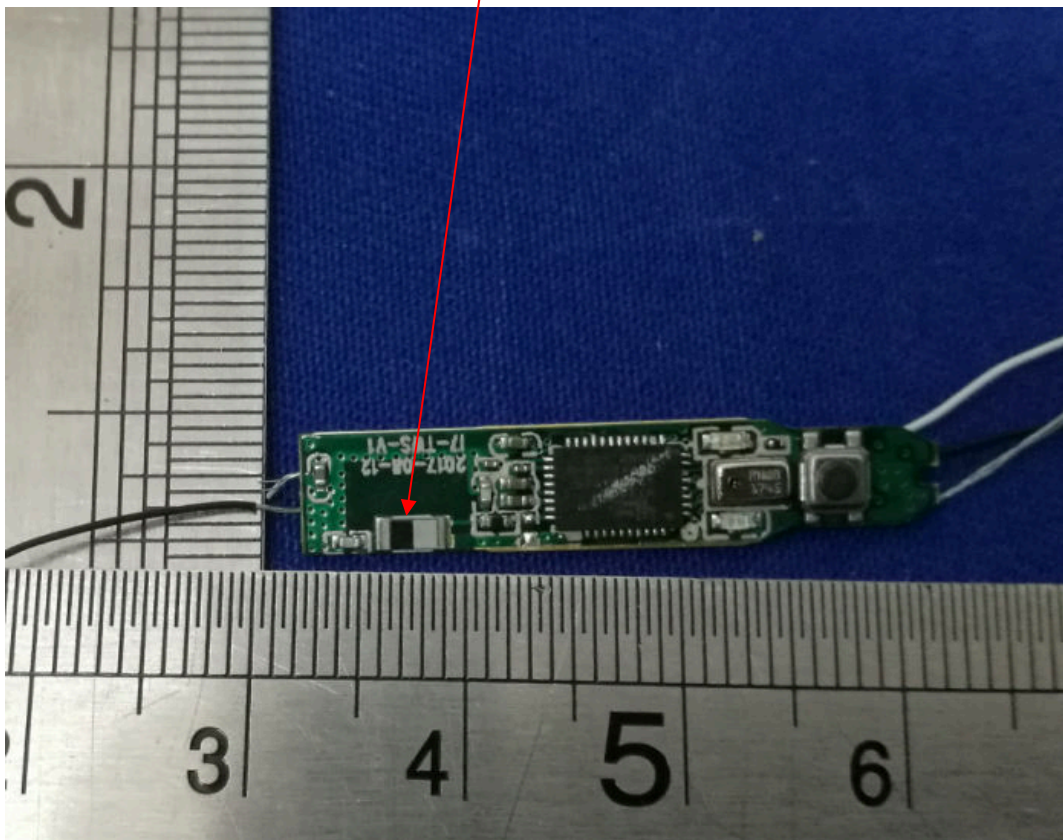

EUT – PCB View 2

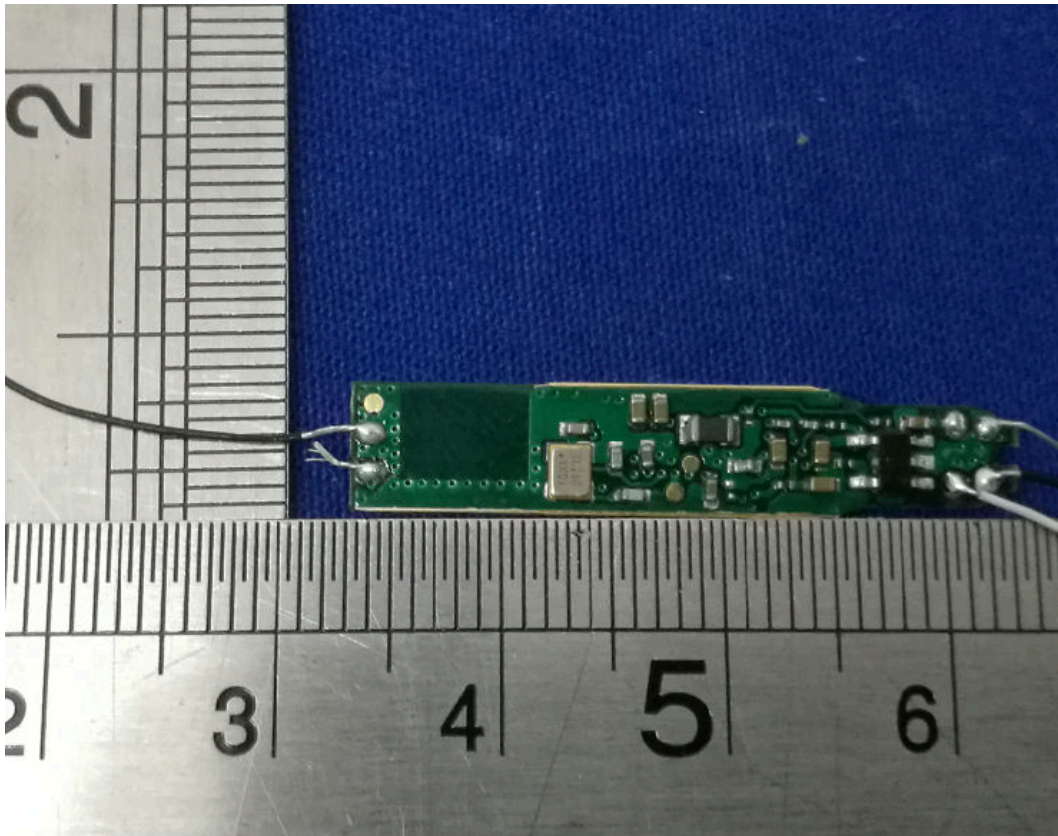

EUT – BT MODULE View

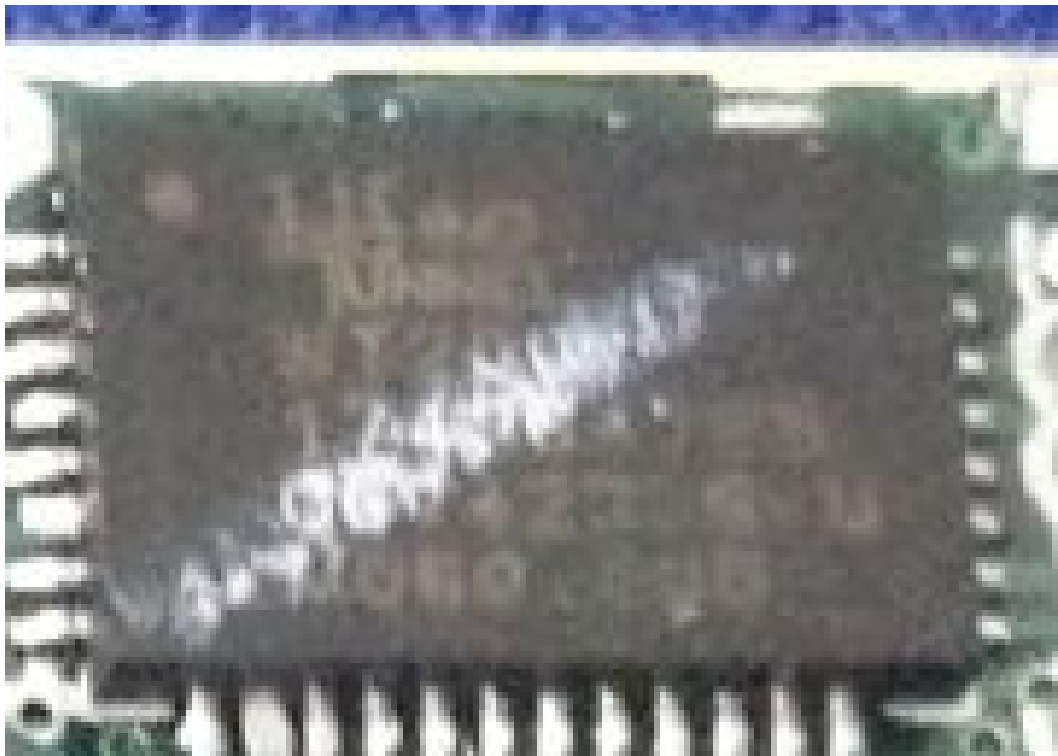

EUT -Battery View

