 



## User Manual

— Product description —

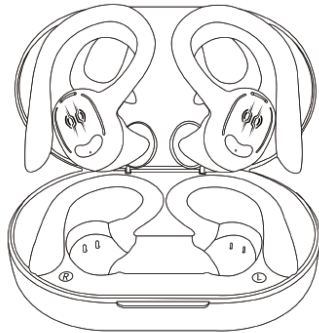


**YYK-635**  
Wireless Sports Headphones
 
## Product Photo

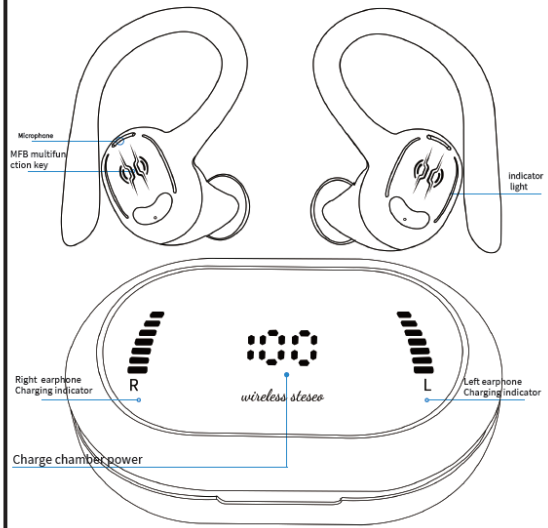

## Wireless Pairing

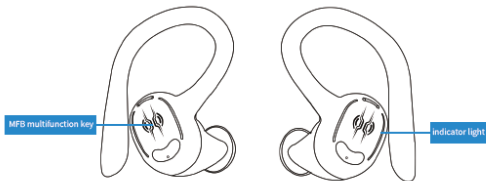 


Make sure the headset is off, press and hold the multifunction key for about 3 seconds until the blue light comes on once, then the red and blue lights flash alternately (at this time it enters the pairing state) and waits for the connection.



Turn on the Wireless function of the user's mobile phone (or other Wireless devices), and search or scan. At this time, the mobile phone will search all the Wireless devices nearby, and click the Headset Name: YYK-635, and enter the password 0000 (most mobile phones do not need a password at present). After successful pairing and connection, the headset indicator light goes off, indicating that the pairing connection is successful. At this time, you can make mobile phone calls and listen to songs.

## MFB Button

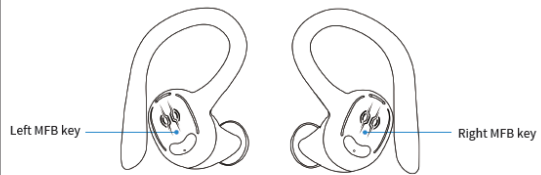 

	<b>Pause / play</b>	Double tap the left or right MFB button
	<b>Last Song</b>	Press and hold the left ear MFB button for 1 second
	<b>Next Song</b>	Press and hold the right ear MFB button for 1 second
	<b>volume+</b>	In the state of playing music, triple-click the left ear MFB to add 1 grid
	<b>volume-</b>	In the state of playing a song, triple-click the right ear MFB to reduce 1 grid
	<b>Answer</b>	Double tap the left or right MFB button
	<b>Hang up</b>	Double tap the left or right MFB button
	<b>Refuse to answer</b>	Press and hold the left or right ear MFB button for 1 second
	<b>Cancel call</b>	Double tap the left or right MFB button
	<b>Call Siri</b>	Triple tap the left or right ear MFB button (When not playing music)
	<b>Close Siri</b>	Double tap the left or right MFB button

### ON/OFF switch

1. When the headset is taken out of the charging compartment, the headset will automatically turn on, or press and hold the left and right ear MFB keys for 3 seconds to turn on
2. After use, put the earbuds into the charging bin, and it will turn off automatically.

### How to pair

1. Take the earbuds out of the charging bin and it will start work automatically.
2. The red and blue lights will flash alternatively (entering pairing mode)
3. Access the Settings of mobile phone/tablet -- Wireless -- Search -- YK-635 -- Pair/Connect -- Play music.

### Pair with PC/Laptop

Turn on the computer Settings-Devices-Wireless and Other Devices  
- Initiate Wireless - Add Wireless or Other Devices - Search Wireless  
- YK-635 - Pair/Connect - Play music.

Notes: If the computer has not Wireless function, please insert a Wireless adaptor, and download a Wireless driver for normal functioning.

### How to reset?

When the headset is off, Double-click MFB button and press and hold for 2 seconds. Put the headset into the charging compartment, and the headset will automatically turn off and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

### How to recharge the earbuds

1. put the headset in the charging bin, the headset will be automatically turned off and then charged.  
The display lights up to show the current power of the charging chamber, indicating that the charging chamber is charging the headset.
2. When the headset is fully charged, the red light of the headset indicator will be off.

### Product specification

 
Version	V5.3
Wireless support	A2DP.AVRCP.HFP.HSP.EDR
Communication range	≥10m
Frequency band	2.402GHz-2.480GHz
Electrical impedance	32Ω±10%
Standby time	100h
Call time	8-10h
Music playing time	8-10h
Earbuds battery capacity	55mAh
Host battery capacity	500mAh
Charging bin recharging time	About 1.5h
Charging time of headset	About 1.5h
Weight	70g

### How to recharge the charging bin

1. Please use a mobile phone adapter to recharge the charging bin. You may charge via a Type-C cable connected to a computer, or other charger with a Type-C interface.
2. The digital display of the charging bin will indicate the recharging process, and 100 battery level means fully recharged.

### Mobile phone transmission range

The transmission distance of the mobile phone is shown in the following chart

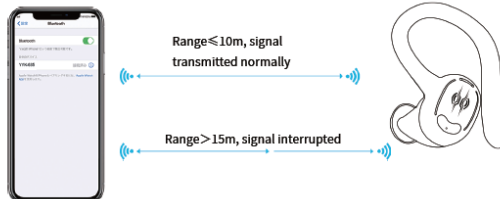

### Waterproof specification

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)

\* Note that the Wireless signal of mobile phones can't be transmitted in water.



Above water



In water

### Attention ⚠

1. Please avoid disassemble/reassemble the product in case of failure or fire accident.
2. Please keep away from corrosive liquids to prevent the product from damage.
3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C.
4. Please keep beyond the reach of kids or pets.
5. Please mind contact with sharp objects to avoid scratch.
6. Please avoid use in thundering and raining days to prevent damage or electrical shock.
7. In the case of non-use for above a month, please charge regularly for maintenance.
8. As the Wireless signal cannot transmit in water, it is not suitable for swimming for diving.

### Why cannot I detect Wireless?

#### Why Wireless pairing failure?

1. The Wireless range is 10m; please ensure no obstacles and place the mobile phone close to the earbuds.
2. If the earbuds are connected to other mobile phone or devices, please disconnect first.
3. Please reboot the Wireless device and reset the earbuds.

### Why do the earbuds produce no sound?

#### Or, why does the music playing stop?

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4. Please wipe the sweat on the earbuds before putting into the charging bin, and the indicator lights will turn on.

### Why do the earbuds turn off automatically?

Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after recollecting.

**FCC Statement:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**Why cannot I recharge the charging bin?**

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4. Once the prompt tone "Low Battery" appears, please recharge the earbuds. When the number displayed by the LED lights on the charging bin reaches "10", please recharge the charging bin. Please pay attention to not using up the battery of the earbuds and charging bin, as it may shorten the service life of the built-in lithium battery.

**Safety Precautions**

To guarantee the service life of the quality earbuds, please refer to the instructions as follows:

1. Please keep away from high temperature, high humidity and corrosive environment.
2. Please avoid bumping, falling, bending, soaking, and etc.
3. Please do not disassemble the earbuds or charging bin.
4. Please do not overcharge for a long time, which will shorten the service life.
5. In the case of feeling any discomfort or pain, please stop using the product.
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

**Packing Contents**

1. Earbuds \* 2
2. Charger \* 1
3. Type-C charging cable \* 1
4. User Manual \* 1