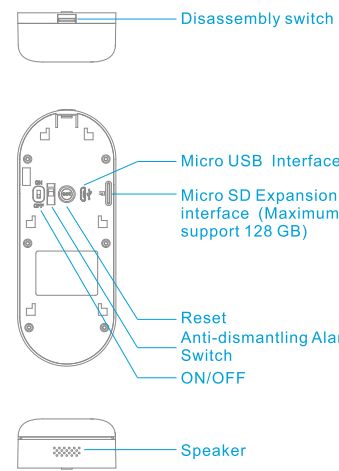
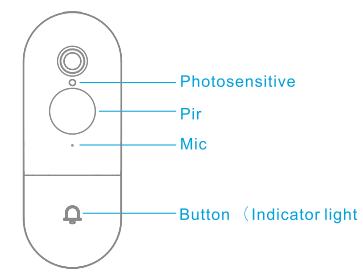



Visual Doorbell User Manual

Product Appearance



Device to connect

1 Download the APP
(1) scanning the QR code below, download and install the APP.

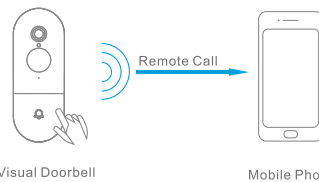


(2) Go to the APP Store or Google play, search for "hejiaqi", download and install the APP.

2 Register and login the APP
(1) please register APP account, and log in.
(2) if already registered, please login directly.

3 Add device
Open the APP and click "Add Device". Select "Visual Doorbell" and complete the device binding according to the APP guidance.

Doorbell and mobile phone linkage: When someone rings the bell, you can set the doorbell to directly dial your mobile phone number without missing any visitors.

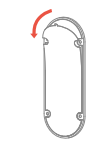
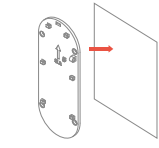


Visual Doorbell

Mobile Phone

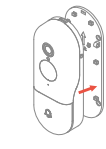
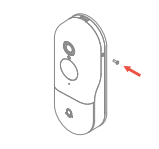
Installation and Disassemble

1 Install

1. Remove the 3M adhesive backing from the back of the mounting plate.

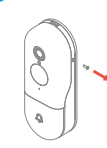
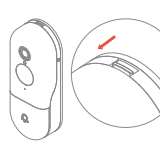
2. Paste the arrow of the mounting plate upward in a suitable position (it is recommended to be the same height as the cat eye of the door and paste it on the cat eye side).

3. Align the doorbell with the hole of the quick mounting plate and hang it down slightly on the hole of the quick mounting plate.

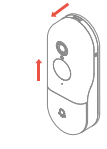
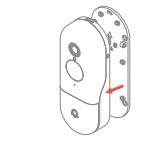
4. Fix the black screw in the screw bag at the screw hole on the side.

2 Disassemble

1. Remove the door bell side screw.

2. Pull the removal switch on the top of the doorbell outward with your fingers.

3. At the same time, lift the doorbell up.

4. Remove the doorbell from the quick mounting plate.

Indicator Light Description

Indicator Status	Indicator Definition
Blue light is always on	Power on
Blue light flashing	Configuration completed and online
Blue light flashing	Receive QR code information
Blue light flashing	Network connection equipment (disconnection after online)
Blue light flashing	Disconnect from the server
Blue light flashing	Press and hold the on / off key to reset
Blue light flashing	System startup complete, no WiFi configuration
Blue light flashing	The system starts up after reset
Blue light flashing	Device waiting to receive configuration information
Blue light flashing	WiFi password failed
Blue light flashing	Equipment unloading
Red light is always on	Waiting for charging
Green light is always on	Fully charged

Reset Doorbell

- When the doorbell is powered on, long press the reset chain for 5 seconds until the red light flashes and a "stop" sound is emitted, that is, the reset is successful.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.