

Model No.: CSN-307
FCC ID: 2AP3W-CSN-307



USER MANUAL

PLEASE READ THE USER MANUAL BEFORE YOU CONNECT THE SPEAKER

TO ALL CLIENTS:


Thank you very much to buy our products. Please take your time to read this user manual, it will tell you how to use the products, and it will explain the specification and operation of your unit and help ensure a trouble free installation.

Please keep the manual for future reference.

USE INSTRUCTION

1. Make sure the correct voltage is 110-240V 50/60Hz
2. Turn on the switch to enjoy the music
3. Adjust the knobs on the back panel to your satisfied best sound effect.
4. When you use the DC power, if the sound become not clear then you need to charge the speaker in time.
5. Please charge the battery every time after the power is finish, else it damage the battery if long time without charge or not using it for long period of time. So please kindly use it after regular interval of time.
6. Please do not open the speaker by yourself.

REMOTE CONTROL FUNCTIONS

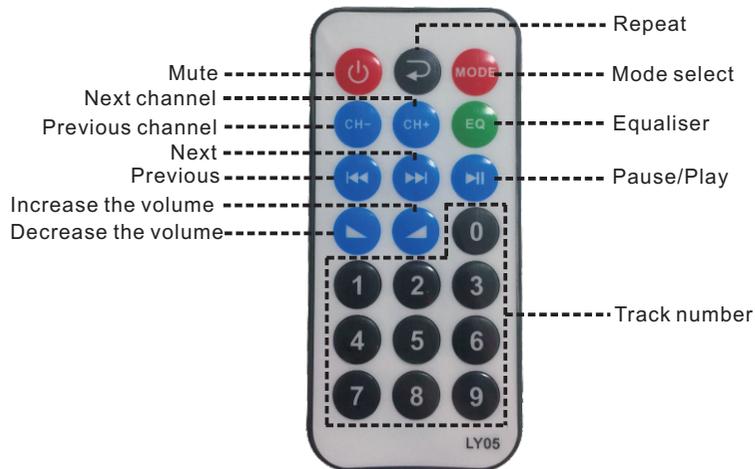

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.


Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

PANEL INSTRUCTION

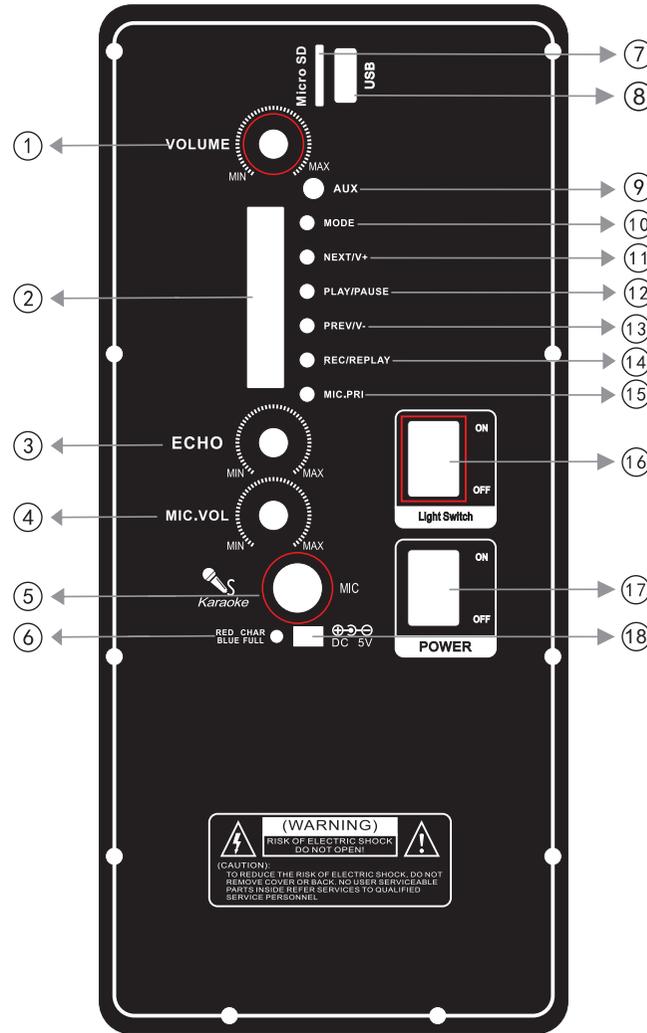

- 1.Master Volume
- 2.Display
- 3.Mic. Echo Adjustment
- 4.Mic. Volume
- 5.Mic. Input
- 6.Charging Indicator
- 7.Micro SD Input
- 8.USB Input
- 9.Aux Input
- 10.Optional Mode
- 11.Next/Volume Up
- 12.Play/Pause
- 13.Prev/Volume Down
- 14.Record/Replay
- 15.Mic. Priority
- 16.LED Light Switch
- 17.Power Switch
- 18.Charging

(WARNING)
RISK OF ELECTRIC SHOCK
DO NOT OPEN

(CAUTION)
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICES TO QUALIFIED SERVICE PERSONNEL.

BLUETOOTH

- Pairing: press Mode button to Blue Mode, speaker will be under Automatic Pairing Mode, led display shows “bLUE”, pair the BT compatible device by selecting bluetooth number from the listed devices, speaker will be connected sound after paired successful.
- Music Playing: press play/pause, Next or Prev to play the music.

USING AUX FUNCTION

You can connect this unit with computer, digital media player, mobile phones and other audio-visual products.

1. Turn on the speaker.
2. Press MODE button until you see LINE IN word on display.
3. Connect 3.5mm slot and external device with compatible audio cable.
4. Play music on external devices.

FM FUNCTION

- Choose “MODE” to switch to FM radio
- Choose “PLAY/PAUSE” for automatic searching and saving.
- Choose “PREV” and “NEXT” to switch channels.

TROUBLE SHOOTING

Symptom	Possible Cause	Simple Solution
No sound, no light	1. Plug is not well connected. 2. Power switch button is not turned on	Check the plug whether into the power supply socket
No sound, light on	1. Audio signal is not transmitted to speaker 2. Woofer wires disconnected	Please check the wires whether under well connected
Bad sound	1. The place is unfit for the speakers 2. Bad or incorrect speaker connections 3. Treble and bass knobs set too low	Please change another place to try again and check the connections. please set the treble and bass on the appropriate status
Input problem	1. USB/Micro SD not work 2. No FM 3. No BT	The USB port maybe has problem, please contact the seller to change a new one USB port

If the above problems still exist or you have other problems , please consult your dealer to solve the problem.
Please do not open the speaker , otherwise we assume no responsibility.



Designs and specifications of products are subject to change without notice.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DUE TO THE HIGH RISK OF FIRE OR ELECTRIC SHOCK, DO NOT OPEN THE CABINET. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. ONLY QUALIFIED SERVICE PERSONNEL SHOULD ATTEMPT THIS.