

 
# 骨传导运动耳机 OPENEAR Forte

## 使用说明书

### 佩戴方式



### 配件清单



OPENEAR Forte  
X1



说明书  
X1



充电线  
X1




耳棉  
X2

### 产品信息

 产品型号: OPENEAR Forte  
耳机类型: 骨传导运动耳机  
BT版本: 5.3  
频率范围: 20Hz-20KHz  
连接范围: ≈10米  
麦克风灵敏度: -38db  
电池容量: 180mAh  
续航时间: ≈7.5 小时 (80%音量)  
充电时间: ≈50 分钟  
充电电压: DC 5V

### 按键示意图

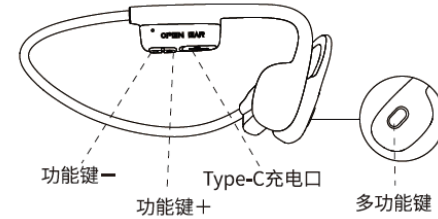

### 操作步骤

#### 开/关机

开机: 长按+键3秒, LED白绿灯闪烁,提示音: power on pairing;

关机: 长按+键3秒, LED绿灯闪烁3下,提示音: power off.

#### BT连接

打开蓝牙菜单, 选择“OPENEAR Forte”进行连接, 提示音: connected.

#### 接听/挂断/拒接来电

接听/挂断来电: 单击多功能键。  
拒接来电: 双击多功能键。

#### 播放/暂停音乐

单击多功能键。

#### 上/下一曲

上一曲: 三击多功能键。下一曲: 双击多功能键。

### 音量加/减

音量加: 单击+键。音量减: 单击-键。

### 唤醒语音助手

长按多功能键。

### 低电量提示

 
当电池低于20%时, 每隔3分钟绿灯闪烁3下, 低电量提示3分钟循环一次, 提示音“battery low”。

### 恢复出厂设置

关机状态下, 长按+键10秒。

### 充电

请使用DC 5V的适配器进行充电, 充电中绿灯常亮, 充满电白灯常亮。

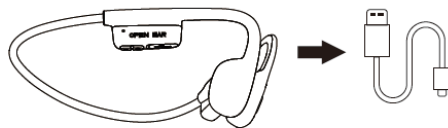

### 注意事项

1. 长时间听大音量音乐可能会带来不适感, 请尽可能使用中等左右的音量, 避免长时间使用大音量;
2. 无论音量大小, 使用耳机都将影响您对周围环境的感知, 使用耳机时多加注意;
3. 切勿拆除或改装耳机, 否则可能导致耳机故障或烧毁;
4. 切勿抛扔、坐压耳机或将其投入火中;
5. 耳机应远离火、高电压设备;
6. 不合适十岁以下儿童使用, 内包含细小零件;
7. 请勿将其归类为生活垃圾, 而将其送往当地相应的电器设备回收站。

注意: 若用户因违反以上警告内容造成的人身财产损失, 本公司不承担任何责任。

# Bone Conduction Sports Headphones

OPENEAR Forte

User Manual

## How to Wear



## What's In the Box



OPEAR Forte  
X1



Manual  
X1



Charging cable  
X1

 


Earplugs  
X1

## Specifications

Model: OPEAR Forte  
Type: Bone Conduction Headphones  
BT Version: 5.3  
Frequency: 20Hz-20kHz  
Connection: ≈10m  
Microphone: -38dB  
Battery: 180mAh  
Play Time: ≈7.5h(80%volume)  
Charging Time: ≈50min  
Charging Voltage: DC 5V

## Button Control

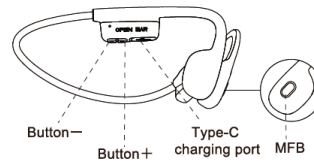

## Operations

### Power On/Off

Power On: Press & hold the button + for 3 sec, White and green led flash. Prompt: power on pairing.

Power Off: Press & hold the button + for 3 sec, green led flash. Prompt: power off .

### BT Connection

Select "OPEAR Forte" in BT menu to connect. Prompt: connected.

### Answer/Hang Up/Reject A Call

Answer/Hang Up A Call:Click the button MFB once.  
Reject A Call: Double click the button MFB.

### Play/Pause Music

Click the button MFB once.

### Previous/Next Track

Previous Track: Trippl click the button MFB.  
Next Track: Double click the button MFB.

## Volume Up/Down

Volume Up: Click the button + .  
Volume Down: Click the button - .

## Activate Voice Command

Press and hold the button MFB.

## Low Battery

When battery is lower than 20%, prompt: battery low.

## Restore Factory Setting

Under power-off mode, press and hold the button + for 10sec.

## Charge

Please use DC 5V adapter for charging,green LED is on charging, white LED is on after fully charged.



## Attentions

1. Listening to loud music for a long time may cause discomfort,please use medium volume if possible. Do not use high volume for long periods of time.
2. Using headphones will affect your perception of the surrounding environment. Pay more attention when using headphones.
3. Do not remove or modify the headphone,as this may cause damage or burn out.
4. Do not throw,twist on headphones or put them into a fire.
5. Keep it away from fire,hydration and high pressure equipment.
6. Not suitable for children under 10-year-old containing small parts.
7. Do not classify it as household waste. Please send it to the local electrical equipment recycling station.

Note: The company does not assume any responsibility for the loss of personal property caused by the violation of the above warnings.

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Warning Statement

### FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference.
- (2)This device must accept any interference received, including interference that may cause undesired operation.