

1 Annex C – documentation

1.1 List of Pictures

Picture 1: EUT – open bottom side	2
Picture 2: EUT – push button top side	2
Picture 3: EUT – push button bottom side	3
Picture 4: EUT – pcb top side	3
Picture 5: EUT – pcb bottom side	4
Picture 6: EUT – ferrite top side.....	4
Picture 7: EUT – ferrite bottom side.....	5




EMV **TESTHAUS** GmbH
Gustav-Hertz-Straße 35
94315 Straubing
Germany


HERMOS AG
RFID-Reader
LFP USB Reader

180412-AU01+W02
Annex C

Page 1 of 5

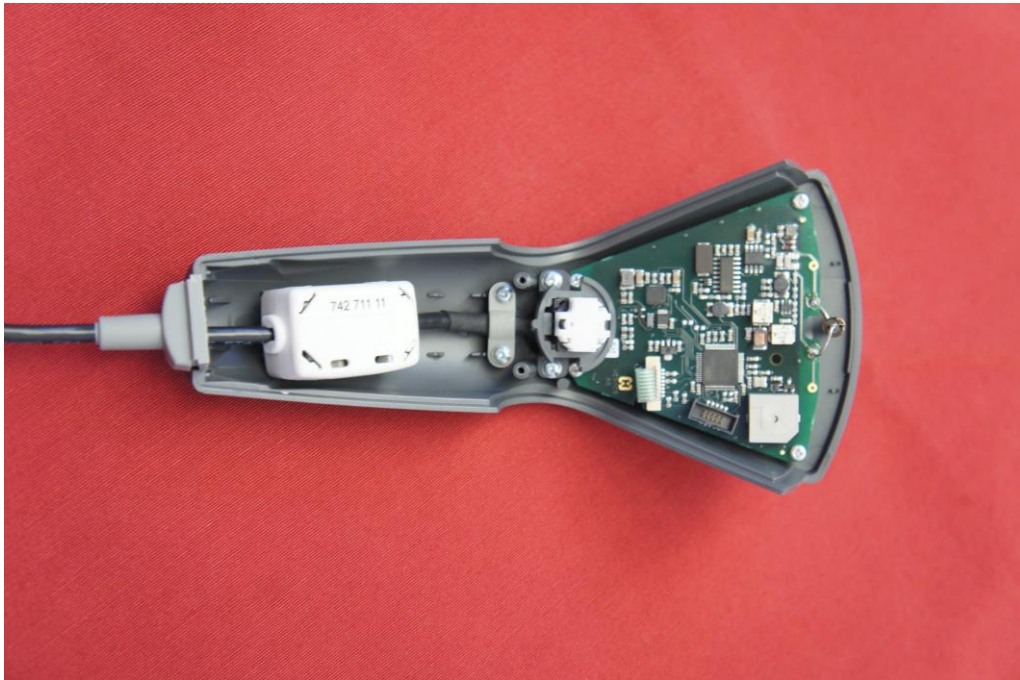


Picture 1: EUT – open bottom side

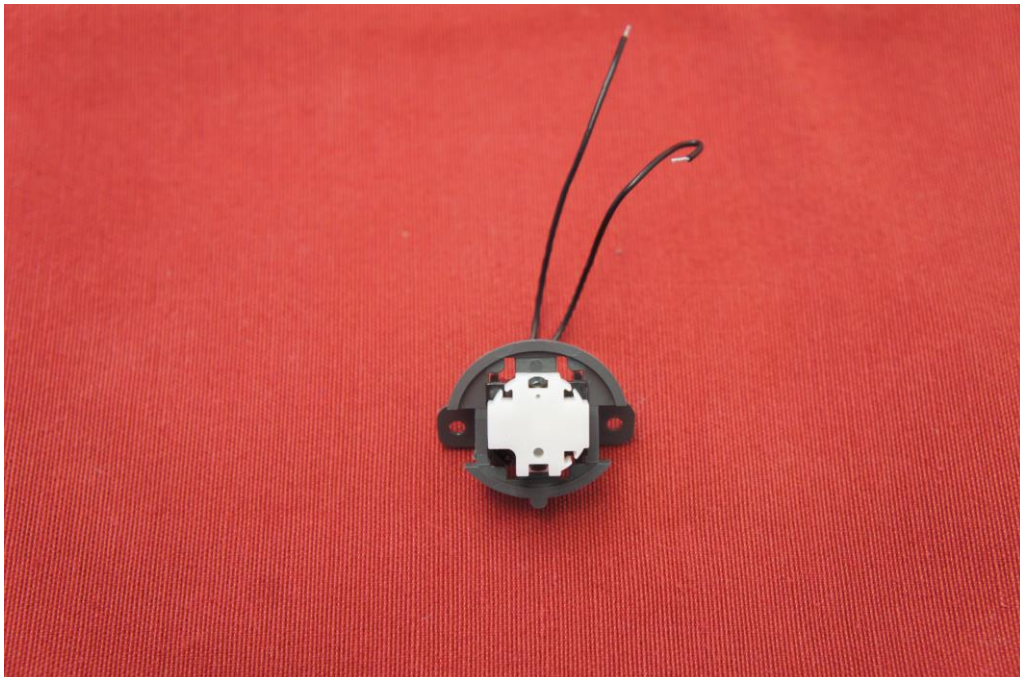


Picture 2: EUT – push button top side



Picture 3: EUT – push button bottom side

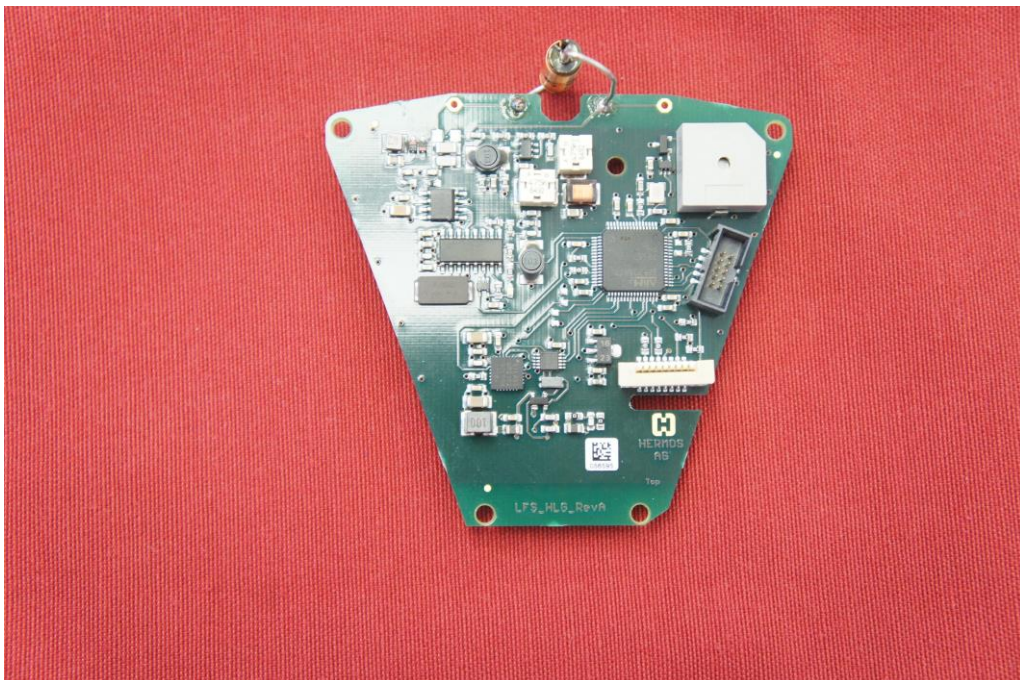

Picture 4: EUT – pcb top side

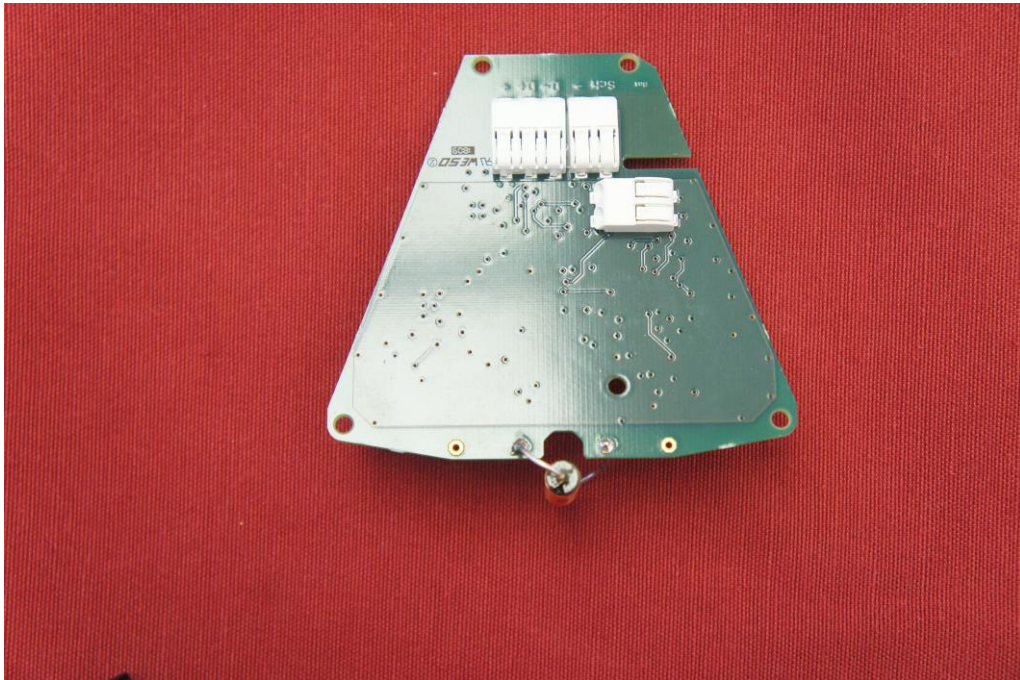

Picture 5: EUT – pcb bottom side



Picture 6: EUT – ferrite top side



Picture 7: EUT – ferrite bottom side