 
 


# Smart Wireless Desktop Speakers

## Instruction Manual V-2023SP1



### Functions:

- |                   |                        |
|-------------------|------------------------|
| 1. ON/OFF Switch  | 6. Microphone          |
| 2. AUX Port       | 7. Mode Button         |
| 3. SD Card Port   | 8. Vol+/Previous Track |
| 4. USB Port       | 9. Vol-/Previous Track |
| 5. Micro USB Port | 10. Play/Pause/Phone   |

### What's included:

- 1 x Speaker (7198-67)
- 1 x (2 in 1) Micro-USB Charging Cable / 3.5mm Aux Cable
- 1 x Instruction Manual

### Tech Specifications

- Playing time: up to 2 hrs at max volume
- Charging time: up to 4 hrs
- Pairing Name: "V-2023SP1"

### Instructions:

(Be sure to fully charge the speaker before using for the first time).

- Charging the Speaker**
  - Connect the provided charging cable to a power source and to the micro USB port on the speaker (6).
- Wireless connection Setup:**
  - Slide the (1) "ON/OFF" right to power on. When pairing, the BLUE light will blink,
  - look for "V-2023SP1" on your device and select it to pair with device. Once pairing is successful the blue light will remain illuminated.
- Playing Music:**
  - Short press (5) "Play/Pause/Phone" key to pause music. A second short press will resume playing music again.
  - Short press (4) "Previous track/Vol-", the speaker will play the previous track.
  - Long press to reduce speaker volume.
  - Short press (6) "Next track/Vol+", the speaker will play the next track.
  - Long press to increase speaker volume.
- AUX Function:**
  - The provided 2 in 1 Micro-USB charging/aux cable needs to be used for Aux Mode. Plug the provided Micro-USB into the speaker and the 3.5mm Aux into the mobile device, press the Mode Button(3), now you can enjoy the audio.
- Call Function:**
  - Short press "||<" (5) to answer a incoming call, press again to end call.
  - Press and hold to reject the call.
  - Long press "||<" to redial last called number from the speaker.
- SD CardFunction:**
  - Find the SD card port (10)
  - Insert the SD card to enjoy the music
- FM MODE:**
  - Press and hold, the mode button to enter FM Mode

- "Play/Pause/Phone": Will scan stations
- "Vol+/Previous Track": to scan forwards
- "Vol-/Previous Track": to scan backwards

### SAFETY PRECAUTIONS:

- **WARNING-**When using this product, basic precautions should always be followed:
  1. Read all the instructions before use.
  2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
  3. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
  4. To reduce the risk of injury, close supervision is necessary when the product is used near children.
  5. Do not expose the device to moisture.
  6. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
  7. Do not use the device if damaged or modified.
  8. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
  9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
  10. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
  11. Ensure that qualified service professionals use only identical replacement parts to ensure product safety

### FCC Statement:

Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment general uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



MADE IN CHINA