


The E-label information

To access the e-label information, in the device,

1.Go to the main interface as follows



2. Enter the setting interface, as follows

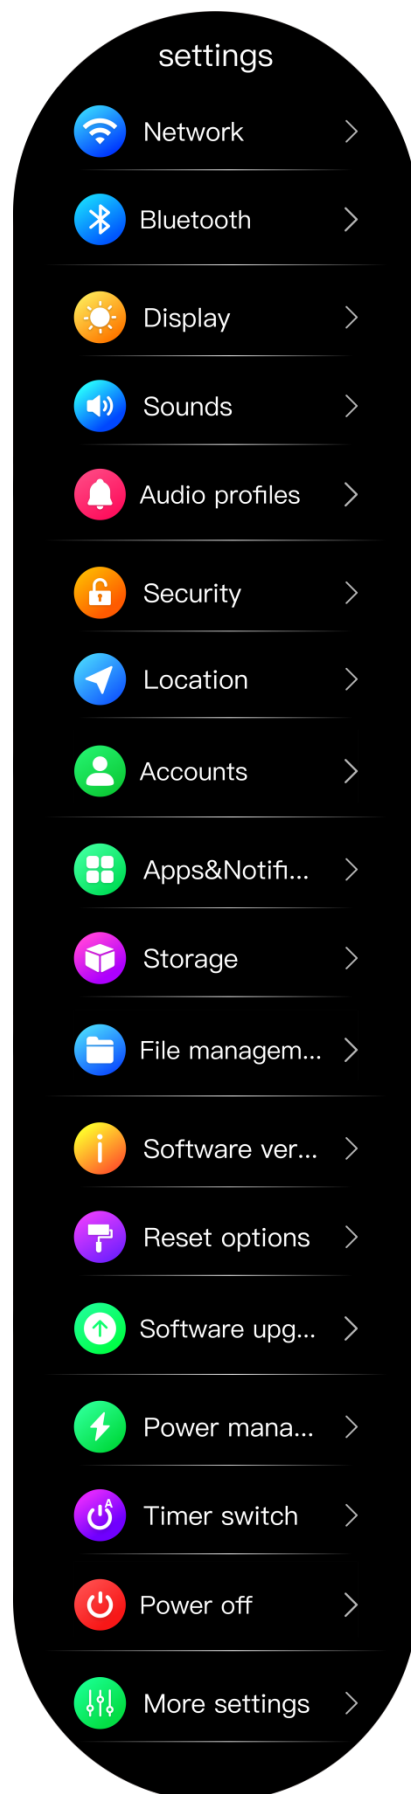

3. Select Software version

Model	Suntak FLEX
Software Version	2.0.83
Version	Har 20240829
System Version	8.1.0

4. Select System version, as shown in the following interface

