 
AUDIO QUICK START GUIDE

INLINE MICROPHONE

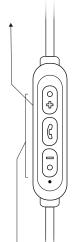

REMOTE BUTTON These earbuds with 3-button & mic are compatible with all smartphones, Apple devices (iPod, iPhone, iPad), and Samsung/Android mobile devices.

Function review

- To answer/end call, press the ${\textstyle \binom{c}{2}}$ button once to answer and press again to end the call
- To play/pause music, press the (button once
- To skip to the next song, press
 button once
- To go to the previous song,press ⊨button once
- To decline an incoming call, hold down the $\ensuremath{\mathfrak{C}}$ button for about two seconds
- To raise volume, hold and press the ⊕ button
- To lower volume, hold and press the □ button
- To redial last call , double click the 🕻 button

PAIRING

- 1. Make sure your BPM earbuds are fully charged.
- 2. Make sure your BPM earbuds are turned off by pressing & holding the call button until the light turns off.
- 3. Go to "Bluetooth" Settings on your device (Phone, Tablet, Etc..).
- 4. Turn the Bluetooth On.
- 5. Turn your earbuds into pair mode by pressing and holding the & button on your earbuds until the LED light starts flashing Blue and Red.
- 6. Select '2BMEB0218' on the list of available devices.
- 7. You are now connected!

(Trouble shooting tip: if the Bluetooth pairing does not sync, turn off the Bluetooth on your device as well as turn off the headphones, then turn on the device's Bluetooth followed by the headphones and follow the instructions normally)

CHARGING THE EARBUDS

The earbuds come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the earbuds. Connect the USB cable to a computer or any USB charger, and connect the opposite end to your earbuds. The red LED light will illuminate while the earphones are charging. A full charge of the battery takes around 1.5 hours. When the battery is fully charged, the LED light will turn off. Disconnect the headset at this point. The headset will then be ready for use. When using your earphones with an iPhone, the top right corner will indicate your ear bud's battery life.

FRONT BACK

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.