Next Track Press the right O

Press the left O button

Press the right o button

Press either O button twice

Press either O button twice

Activating Phone Assistant

Pairing window: 5 minutes

Hold and press the earbuds O

button for around 2 seconds

Press and hold either O button for

Volume Up

Volume Down

Answer Call

Reject Call

2 second


End Call

button 3 times in quick succession

This product shall be supplied by a power source not exceeding PS1 only. This Bluetooth earpiece shall be charged by the supplied charging unit only.

CAUTION > The batteries in this product are not replaceable. > During use, storage or transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. > If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. > Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could cause explosion.

Function overview:

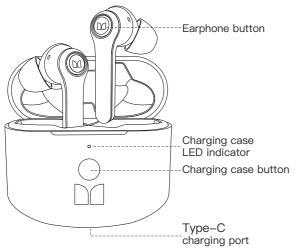

WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other countries.

Earphone Function Operation

Power ON

When the charging case is opened, both earphones will automatically power ON and sync

Or when the earphones are OFF you can press and hold both buttons for 5s to turn them ON.

Power OFF

Put earphones back into the charging case, ensure the case is powered, they will be automatically powered OFF;

Or you can press and hold the button of either earphone for 7seconds, both earphones will be turned OFF.

Play/Pause Press either O button twice

Previous Track

Press the left O button 3 times in quick succession

Bluetooth® Pairing

Quick guide

tional charging.

needs to be charged.

actively charged.

- Go to "Bluetooth" Settings on your Bluetooth device (phone, tablet, etc.)
- > Turn the Bluetooth ON, on your device.
- Open the charging case, they will automatically turn on(or they can be turned on manually). Hold and press the charging case button for 3 seconds, the LED indicator on the case will flash white, indicating the earphones enter pairing mode with Bluetooth device.
- On your Bluetooth Device, select the pairing name of your Earphones on the list of available devices, Pairing name is: Monster Verse TWS.

Trouble shooting tip

- If the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process.
- Your Earphones are designed to automatically sync to each other when they are turned ON, however if they ever fail to sync, please put both Earphones back into the charging case and close the cover to turn them OFF, then open the cover, the Earphones will turn on and sync together again.

Phone Calls

If there is an incoming call on your Bluetooth device , the Earphones will pause the playback and ring to alert you of the call . Press either Earphone button twice to answer the call or press and hold either button for 2 seconds to reject the call . To end the call press either Earphone button twice again.

Charging the Case

- > Connect the USB-C charging cable into the socket on the Charging Case .
- > Plug the cable into a standard USB 5V / 1A out put .
- The LED indicator on the case will flash amber while the charging case is charging and green light stay on when fully charged.
- You can also charge your case via wireless charger pad, a fully chage will take around 2.5 hours.

Warning: To avoid damage to the Charging Case, please only use a 5V / 1A charger.

Charging the Earphones

- > Put the Earphones into the Charging Case , The LED on the case stay white while the earphone are charging.
- When the earphone are fully charged, LED on the case will turn off when the earphone are fully charged.

FRONT

Flashing white light: This occurs right after you

press the pairing button on the back of your Monster

verse charging case. It indicates that your earphone

have entered pairing mode and is ready to initiate

Green light when case is empty: If you haven't

inserted your earphone and you still see the green

LED light up, it means your Monster verse charging

case is at full battery and doesn't require any addi-

Amber light when case is empty: This indicates

Amber light when connected to power source:

This shows that your Monster verse case is being

that your charging case isn't at full battery and

Bluetooth connection with a new device.

(Note the Earphones come with a built–in rechargeable battery . Before using them for the first time , we recommend you fully charge the battery . A full charge takes approximately 1 hour) .

 $\ensuremath{\mathsf{WARNING:}}$ The Earphones can only be used with the provided Charging Case .

Specifications:

Model No:

Monster verse TWS

Version

5.0 Bluetooth® chipset

Support profiles: A2DP1.3/HFP1.6/HSP1.2/AVR

Frequency Response: 20Hz-20kHz

Impedance:

16Ω

CP1.6

Driver size: 10mm

Sensitivity: 107dB±3dB

Effective range: up to 10 meters

Earbud battery capacity: 2 x 25mAh

Playing time:

up to 3 hours

Charging case battery capacity:

Earbud charging time: max. 1 hour

approx. 2.5 hours

500mAh

Charging port: Type-C

Input Voltage: DC5.0V / 1A

Charging case's Charging

Green light when connected to power source: This means that your Monster verse case is fully charged and you can disconnect it from the power source.

Flashing amber light: If you're one of those unlucky people to come across this status light on your case, don't freak out. It simply means you've encountered a pairing error and you'll have to reset your earphone by holding the pairing button on the back and redo the pairing process.

True Wireless Earphones



Operating instructions

Includes:

- > True wireless earphones
- > Charging case
- Charging cable (Type-C)
- Small and Large eartips



5107/7

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.