


eMark PenUser Manual

Model:EMK-P1

http://www.clixup.cn



1. Product Components

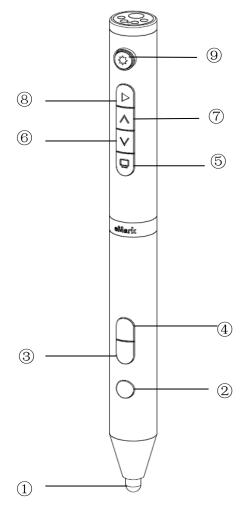

- 1 Nib
- ② Shortcut

Button(SupportingWindows

10)

- ③ Eraser
- ④ Color Change
- 5 Black Screen
- 6 Page Up
- ⑦ Page Down
- ⑧ Playing
- ④ Laser

2. Setting Operation

> Charging

Pls kindly charge in advance for it is not full of power before leave the factory.

Put eMarkPen into thecharging base, power supplying through USB cable ;

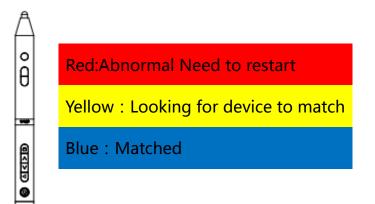


 Image: Complete Complete

 Image: Complete

- Not charging Charging (Front) Charging (Backside)
- eMark Pen charging from 0 to 100 takes about 30 mins to 1 hour
- > Matching

 
Check whether eMark Pen matched or not when LCD display or IWB start, it is matched successfully if the nibs shine; If not matched(no light shine),press button®®simultaneously for 5 seconds; Confirm the matching status through indicator light on nib by clicking on button.



Restarting



If anyabnormal phenomena appears including: unable to match, to connect, or to write etc. To restart the pen by pressing a pin into the hole at top of the pen.



> Shortcut button defining (Only for Windows 10)

User-define method as following:

• "Settings" > "Devices" > "Penand Windows Ink", to do user-defined

settings of the pen.

ŝ	Home	Pen & Windows Ink
Fi	nd a setting \wp	Pen shortcuts
Devices		If your pen has a shortcut button, choose what to do when you press it. You might need to pair your pen via Bluetooth first.
	Bluetooth & other devices	→
ß	Printers & scanners	Click once
Ů	Mouse	Windows Ink Workspace \checkmark
	Touchpad	Sketchpad V
	Typing	Click once to open my Windows Ink Workspace notes even when the device is locked
Ð	Pen & Windows Ink	• Off
₽	AutoPlay	Double-click Windows Ink Workspace
	USB	Screen sketch




> Color Changing

Only certain software supported. Office2013 and above versions need a plug-in to support the functions. Pls download and install the plug-in from our website (http://www.clixup.cn/download/emarkpenaddin)

> Nib Switching

Kindly replace with a new nib from the charging base if it be worn out.

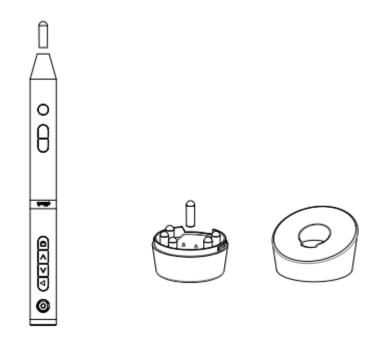

3. Battery Electric Quantity

- eMark Pen battery is built-in design and could not be disassembled.
- Workcontinuouslyfor more than 7 hours after fully charged
- Pls kindly put the pen into charging base when nib flicker to indicate low power.

4. FCC Statement

This equipment has been tested and found to comply with the limits for a Class B



digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.