 



# 1/PLUG-IN

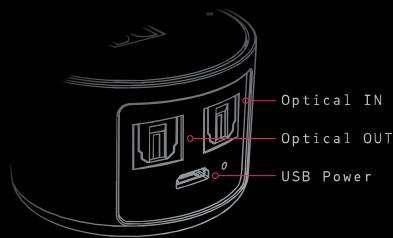

## GET STARTED

- **Power:** Plug the included USB cable into the adapter and the other end into your TV's USB port or equivalent power supply.
- **Optical IN:** Connect the included optical cable from your TV to the optical IN port on the adapter. Confirm your TV is set for optical audio out.
- **Optical OUT:** (For optional passthrough audio) Connect another optical cable from the optical OUT port on the adapter to a supported soundbar or AVR.

 
# 2/CONNECT

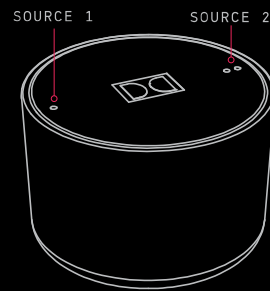

**For first-time use:** When plugged into a power source, Bluetooth Adapter for TV will automatically power on and enter pairing mode. Place your headphones or speaker in pairing mode and they'll automatically connect.

## SOURCE LIGHTS

 - **Steady Light:** Device connected
- **Pulsing Light:** Pairing mode

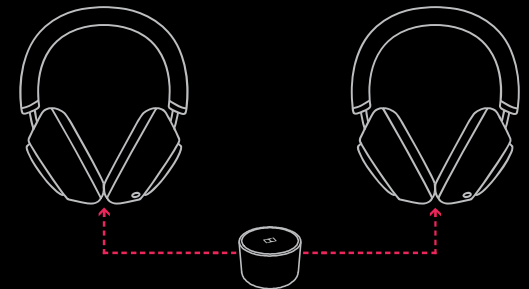

Bluetooth Adapter for TV can connect to two headphones at once, so two people can watch simultaneously.

**Pair additional headphones or speaker:** Press and hold either Source Button for three seconds. The corresponding Source Light will begin to pulse. Place your additional headphones or speaker in pairing mode and they'll automatically connect.

For support, please call +1 866-994-1446 or visit [products.dolby.com](https://products.dolby.com)

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories. © 2018 Dolby Laboratories, Inc. All rights reserved. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth Special Interest Group

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure warning :

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.