

E3说明书:

尺寸:6*10cm 128g铜版纸

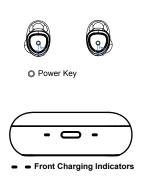

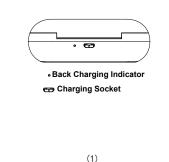



If you have any questions, please feel free to contact us: sales@sixpipes.cn

How to Link Your Earbuds:

Step 1: Power on

Press and hold the power keys of both sides up to 3 seconds until the blue indicators shine for 1 second, with the voice prompt of "Power on".

Step 2: Pairing

Stereo Mode

When both sides of earbuds are on, the left and right will connect each other automatically within 2 seconds. Then the right earbud (main earbud) will flash in blue and red alternatively with the voice prompt of "Pairing".

Step 3: Connect

Search and select "E3" on your smart phone to finish your settings, with the voice prompt of "Connected". Step 4: Power off

Put back in the case, the earbuds will power off and charge automatically. (Or press and hold power keys of both sides up to 5 seconds until the red indicators shine for 1 second, with the voice prompt of "Power

Notice: If the battery of the charging case is low, when put back into the case, the earbuds can NOT power off automatically.

Reset: While the earbuds are charging, press and hold the power key of both sides up to 5 seconds to reset the earbuds, which can solve most of the connecting issues.

(2)

Mono Mode

How to Link Your Earbud:

Step 1: Power on and Pairing

Press and hold one side of the power key up to 4 seconds until the indicator flashes in blue and red alternatively with the voice prompt of "Pairing".

Step 2: Connect

Search and select E3 on your smart phone to finish your settings, with the voice prompt of "Connected". Step 3: Power off

Press and hold the power key up to 5 seconds until the red indicator shines for 1 second, with the voice prompt of "Power off".

Note: In the mono mode, when put back into the case, the earbuds can NOT power off automatically.

1. Answer / End a Call

Tap the power key to answer a coming call; Tap the power key to end a call when you are on the phone.

2. Reject a Call

Press and hold the power key up to 2 seconds to reject a coming call.

3. Call Redial

Double-tap the power key to redial the last call when track remains paused.

Volume Control

You can only adjust the volume through your cell

(3)

Note: Only the right microphone works on the phone.

Audio Playing

1. Tap the power key to play or pause the track.

2. Double-tap the power key to the next track. 3. Triple-tap the power key back to the previous

track.

4. Adjust the volume through your smart phones.

Voice Assistant

Press and hold the power key of the earbud for 1 second to activate the voice assistant (Siri or others). Note: please make sure your mobile device supports this function.

Charging

It takes 1 hour to charge the earbuds fully. When the earbuds are charged, the FRONT indicators of the case will turn off.

It takes 2 hours to charge the case fully. When the case is charged, the BACK indicator of the case will stop flashing and keep on.

Battery Indicator

The feature of battery indicator is that the charging case indicates how much battery is remaining. This is a very useful function especially when you wonder if you have to charge the case. One of the following actions will trigger this function:

1. Pick up the earbud from the case;

2. Put back the earbud in the case;

3. Charge the case or earbuds. The flashing times of the BACK indicator correspond to different battery levels: flash 1 time: 0-25%

flash 2 times: 25%-50% flash 3 times: 50%-75% flash 4 times: 75%-100%

Specification Version: 5.0

Support HFP, HSP, AVRCP Dimension: 20 x 16 x14.5mm

Support iPhone/iPad/Huwei Battery Indication Range: 10M

Water Proof: IPX6 **Battery Capacity** Earbuds: 45mAh

Charging Case: 500mAh Talk/Music time: 2.5-3H Voice Assistant: Siri

Questions and Answers

Q: Why can't left and right earbuds connect to each other? Why can't earbuds connect to some devices? A: Reset your earbuds and try again, which can solve most of connecting issues. (Reset: while the earbuds are charging, press and hold the power keys of both sides up to 5 seconds.)

Q: Why does audio signal delay?

A: First of all, latency may be caused by the earbuds or the smart phones. Some smart phones are not compatible well with wireless headphones. If you find audio signal delays, please check your

(5)

smart phones if the same thing happened to other wireless earbuds

Q: Why does signal interruption occur in some situations, such as along railway, in airport?

A: Generally, there are plenty of cables underlying in the place mentioned above, which are more likely to produce electromagnetic interference and result in signal interruption.

Notice: it is healthy to reduce your exposure in the electromagnetic radiation.

Q: When put into the charging case, why the earbuds do not power off automatically?


A: If the battery of the charging case is low, when put back into the case, the earbuds can NOT power off automatically.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

SIXPIPES

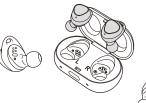

Bluetooth Earphone

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.