

NUVELON<sup>N</sup>

FLARE

LANTERN SPEAKER



IPX5



NO CORDS  
APPS or WiFi



LED LIGHT  
SHOWS



PLAYS  
UP TO 10hrs

**STOP!**

For questions or  
tech support call  
**1-866-652-8064**

Please do not  
return to  
store

USER GUIDE

## **IMPORTANT SAFETY INSTRUCTIONS**

1. **Read all instructions** and save them for personal reference in the future.
2. **Follow all directions** for operating the product.
3. **Heed all warnings** on the product and in the operation instructions.
4. **Clean with a dry cloth only.** Always unplug the product from any power source before cleaning.
5. **Do not use third-party attachments** or non-recommended accessories with this product.
6. **Do not place product on an unstable surface**, such as a cart, stand, tripod, table, etc. Unstable surfaces may cause the product to fall and cause serious injury to people and serious damage to the product. Follow all manufacturer instructions for mounting and accessories.
7. **Do not block or cover ventilation slots.** Openings in the product cabin ensure reliable operation and prevent overheating. Avoid placing on beds, sofas, and rugs, or mounting on racks or bookcases, unless proper ventilation is provided.
8. **Do not use plug incorrectly.** The product may come with a polarized, alternating-current line plug (one blade is wider/larger than the other). This is a safety feature: the plug will only go into outlet receptacles one way. Do not force the plug. If the plug does not fit, contact your electrician to replace the outlet.
9. **Prevent power cord hazards.** Route cords to avoid walking on them or pinching them, especially at plug ends and connection points to the product & power outlets.
10. **Unplug power cord when not in use.** The product should not be plugged into a power source when not in use for long periods of time.
11. **Do not use this product near bodies of water.** The product is not waterproof and cannot be fully submerged in water. Power cords and electric currents should never be exposed to water.
12. **Do not set up near heat sources.** Avoid radiators, stoves, heat registers, amplifiers, and other devices that produce heat. Avoid long exposure to sunlight and high temperatures.
13. **Refer all service to qualified personnel.** If the product becomes damaged during use or encounters a malfunction, contact qualified service personnel. Do not attempt to service yourself.

# TABLE OF CONTENTS

<b>1. QUICK START GUIDE</b>	<b>4</b>
<b>2. OPERATING INSTRUCTIONS</b>	<b>6</b>
CHARGING	6
SYNCING SPEAKERS	7
SYNC TIPS AND HELP	8
BLUETOOTH PAIRING	9
AUXILIARY INPUT	10
LIGHT SHOW GUIDE	10
<b>3. WARRANTY &amp; CUSTOMER CARE</b>	<b>12</b>

## MODEL: NF15A1-BTM

### SPECIFICATIONS

**Speaker -**  
**Total Output:** 15 Watts  
**Range:** Class 2, up to 33 ft (10 m)  
**Li-ion Rechargeable Battery :** 6600mAh  
**Speaker Driver:** 3.0 inch (x2)  
**Passive Bass Radiator:** 3.5 inch (x2)  
**Charging Time:** Approx. 3 hours  
**Battery Life:** Approx. 7-10 hours  
**Bluetooth version :** 4.2  
**Compatibility :** Bluetooth®2.0 or above device with A2DP/AVRCP  
**Auxiliary input:** 3.5mm  
**Operating temperature range:**  
 32°F - 104°F (0°C - 40°C)  
**Operating humidity range:**  
 40 - 90% RH  
**Storage temperature range:**  
 -13°F - 158°F (-25°C - 70°C)  
**Water resistance:** IPX5 (splash resistant)

### CARE AND STORAGE

Store the speaker in a cool, dry place away from direct sunlight.  
 Always turn speaker off when not in use.  
 Do not use harsh chemicals or solvents to clean speaker surfaces. Wipe with a soft, damp cloth.  
 Never spray chemical cleaners or any liquid into the speaker grilles or control panel areas.

### OUTDOOR OPERATION

1. Keep away from direct rain.
2. Place on a firm, stable surface.
3. Never submerge the speaker or place on floating pool accessories.
4. Keep speaker out of direct sunlight.
5. Do not charge speaker near water.

 
U.S. Patents Pending

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Nuvelon and Forever Gifts, Inc. is under license.

# 01


## QUICK START GUIDE

### 1. Unpack the Box

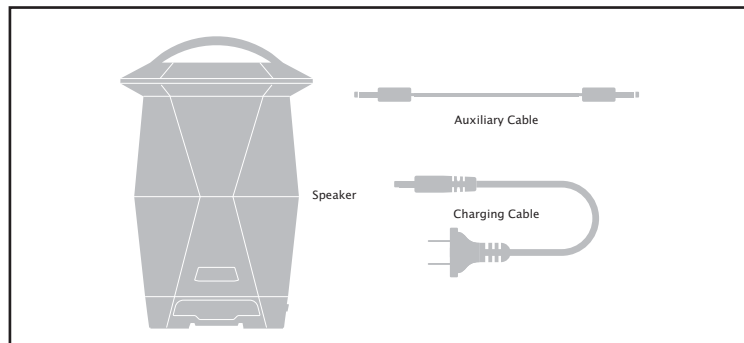


### 2. Speaker Control Panel and Ports
 
#### FUNCTION AND DISPLAY PANEL BUTTONS

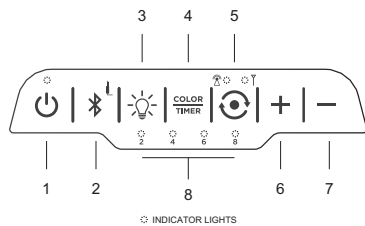


- 1. POWER ON/OFF
- 2. BLUETOOTH Pair/Wake/Disconnect
- 3. LIGHT SHOW ON/OFF + BRIGHTNESS CONTROL
- 4. LIGHT SHOW + TIMER SELECTION
- 5. SYNC (requires additional speakers)
- 6. VOLUME UP
- 7. VOLUME DOWN
- 8. TIMER INTERVAL INDICATOR

#### RELEASE COVER TO ACCESS PORTS

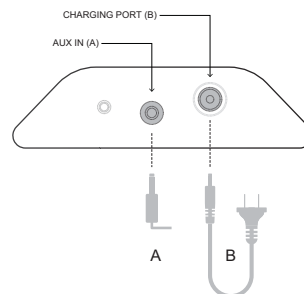 


**NOTE:**  
TO PREVENT WATER  
ENTRY ALWAYS KEEP  
COVER TIGHTLY CLOSED

### 3. Charging and remaining charge level indicators

 

 2 fast flashes indicates speaker is charging



Solid red light indicates speaker is charged



3 fast flashes indicates low charge level

**NOTE:**  
CHARGE SPEAKERS FULLY  
BEFORE USE  
(approx. 3 hours)

## 4. Syncing your Speakers

1 TURN ON FIRST SPEAKER

2 TURN ON REMAINING SPEAKERS

3 PRESS & HOLD FIRST SPEAKER SYNC BUTTON

4 PRESS SYNC BUTTON ON ALL OTHER SPEAKERS TO SYNC (one by one)



hold until both receiver and transmitter lights flash



hold until receiver light turns solid amber

NOTE: When speakers are synced transmitter light and receiver light will be solid



Transmitting speaker (first speaker turned on)



Receiving speaker(s)

For detailed sync instructions see [Section III](#) on Page 7 of this guide

## 5. Pairing your Device

NOTE: If you synced speakers, you can only pair your device with the first speaker you turned on

TO PAIR (enable Bluetooth on your device)

PAIRED



If BT indicator is not flashing quickly, press and hold until it flashes quickly. Select "Nuvelon FLARE" from devices list



Solid light + chime indicates pairing successful

DISCONNECT PAIRED DEVICE

BLUETOOTH WAKE-UP



To disconnect user, press BT button 4-5 secs. (chime will sound when device is disconnected)



If your device is out of BT range for >5 mins, and disconnects, press BT button to pair again

## 6. Light Show Selections and Timer

See Section B. on page 11 for more details

**SOLID COLOR OPTIONS:** Red/Blue/Aqua/Amber/Green/Pink/Purple/White

**COLOR-CHANGING OPTIONS:** Color-changing Fade / Color-changing Pulse

LIGHT SHOW / BRIGHTNESS BUTTON

LIGHT SHOW SELECTIONS (Lantern must be ON)



Press to turn lantern ON, OFF, and cycle through brightness settings - 20%, 40%, 60%, 80%, 100%



 
Press and release COLOR/TIMER button to cycle through light show selections

**TIMER:** 1. Press and HOLD the COLOR/TIMER button. 2. When the desired timer interval lights up, release the button. To change, repeat steps 1 and 2.


# 02

## OPERATING INSTRUCTIONS


### I. REVIEW THE FUNCTION PANEL AND PORTS

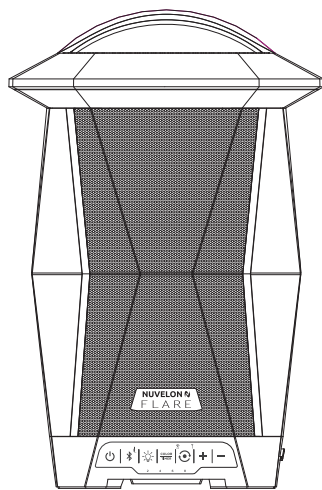


FUNCTION AND DISPLAY PANEL BUTTONS

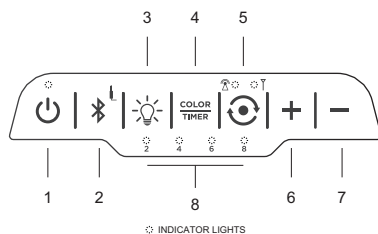 

 1. POWER ON/OFF
2. BLUETOOTH Pair/Wake/Disconnect
3. LIGHT SHOW ON/OFF + BRIGHTNESS CONTROL
4. LIGHT SHOW + TIMER SELECTION
5. SYNC (requires additional speakers)
6. VOLUME UP
7. VOLUME DOWN
8. TIMER INTERVAL INDICATOR

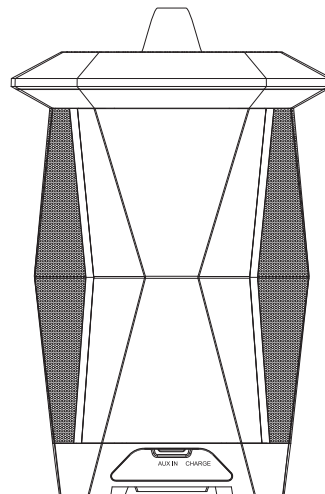

RELEASE COVER TO ACCESS PORTS

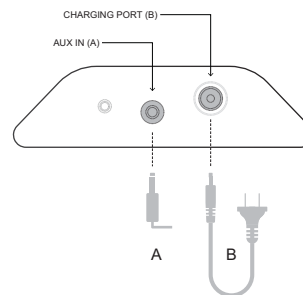 

**NOTE:**  
TO PREVENT WATER ENTRY ALWAYS KEEP COVER TIGHTLY CLOSED

### II. CHARGE YOUR SPEAKERS

**NOTE:** speakers must be fully charged before use

1. Release port cover and plug power adapter pin (B) into charging port
2. Plug power adapter into power outlet
3. Charge until indicator light turns solid red and remove charging cord (full charge is reached after approximately 3 hours of charging)

 
## Charging and remaining charge level indicators

### CHARGING



2 fast flashes indicates speaker is charging

### CHARGED



Solid red light indicates speaker is charged

### LOW POWER



 
3 fast flashes indicates low charge level

## III. SYNCING SPEAKERS


**NOTE: requires 2 or more Nuvelon FLARE speakers**

[If you are not syncing any speakers go directly to Step IV. (A) on page 9]

### 1 TURN ON FIRST SPEAKER

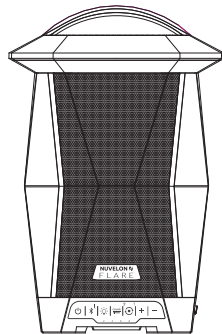

### 2 TURN ON REMAINING SPEAKERS

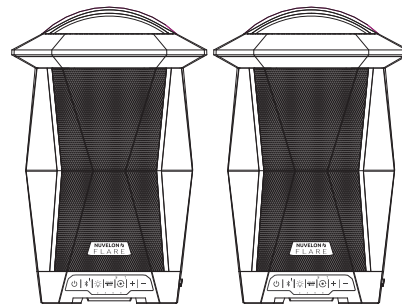 

### 3 PRESS & HOLD FIRST SPEAKER SYNC BUTTON



hold until both receiver and transmitter lights flash

### 4 PRESS SYNC BUTTON ON ALL OTHER SPEAKERS TO SYNC (one by one)



hold until receiver light turns solid amber

VOLUME: Control master volume on device or first speaker, or individually on synced speakers

**NOTE:** When speakers are synced transmitter light and receiver light(s) will be solid



Transmitting speaker (first speaker turned on)



Receiving speaker(s)

If indicator lights are not solid after syncing, or you experience any difficulty syncing your speakers, refer to the "Sync Tips and Help" Guide on the next page.

## SYNC TIPS

**Please note the below tips to enhance your multi-sync experience!**

**1. SPEAKER SYNC SET UP PERIOD IS LIMITED TO 90 SECONDS AFTER TURNING THE FIRST SPEAKER ON.**

Whether you are syncing a small or large number of speakers you may not be able to sync all your speakers within the 90 second time period.

**If this happens, follow these steps to continue syncing:**

- (i) Press the sync button on the first speaker until sync light goes off
- (ii) Follow steps 3 and 4 on Page 7 to continue syncing speakers
- (iii) Press the sync button on any synced speakers that became unlinked

**2. WHEN POWERING SYNCED SPEAKERS ON, DO SO WITHIN 90 SECONDS.**

When you sync speakers they stay synced – meaning when you power synced speakers off they will automatically sync with each other again when powered on, but **ONLY** if you power all your synced speakers on within 90 seconds. **If more than 90 seconds passes between powering on synced speakers, briefly press the SYNC button on the first speaker you turned on to re-engage sync on all linked speakers.**

**3. CHOOSING A LOCATION FOR THE TRANSMITTING SPEAKER.**

**As long as you turn it on first, when the transmitting speaker is powered off, it will also power off all speakers synced to it.** For this reason, position the transmitting speaker in a convenient location where you can easily turn it on and off. (Please note that synced speakers need to be turned on individually.)

**4. CHANGING A TRANSMITTING SPEAKER TO A RECEIVING SPEAKER.**

If you wish to change a receiving speaker to a transmitting speaker: Turn it on first and follow steps 2 – 4 on Page 7 for syncing speakers, but continue to hold the sync button on the first speaker while you press the sync button on the transmitting speaker.

**If you cannot establish sync connection, please contact customer care  
(SEE PAGE 12)**

 


#### IV. **BLUETOOTH PAIRING** (speaker must be powered ON, and Bluetooth must be enabled on your device)

**NOTE:** BLUETOOTH DEVICE AND SPEAKER SHOULD BE IN CLOSE PROXIMITY WHEN PAIRING (~3 ft./1m)

##### **A. ESTABLISHING A NEW PAIRING (single speaker)**

1. When speaker is powered ON for the first time, speaker enters Bluetooth pairing mode automatically (approximately 5 seconds after powering speaker ON) (if Bluetooth light does not flash quickly 5 seconds after powering speaker ON, press and hold BLUETOOTH button until it starts flashing quickly)
2. Enable Bluetooth in your device settings and select “Nuvelon FLARE”
3. Upon pairing, a chime will sound and the indicator light will remain lit

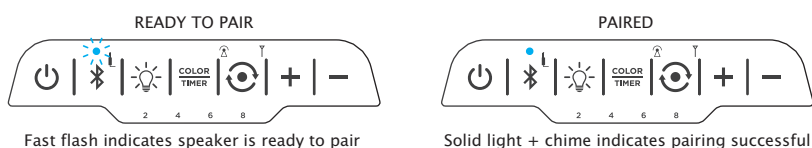

##### **B. ESTABLISHING A NEW PAIRING (2 or more synced speakers)**

 
**⚠️** Pair with the first speaker you turned on (transmitting light will be solid– see Page 7.)

Press **BLUETOOTH** button on first speaker until it flashes quickly, and follow steps 2 – 3 in section A. (ESTABLISHING A NEW PAIRING)

**NOTE:** After syncing and pairing, when speakers are powered ON again, pairing will automatically be established with the first speaker, **but can take up to 60 seconds**

##### **C. DISCONNECT A DEVICE AND PAIR WITH A NEW DEVICE**


1. When speaker is powered ON and last connected device is on and within range, pairing will be established automatically. To pair a new device, follow steps below:
2. Press and hold the **BLUETOOTH** button until the disconnection chime sounds and the Bluetooth indicator begins flashing quickly (about 5 seconds)
3. Follow steps 2 – 3 in section A. (ESTABLISHING A NEW PAIRING)

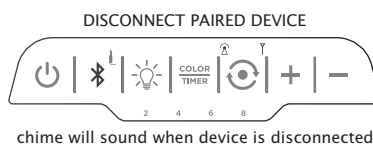

##### **D. WAKE UP BLUETOOTH FROM SLEEP MODE**

To save power, the Bluetooth connection will automatically go into sleep mode if your device stays out of Bluetooth range for more than 5 minutes.

 To reconnect when your device is back within range, press the **BLUETOOTH** button to cancel sleep mode and re-establish pairing connection.

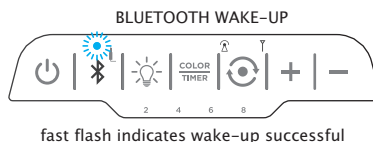


If you cannot pair a device, follow steps in C. above to ensure no other device is paired.  
If you experience difficulty with pairing, please contact customer care (SEE PAGE 12)

## V. AUXILIARY INPUT

 If your device has a 3.5mm audio jack, or is not Bluetooth enabled, you may use the included auxiliary cable to use the speaker without Bluetooth. When used this way, Bluetooth will be disabled, but speaker sync features remain fully functional.

1. Plug one end of the auxiliary cable into the speaker auxiliary port
2. Plug the other end of the auxiliary cable into your device audio jack  
(ensure audio jack is not obstructed by any protective case or accessories)
3. When auxiliary cable is plugged into speaker you will hear an audible chime and the auxiliary indicator will illuminate.

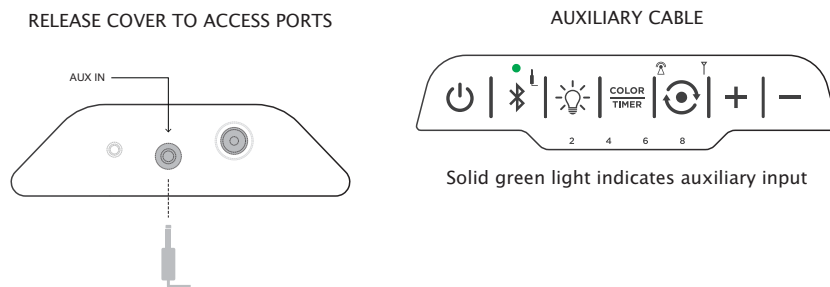


## VI. LIGHT SHOW

**NOTE: Color-changing Pulse feature DOES NOT WORK without playing music!**

By default, the lantern will turn off after 2 hours to extend run time. If you wish the lantern to illuminate for longer, please set the timer (see Section D. on page 11)

### A. LANTERN ON/OFF AND BRIGHTNESS CONTROL

 1. Press the **LIGHT SHOW** button to turn the lantern feature ON
2. Press again to turn lantern feature OFF
3. Each time you press the button again, the brightness of the light increases
4. Press button a total of 5 times to reach maximum brightness, then press again to turn lantern feature OFF  
(Brightness level settings correspond to 20%, 40%, 60%, 80% and 100%)

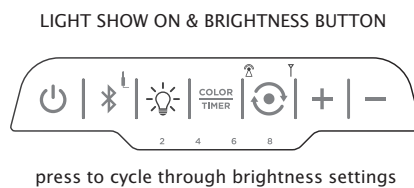

## B. LIGHT SHOW COLOR SELECTION (single speaker)

 
Lantern feature must be on to change light show selections. See A. Above.

### 1. Press and release the COLOR/TIMER button to select the next light color

Light shows are arranged in the following sequence:

1. Red
2. Blue
3. Aqua
4. Amber
5. Green
6. Pink
7. Purple
8. White
9. Color-changing Fade
10. Color-changing Pulse\*

NOTE: Brightness control can only be adjusted for these color selections

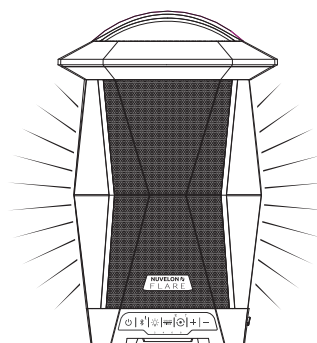

LIGHT SHOW SELECTIONS

\*NOTE: Only works when audio is playing  
(Brightness of color-changing pulse effect varies according to type and volume level of music played)



press and release COLOR/TIMER button

## C. LIGHT SHOW COLOR SELECTION (2 or more synced speakers)

When 2 or more speakers are synced, changing the light show color selection on the first speaker will change the light show on all synced speakers **EXCEPT** the color-changing pulse effect (which cannot sync between speakers)

Light show color/brightness/timer selections can also be changed individually on any synced speaker

## D. TIMER OPTION

### 1. Press and HOLD the COLOR/TIMER button

### 2. When the desired timer interval lights up, release the button

### 3. To change the timer interval, repeat steps 1. and 2.

(Timer will revert to last selected timer interval when speaker is powered on)

You may set the timer to turn off the lantern after 2, 4, 6 or 8 hours

PRESS AND HOLD COLOR/TIMER BUTTON



release when desired interval illuminates

NOTE: By default, the lantern will turn off after 2 hours to extend run time

# 03

## CUSTOMER CARE & WARRANTY SERVICE

### CUSTOMER CARE

**If you have followed the directions in this guide, but your Nuvelon FLARE Lantern Speaker is not operating as expected, please do not return the product to the store where you purchased it.**

Contact our Customer Care team so we may assist you.

Telephone 1-866-652-8064 between the hours of 8:30am to 5:00pm (CST) M – F (except holidays), or email [customercare@nuvelon.com](mailto:customercare@nuvelon.com)

### WARRANTY SERVICE

To obtain warranty service, please contact our Customer Care team.

Telephone 1-866-652-8064 between the hours of 8:30am to 5:00pm (CST) M – F (except holidays), or email [customercare@nuvelon.com](mailto:customercare@nuvelon.com)

**Please keep your original receipt as proof of purchase.**

## Limited Warranty Model NF15A1-BTM

This Nuvelon-branded product, marketed only as new in its original carton to the original purchaser ("Product"), is warranted by Forever Gifts, INC against manufacturing defects in materials and workmanship for a limited warranty period of Ninety (90) Days for Labor and One (1) year for Parts. This Limited Warranty is conditional upon use of the Product as set out in this Limited Warranty.

This Limited Warranty does not apply to store demonstration products, products "marked down" for sale, in "as is" condition, "close outs", "liquidation and clearance sales", "open box", products missing accessories, or no fault found.

Proof of purchase in the form of a Bill of Sale, Receipt or Receipted Invoice is required to certify the Product is within the Limited Warranty period. The Bill of Sale, Receipt or Receipted Invoice must be produced in order to obtain Limited Warranty service.

This Limited Warranty commences on the original date of purchase and is valid only on Products purchased through authorized dealers and used in United States territories by the original Purchaser. To receive warranty service, the Purchaser must first contact Forever Gifts, INC for problem identification and service procedures. The original dated Bill of Sale, Receipt or Receipted Invoice must be produced upon request as proof of purchase. We will repair your product, or if repairs cannot be made we will replace (at our sole discretion) with product of same or similar value. If the Product defect(s) as specified in this Limited Warranty occurred during the Limited Warranty period, we reserve the right to use new or re-manufactured parts to repair the Product. All replaced parts and Products become our property and must be returned to us. Replacement parts and Products assume the remaining original Limited Warranty, or ninety (90) days, whichever is longer.

When returning your Product, freight must be prepaid by you, the original Purchaser, and Product must be shipped in its original packaging, or packaging which affords an equal degree of protection. We will not be responsible for, nor obligated to replace damaged Products shipped in unsuitable packaging.

If the Product is received damaged, it is your responsibility as the consumer to file a claim against the carrier. We will only store the damaged Product for 30 days and reserve the right, at our sole discretion, to dispose of the damaged Product or ship it back to you at your expense after 30 days.

This Limited Warranty covers manufacturing defects in materials and workmanship encountered in normal, and except to the extent otherwise expressly provided for in this statement, noncommercial use of this Product, and shall not apply to the following, including, but not limited to: Damage which occurs in shipment; delivery and installation; applications and uses for which this Product was not intended; altered Product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, hardware, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by us or the manufacturer, which damage this Product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; reception problems and distortion related to noise, echo, interference or other signal transmission and delivery problems. Uninterrupted or error-free operation of the Product is not warranted.

**THERE ARE NO EXPRESS OR IMPLIED WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON US. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS LIMITED WARRANTY IS YOUR EXCLUSIVE REMEDY AS THE CONSUMER. WE SHALL NOT BE LIABLE FOR ANY INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT; EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED FOR THE DURATION OF THIS LIMITED WARRANTY. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any provision contained herein which is found contrary to state or local laws shall be deemed null and void and the remaining provisions shall continue in full force and effect.

**To obtain warranty service call 1-866-652-8064 (see previous page for hours)**

## **FCC WARNING STATEMENT**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.



A lightning flash and arrowhead within an equilateral triangle denotes the presence of insulated "dangerous voltage" within the product's enclosure. The voltage may be of sufficient magnitude to constitute a risk of electric shock to persons who come into contact with it.



 
An exclamation point within an equilateral triangle denotes the presence of important operation & maintenance/service instructions.

## **WARNING**

PREVENT FIRE AND SHOCK HAZARDS. DO NOT USE EXTENSION CORDS OR OUTLETS THAT EXPOSE PLUG BLADES. DO NOT EXPOSE CABLES AND PLUGS TO RAIN OR MOISTURE.

DO NOT ATTEMPT TO PERFORM ANY SERVICING THAT IS NOT INCLUDED IN THE OPERATING INSTRUCTIONS. DO NOT ATTEMPT TO REPLACE THE BATTERY, AS INCORRECT INSTALLATION CAN CAUSE FIRE OR EXPLOSION. FOR SERVICE, CONTACT QUALIFIED SERVICE PERSONNEL.

DO NOT REMOVE COVER OR BACK OF PRODUCT. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. ATTEMPTING TO MODIFY CONTROLS OR PERFORMANCE BEYOND MANUFACTURER SPECIFICATIONS MAY RESULT IN HAZARDOUS EXPOSURE TO RADIATION.

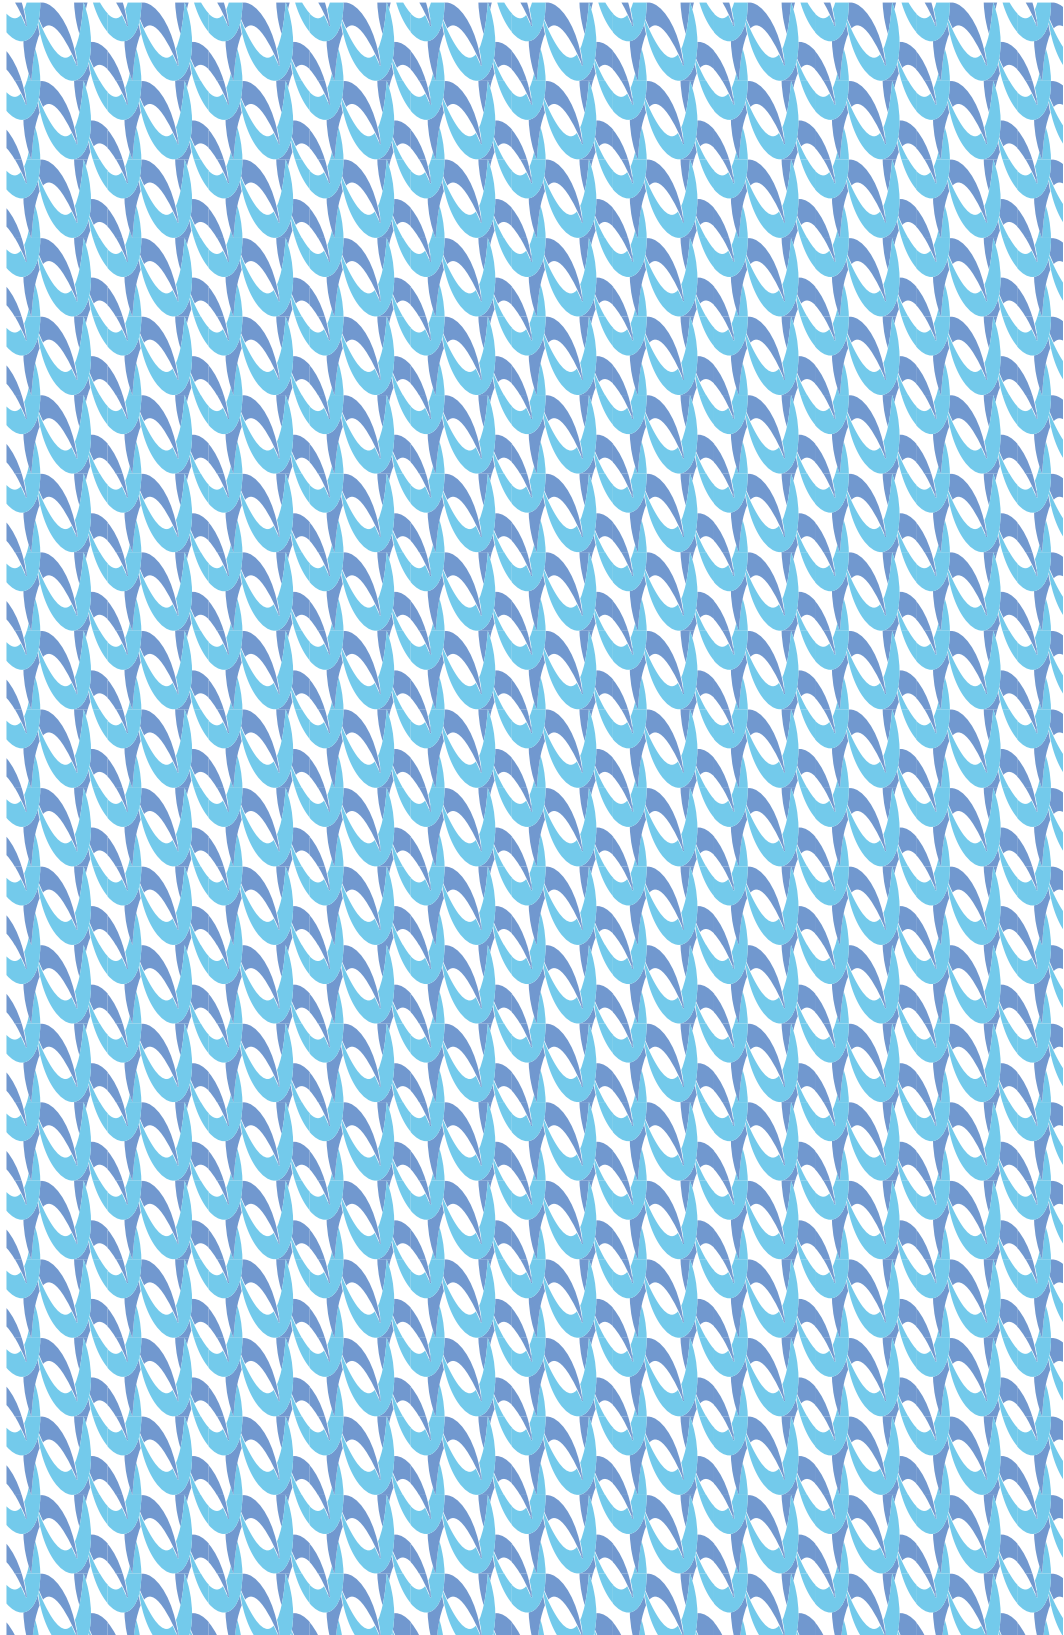

NUVELON<sup>N</sup>

FLARE  
LANTERN SPEAKER

**visit us at [www.nuvelon.com](http://www.nuvelon.com)**

Forever Gifts, INC. 618 N. Great Southwest Pkwy., Arlington, Texas 76011, U.S.A.