


Button	Description
	Switch on the tape light.
	Switch on the tape light.
	Select from 7 single colors and 1 multi color options.


Button	Description
	Press Once: Fade Selected Color. Press Twice: Fade All Available Colors.
	Press Once: Fade Selected Color. Press Twice: Strobe All Available Colors.
	Press Once: Add Sparkle to Selected Color. Press Twice: Add Sparkle to All Available Colors.
	Press Once: Pixelate Selected Color. Press Twice: Pixelate All Available Colors.
	Automatically Cycles Through All Functions.

Button	Description

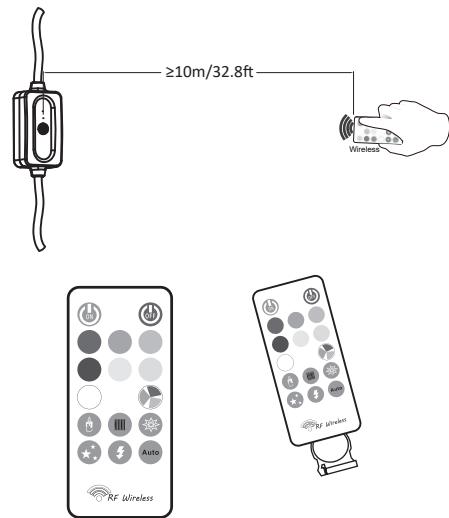

The tape light can also be controlled using the in-line controller attached to the power cord.

Button	Description
	Press the button to toggle through all color options and functions listed above. Press and hold to turn the product OFF.

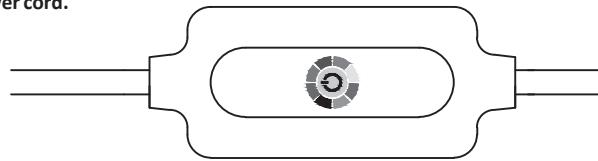

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.