小米生态链产品包装图纸

供单位

尺寸: 100x88mm 材质: 金东太空梭105g无光铜

制作工序:印刷+模切

印刷要求: 正反面印刷, 色相正确、印迹牢固、套印准确、 各色套印不露杂色, 套印误差≤ 0.1mm,

工艺要求: 风琴折, 模切走位≤±0.2mm

要求

Net Weight: 495g Lens Angle: 110° Aperture: F2.1 Resolution: 2304×1296 Operating Temperature: -20°C~ 40°C Video Encoding: H.265 Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4GHz Compatible With: Android 7.0 or iOS 9.0 or higher For further information, please go to www.imilab.com. Support: help@imilab.com EN-07

Press and hold the reset button to remicro SD card will not be deleted.




IMILAB EC3 Pro Outdoor Security Camera




In this instruction manual, images of the device, accessories and user interface are for $% \left(1\right) =\left(1\right) \left(1\right)$

The actual device may differ from the illustrations due to product updates and upgrades. Please refer to the actual device.

illustrative purposes only and should only be used for reference.

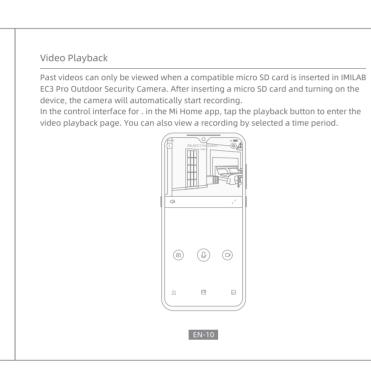

Packing list: IMILAB EC3 Pro Outdoor Security Camera, wall mounting pack, power adapter, waterproofing tape for power/LAN cable, user manual

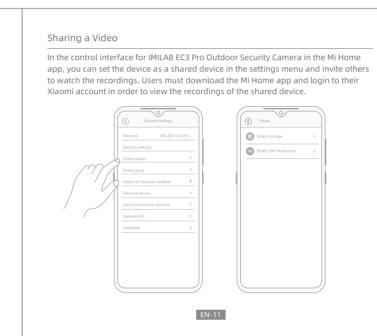

⚠ Note: Please check that the Wi-Fi signal is strong enough before mounting the device.

1. Attach the positioning sticker on the desired installation location. Drill four holes at the


EN-03

follow the instructions. Mounting the device



Cover part of 2-in-1 power and LAN cable with the base plate as indicated.

4. Put the base plate on the wall. Ensure that the 2-in-1 power and LAN cable goes straight down. Secure the base plate by inserting the screws into the expansion nuts.

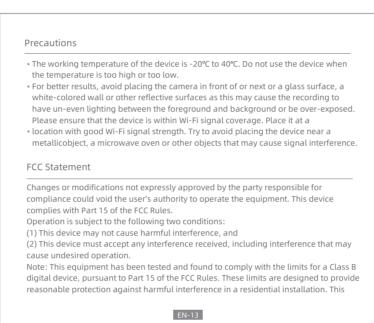

• In order to prevent accidents and injuries, please secure the device firmly onto the

wall as illustrated. The wall on which the device is mounted must have a loading

Do not install the device near a heat source, such as an air-conditioner compress


As the camera can be rotated horizontally, please pay attention to the safe turning

a safety turning distance. Any gap of less than 50mm will result in an obstruction to the camera's movement.

EN-05

distance during installation. Do not install the device at a location where its

air vent of a range hood or air vent of a gas water heater.

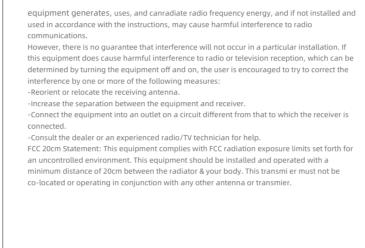

EN-14

Step 1: Insert the power supply cable into the camera's power supply port. Connect the other end of the power supply cable to a power source.

Step 2: When connected to a power supply, the indicator light will show the came

Ensure that the camera is disconnected from the power supply. Use a screwdriver to remove the protective case and expose the micro SD card slot. The contact points of

power supply. Please use a micro SD card from a reputable manufacturer. The recommended read and write speed of the micro SD card is at least U1/Class 10.

EN-06

be disposal with other household wastes through out the EU. To prevent possible rm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environment safe recycling. Adaptor Statements For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible. Hereby, Shanghai Imilab Technology Co., Ltd. declares that the radio equipment type

EN-15

专色: pantone cool Gray 11C

字体: 方正悠黑_506L、方正悠黑_508L

字号: 6.0/7.0pt

商品ID	SKU编码	商品名称	69码	产品型号
		小白智能摄像机 户外云台版N4		CMSXJ42A

纹 理 向 项目名称 IPC042_A02 版本号 20210608 设计师 设计师 设计师

单位 mm

历史版本

版本号: 修改点: 版本号: 修改点:

修改人:

版本号: 修改点: 修改人: 版本号: 修改点: 修改人: 版本号:

修改点: 修改人: