



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating, safety and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT AND FULLY INSERT.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The rating information is located at the bottom of the apparatus.

SURGE PROTECTORS: It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all Instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the

- manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.
16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
17. **CAUTION:** To reduce the risk of fire or explosion, do not expose batteries to excessive heat such as sunshine, fire or other heat sources.



- 1) Warning: Avoid sharp corners on the lower stand bar – corners will cut.
 - 2) Use product when fully assembled.
 - 3) Use of product requires adult supervision for children under the age of 7.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Sound Bar Operation Instructions

Dear customers:

Thanks very much for your attention on and trust for our products. We are honored to provide you a set of high-quality multimedia audio system. Improper use of the product may cause danger or unnecessary trouble. For sake of better use of the product, please read this Manual carefully before using the product.

I Attentions

- ★ Place this machine in a cool, dry and clean place free from vibration. Do not put any object such as vases full of liquid on the machine.
- ★ Serious collision may damage the machine; please handle with it carefully.
- ★ Do not open the housing or try to change or repair any circuit of the machine, otherwise the warranty for the product will become invalid automatically.
- ★ Cut off the power before unit connecting or disconnecting.
- ★ To protect the cables, please hold the connector when connecting or disconnecting cables instead of holding them directly.
- ★ Use only soft and dry cloth to clean the machine. No diluent or other similar liquid can be used to clean the machine.



II Product Features

- ★ Adjustment mode: Volume +/-key
- ★ Audio input: binaural input USB, LINE input and Bluetooth input

III Technical Parameters

- ★ Output power: 10W
- ★ Loudspeaker unit: 2" × 2
- ★ Frequency range: 50Hz~16KHz
- ★ SNR: ≥79dB
- ★ Dimension of loudspeaker box: marked on the packing box

Sound Bar Operation Instructions

IV Troubleshooting

Troubles	Troubleshooting
No power supply	Check whether the small plug of the power source adapter is connected to the main unit or whether power source plug is connected
No sound	Check whether the volume is turned to the minimum
	Check whether the Mute key is turned on
Remote control does not work	Check whether the battery power is low; if yes, replace the battery
	Check whether the remote control receiver on the main unit is sheltered
No sound when Bluetooth is connected for the first time	Check whether Bluetooth is paired with the machine



- **If the trouble cannot be resolved after the above checks, contact a qualified technician to check and repair the machine rather than overhauling it by yourself.**

Package List

1. Loudspeaker, 1 pcs
2. Audio signal input cable, 1 pcs
3. User's Manual, 1 pcs
4. Wall-mounted accessories, 1 set

Sound Bar Operation Instructions

Warning

	Warning High Voltage Only professional serviceman can open the rear housing	
<p>Warning: High voltage, do not open it.</p> <p>Electric shock risk: Do not open the cover or rear housing. Repair or other operation must be conducted by professional.</p>		



There is uninsulated “dangerous high voltage” in the machine. To prevent electronic shock, do not remove the cover or the rear plate by yourself.



The replacement of parts and accessories with this mark in the machine must be conducted as required. There is no components that can be repaired by users, so entrust a qualified serviceman for the check and repair.








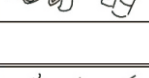



This product is only applicable to be used in the environment under the elevation of 2000m, otherwise there may be potential safety hazards.



This product is only applicable to be used safely in non-tropical climates, otherwise there may be safety risks.

Warning: In case liquid or foreign object enters the machine, stop using it and turn it off immediately and then cut off the power.

1		1. Warning: There is uninsulated “dangerous high voltage” in the machine. To prevent electronic shock, do not remove the cover or the rear plate by yourself.
2		2. Keep this machine away from direct sunlight.
3		3. Install it in clean and dry place.
4		4. Disconnect the power cable from the socket if the machine is idle.
5		5. When disconnecting the power cable, withdraw the plug from the socket rather than withdrawing or pulling the cable.
6		6. Fix the machine firmly and do not place other objects on it.
7		7. Cleaning precautions: Clean the machine with clean and soft cloth. Mild detergents can be used to moisten the cloth to remove stubborn dirt. Do not use volatile chemicals such as benzene or paint thinners for they may damage machine appearance.
8		8. Do not block the vents of the machine, otherwise it may get overheated.
9		9. Do not place vessels full of liquid on or around the machine

Sound Bar Operation Instructions

Product Features:





- Support Bluetooth
- Digital volume control
- Reception range of Bluetooth: 10m
- 3.5mm audio input
- High-quality music reception

Accessories:

- Audio cable
- User's Manual
- Wall-mounting rubber column
- Wall-mounting screw

Power/mode: Bt/Line/usb/radio

LED Indicator


Indicator	Status
Red 	Headset
Red 	Bluetooth
Red ^{USB} 	USB
Red 	FM

Fixing Way

We recommend installation by professionals.

Sound Bar Operation Instructions

Descriptions of Input Interface and Main Unit Button (Optional)

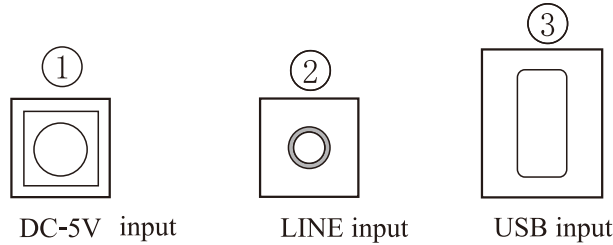

- ① DC 5V power source input interface
- ② LINE/headset input interface
- ③ 1G-32G USB input interface

Panel marks	Descriptions	Panel marks	Descriptions
Standby/MODE	Start up or shut down the machine Cyclic switching of headset, Radio Bluetooth and USB audio input	▶/MUTE	Pause/Mute
Volume+/PREV	Increase volume/PREV	Volume-/NEXT	Decrease volume/NEXT

Remark: The above functions may differ from different models, and are for reference only.

USB

A USB flash disk is needed (excluded in the list of accessories)

1. Insert the USB flash disk in the USB interface.
2. Press Sound Source Switching key repeatedly or the USB key on the remote control to switch to USB mode, then the purple indicator will keep on or show **USB**.
3. Ensure that your USB flash disk is stored with MP3 audio.
If your USB flash disk is stored with MP3 audio, you can play it with the machine.
4. USB devices must be operated with the remote control. : pause/ play; : previous track and next track; **Replay:** replay single track by pressing Replay key once or all tracks by pressing Replay key twice.

Sound Bar Operation Instructions

LINE IN

A 3.5 audio connecting cable is needed (included in the list of accessories)

1. Connect one end of the 3.5 audio connecting cable to the audio output interface and the other end to the 3.5 LINE input interface of the machine.
2. Press the Sound Source Switching key repeatedly or the LINE key on the remote control to switch to LINE mode, then the green indicator will keep on or show **LINE**.
3. Make sure that the audio setting of sound source is in "Connecting to Sound Equipment" status.
4. Play your sound source equipment with the machine.

Bluetooth

Initial pairing of Bluetooth

1. Press Sound Source Switching key repeatedly, or the Bluetooth key on the remote control to switch to Bluetooth mode, then the blue indicator will blink or blink **BT**.
2. Turn on the Bluetooth of your device and search **ET018** and then click pairing. If the pairing is successful, the machine will make a prompt sound to indicate that your device can automatically connect to the machine.
3. Ensure that your Bluetooth device has been paired with the machine.
4. Play your sound source equipment with the machine.
5. If initial pairing succeeds, your device can automatically connect to the machine in the following operations after the Bluetooth of your device is turned on.
6. If your device cannot automatically connect to the machine, cancel the pairing and repeat steps 1/2/3/4.