## 157g铜版纸 双面彩印 风琴页折页



**Sound Optimized for You** H300 Wireless Headphones

### Contents

- 1. What's in the Box 2. Schematic 3. Wearing 4. Bluetooth Connection
- Dongle Connection LED Indicators 7. Button Control
- 8. Turn on/off Microphone Charging the Battery 10. Troubleshooting 11. Specification


12. Warning

### What's in the Box





# Schematic

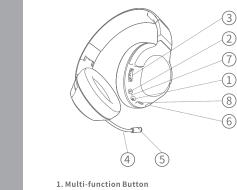


Power On/ Off Button

Music/ Call Control Button

Previous/ Next Track Button

Switch Between Dongle / Bluetooth Mode Microphone Mute/ On

### 3. Volume Up/ Down 4. Microphone Pole 5. Microphone LED Indicator 6.3.5mm Audio Jack

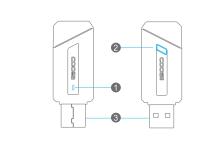

1. LED Indicator 2. Multi-function Button 3. USB Port

7. Bluetooth LED Indicator

8. USB Charging Slot

## Wearing



## Pairing and Connecting with a Smartphone



Before starting the operation, make sure of the following: The smartphone is placed within 1m (3 feet) of the headphone.

 The headphone is charged sufficiently. 1. Press and hold the **(4)** button on the headphone for about 3 seconds until the red and blue light flash alternately, you will hear the voice guidance say, "power on".

Note: Switch the "Bluetooth mode" and the "Dongle mode" by long press the W button for 3 seconds, you will hear the voice guidance say "Bluetooth mode" or "Dongle mode".

The headphone and smartphone are paired and connected with each other. You will hear the voice guidance say, "connected" .

### Pairing and Connecting with a Computer/Laptop which Built-in Bluetooth Function (Windows)

The operation to register the device that you wish to connect to



- Your computer has a Bluetooth function.
- The computer is placed within 1 m (3 feet) of the headphone.
- The headphone is charged sufficiently. The operating instructions of the computer is in hand.

Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.

1. Press and hold the **@** button on the headphone for about 3 seconds until the red and blue light flash alternately, you will hear

Note: Switch the "Bluetooth mode" and the "Dongle mode" by long press the M button for 3 seconds, you will hear the voice guidance say "Bluetooth mode" or "Dongle mode". 3. Open the Bluetooth function on your computer and find H300 on the list.

other. You will hear the voice guidance say, "connected".

### Pairing and Connecting with a Computer (Mac)

macOS (version 10.10 or later)



1. Press and hold the 🕔 button on the headphone for about 3 seconds until the red and blue light flash alternately, you will hear the voice guidance say, "power on". Note: Switch the "Bluetooth mode" and the "Dongle mode" by long press the hutton for 3 seconds, you will hear the voice guidance say "Bluetooth mode" or "Dongle mode".

--Select [System Preferences] - [Bluetooth] from the task bar in the lower right part of the screen.

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the

- Increase the separation between the equipment and receiver

user's authority to operate the equipment.

Label and compliance information:

Before starting the operation, make sure of the following:

The computer is placed within 1 m (3 feet) of the headphone

• Depending on the computer you are using, the built-in

Bluetooth adaptor may need to be turned on. If you do not know how to turn on the Bluetooth adaptor or are unsure if your computer has a built-in Bluetooth adaptor, refer to the operating instructions supplied with the computer.

If the computer speaker is set to the "OFF" mode, no sound is heard from the headphone.

• Your computer has a Bluetooth function.

The headphone is charged sufficiently.

• Set the computer speaker to the ON mode.

Computer speaker in the ON mode

 System Profesorors
 System Profesorors
O Search General Desktop & Dock Dock Control Language Security Specifies

device for the computer:



If Passkey (\*) input is required, input "0000". other. You will hear the voice guidance say, "connected". -- Click the speaker icon in the upper right part of the screen and

Additional testing, Part 15 Subpart B disclaimer

System Preferences. Click Input, and select H300 headphone. • B C 3 EE Bank Q Section Sand Thess Output Selects & Selects for seand lapoli.

Select a decise for seand lapoli.

Top

Top

Manual Microphore

Buth 81

1007

Charterer

Charter

🤲 🤝 📢 33% 🗈 🐧 ABC Fri Jan 21 11 54 AM Q

Internal Speakers

✓ H300

Sound Preferences...

## Mode (Windows)



Before starting the operation, make sure of the following: • The computer is placed within 1 m (3 feet) of the headphone.

The headphone is charged sufficiently.

1. Plug the COOSII USB Dongle into your computer 2. Press and hold the **(b)** button on the headphone for about 3

guidance say "Bluetooth mode" or "Dongle mode".

The computer has a USB slot

seconds until the red and blue light flash alternately, you will hear 3. Make sure the headphone is in Dongle mode.
Note: Switch the "Bluetooth mode" and the "Dongle mode" by long press the wolce button for 3 seconds, you will hear the voice

connected with each other within 3-10 seconds, you will hear the voice guidance say, "connected".

### LED Indicator on Headphone

Red light blinking triple for every 5 seconds

Blinking blue and red Low battery

LED Indicator on USB Dongle	
Indicator activity	System state
Solid blue	Connected
Blinking blue and red	In pairing mode

### LED Indicator on Microphone Pole

	Indicator activity	System state
	Solid blue	Microphone on
	No light	Microphone off

### **Button Control** \* MFB= multi-function button

Indicator activity System state In pairing mode
Power on
Charging Move the roller up and down
Press the MFB once
Double press the MFB While on a call, press the MFB on
Double press the MFB
Triple press the MFB







Turn on/off Microphone Short press **()** button for turn on/off the microphone, you will hear the voice guidance say, "microphone on" / "microphone mute".



### Charge the Headphones

1. Plug the small end of the USB cable into the micro-USB connector on the right earcup.

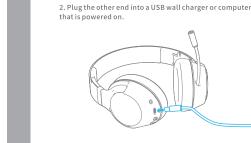

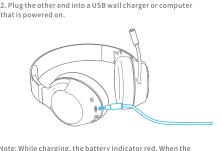

battery is fully charged, and the indicator (red) turns off automatically.

If you could not resolve your issue, see the table below to identify symptoms and solutions to common problems. If you are unable to resolve your issue, contact COOSII customer service.

Headphones don't connect with your mobile device	Check the state of the status indicators.
	On your mobile device: Disable the Bluetooth feature and then re-enable. Delete your H300 wireless headphones from the Bluetooth list on your device. Connect again.
	Move your mobile device closer to the headphones and away from any interference or obstructions.      Connect another mobile device.
No sound	Power on the headphones and charge the battery.
	• Increase the volume on your

### Common solutions

Headphones don't Charge the battery power on

n't ur	Check the state of the status indicators.
	On your mobile device:     Disable the Bluetooth feature and then re-enable.     Delete your H300 wireless headphones from the Bluetooth list
	on your device. Connect again.  Move your mobile device closer to the headphones and away from any interference or obstructions.  Connect another mobile device.
	Power on the headphones and charge the battery.

## Move your mobile device closer to

the headphones and away from any interference or obstructions. Use a different music source.

	If two mobile devices are connected,     pause your other device first.
	• If two mobile devices are connected, move the devices within range of the headphones (30 ft. or 10 m).
sound quality	Use a different music source.
	Connect another mobile device.
	Move your mobile device closer to the headphones and away from any interference or obstructions.
ery won' t	Secure the ends of the USB charging

• Try another charging source. If your headphones have been exposed to high or low temperatures, let the headphones return to room temperature and try charging again.

pecification		
Model Name	H300	
Impedance	32Ω±15%	
Frequency Response	20 - 2000Hz	
Sensitivity	114dB±3dB	
Bluetooth Version	V5.0	
Drive Unit	40mm	
Operation range	33 feet	
Charging time	≥2 hours	
Plustooth protocol	A2DD/AVDCD/SMD/HED	

• Do NOT use the headphones at a high volume for any extended period.

- To avoid hearing damage, use your headphones at a comfortable, moderate volume level.

- Turn the volume down on your device before placing the headphones in/on your ears, then turn the volume up gradually until you reach a comfortable listening level.  $\bullet$  Do NOT use your headphones while driving for phone calls or any other purpose.

 $\bullet$  Do NOT use the headphones if they emit any loud unusual noise. It this happens, turn the headphones off and contact COOSII customer service.  $\bullet \ Remove \ headphones \ immediately \ if you \ experience \ a \ warming \ sensation \ or \ loss \ of \ audio.$ 

cification	
odel Name	H300
pedance	32Ω±15%
equency Response	20 - 2000Hz
ensitivity	114dB±3dB
uetooth Version	V5.0
ive Unit	40mm
peration range	33 feet
narging time	≥2 hours

Bluetooth protocol A2DP/AVRCP/SMP/HFP Please read and keep all safety and use instructions. WARNINGS/CAUTIONS

(1) This device may not cause harmful interference, and

the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This may cause harmful interference to radio communications.

## Contains small parts which may be a choking hazard. Not suitable for children under age 3.



 To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help. • Do NOT make unauthorized alterations to this product. • Do NOT expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like). approved by the party responsible for compliance could void the

subject to the following two conditions:

FCC ID label on the final system must be labeled with "Contains FCC ID: 2APBQ-CSWL" or "Contains transmitter module FCC ID: 2APBQ-(2) this device must accept any interference received, including Contact Shenzhen Kesi E-commerce Co.,Ltd will provide stand-alone modular transmitter test mode. Additional testing and certification may be necessary when multiple modules are used in a host.

FCC ID: 2APBQ-CSWL Tested by UL62368-1 (UL Standard for Safety Audio/video, information and communication technology equipment – Part 1: Safety requirements)

Company: Shenzhen Kesi E-commerce Co.,Ltd Address: 15/F Henglu E-time, No.159 Pingji Rd North, Hehua Community, Pinghu Longgang, Shenzhen,China Email: service@coosii.com

Product Name: Wireless Headphones Model No.: H300

COOSII

service@coosii.com