
FRONT WHEN FOLDED

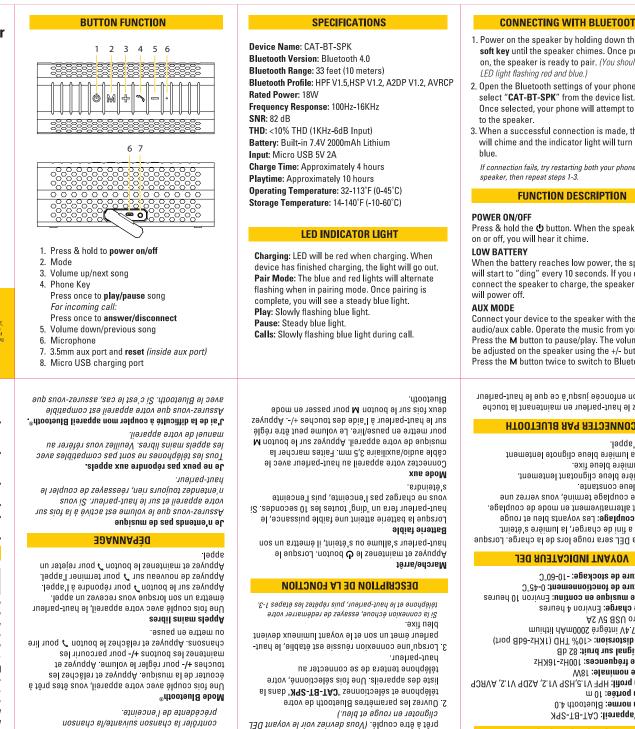

- 1. Power on the speaker by holding down the power soft key until the speaker chimes. Once powered on, the speaker is ready to pair. (You should see the
- 2. Open the Bluetooth settings of your phone and select "CAT-BT-SPK" from the device list. Once selected, your phone will attempt to connect
- 3. When a successful connection is made, the speaker will chime and the indicator light will turn a steady
- If connection fails, try restarting both your phone and the

FUNCTION DESCRIPTION

When the battery reaches low power, the speaker will start to "ding" every 10 seconds. If you do not connect the speaker to charge, the speaker

Connect your device to the speaker with the 3.5mm audio/aux cable. Operate the music from your device. Press the **M** button to pause/play. The volume can be adjusted on the speaker using the +/- buttons. Press the M button twice to switch to Bluetooth mode.

de fonction enfoncée jusqu'à ce que le haut-parleur 1. Allumez le haut-parleur en maintenant la touche

CONNECTER PAR BLUETOOTH

lequal factors leaved. Appels: La lumière bleue clignote lentement Pause: Lumiere bleue fixe. Lire: Lumière bleue clignotant lentement. .einere bieue constante. Une fois le couplage terminé, vous verrez une clignotent alternativement en mode de couplage. Mode de couplage: Les voyants bleu et rouge l appareil a fini de charger, la lumière s'éteint Charge: la DEL sera rouge lors de la charge. Lorsque

Température de stockage: -10-60°C J°Z4-0 :fnemennoitonof eb erutsrèqmeT Lecture de musique en continu: Environ 10 heures Temps de charge: Environ 4 heures Port: Micro USB 5V 2A muidtil dAm0002 èrgètri V4.7 :9i193768 Degré de distorsion: <10% THD (1KHz-6dB port) Rapport signal sur bruit: 82 dB Gamme de fréquences: 100Hz-16KHz W81 :9lenimon 93nessiu9 Bluetooth profil: HPF V1.5, HSP V1.2, A2DP V1.2, AVRCP Bluetooth portée: 10 m Bluetooth norme: Bluetooth 4.0 Nom de l'appareil: CAT-BT-SPK **SPECIFICATIONS** émette un son. Une fois allumé, le haut-parleur est

CONNECTING WITH BLUETOOTH®

Press & hold the 🕁 button. When the speaker turns

Not all phones support hands-free calling. Please refer to your cellular device manual.

I'm having trouble pairing my Bluetooth® device. Make sure your device supports Bluetooth and Bluetooth is enabled. If the speaker doesn't show up in your list of nearby Bluetooth devices, try

anything, try pairing the speaker again.

previous song from the speaker.

BLUETOOTH® MODE

HANDS-FREE CALLING

I can't hear any music.

can't answer phone calls.

or pause.

a call.

restarting the speaker. Note: You cannot pair your device to the speaker if it is already paired to another Bluetooth device.


> 8. Port de charge Micro USB Réinitialiser (auxiliaire intérieur) /mmð.£ eb erisilixus tro9 .7

 
TROUBLESHOOTING

5. Baisser le volume/chanson précédente Appuyez une fois pour répondre/raccrocher Jour un appel entrant: uosueyo e

4. Appuyer une fois pour lire/mettre en pause 3. Augmenter le volume/ chanson suivante

1. Appuyer et maintenir pour allumer/éteindre

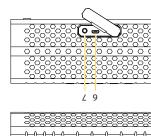



əbbareli est qeja connecte.

sed zəʌnod əu snoʌ 'xnə əpoш uə :ənbɹeшəy



User Manual



WHAT'S IN THE BOX

Bluetooth[®] Speaker (1) Micro USB to USB charging cable (1) 3.5mm audio cable (1) User manual (1)



v.caterpillar







cable de chargement pour eviter a endommager le et débranchez le haut-parleur de tout périphérique ou • En cas de dysfonctionnement, éteignez l alimentation

.seupixoj sineqev seb elles sont allumées, les batteries au lithium produisent

 Toujours éviter le contact avec une flamme nue. Si pour la jeter.

intégrée - veuillez utiliser des moyens appropriées • Le haut-parleur contient une batterie au lithium

ce broaur. • N essayez pas de démonter, de réparer ou de modifier

• N exposez pas l'enceinte à la pluie ou à l'humidité.

environnement à température normale.

Toujours stocker et utiliser ce haut-parleur dans un

NOITNATTA

www.catmobileaccessories.com

Problèmes?

'liəreqqe'l əb səurizdo non

haut-parleur chargé dans une distance de 10 mètres meilleurs résultats, assurez-vous de garder votre et la connexion de la distance Bluetooth. Pour de vaut-parleur et l'appareil affecteront les capacités Une batterie faible et de gros obstacles entre le Le haut-parleur s'éteint/est distordu.

conbler votre appareil au haut-parleur si un autre sed zəissind əu snox ənb inəd əs ii :ənbiewəy proximité, essayez de redémarrer le haut-parleur. é dtooteula seupinédqinéq seb etsil al anab saq le Bluetooth est activé. Si le haut-parleur n'apparaît

FUNCTION DESCRIPTION (continued)

Note: in aux mode, you cannot control next song/

After your device is successfully paired, you are ready to play music. Press and release +/- buttons to adjust volume. Press & hold +/- buttons to togale through songs. Press & release 🖒 button to play

When successfully paired with your device, the speaker will chime when you receive a call. Press the S button to answer the call. Press S again to end the call. Press and hold the ? button to reject

Make sure the volume is turned up on both your device and the speaker. If you still don't hear

e Microphone S. Mode



TROUBLESHOOTING (continued)

The speaker is cutting out/distorted.

Low battery and large obstructions between speaker and device will affect the Bluetooth distance capabilities and connection. For best results, make sure to keep your speaker charged and within 10 unobstructed meters of device.

> Still having problems? Give us a call. Toll free: 888-550-2837 Hours: Monday-Friday, 8am-5pm CST

ATTENTION

- Always store and use this speaker in a normal temperature environment
- Do not expose speaker to rain or moisture.
- · Do not attempt to disassemble, repair, or modify this product.
- Speaker contains a built-in lithium battery please use proper methods when disposing.
- Always avoid contact with open flame. If ignited, lithium batteries produce toxic fumes.
- In the event of a malfunction, turn off the power and unplug the speaker from any device or charging cable to prevent damage to the speaker or other components.

Manuel de l'utilisateur (1) (1) mm d,5 ab sahahikuA (f) tnemegrado de Chargement (1) Bluetooth® Haut-Parleur (1)

TIOB AJ SNAG JI-T-A Y'UD



nətesilitu' əb lənneM li1 sne2 sruelrs 9-tueH



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.