
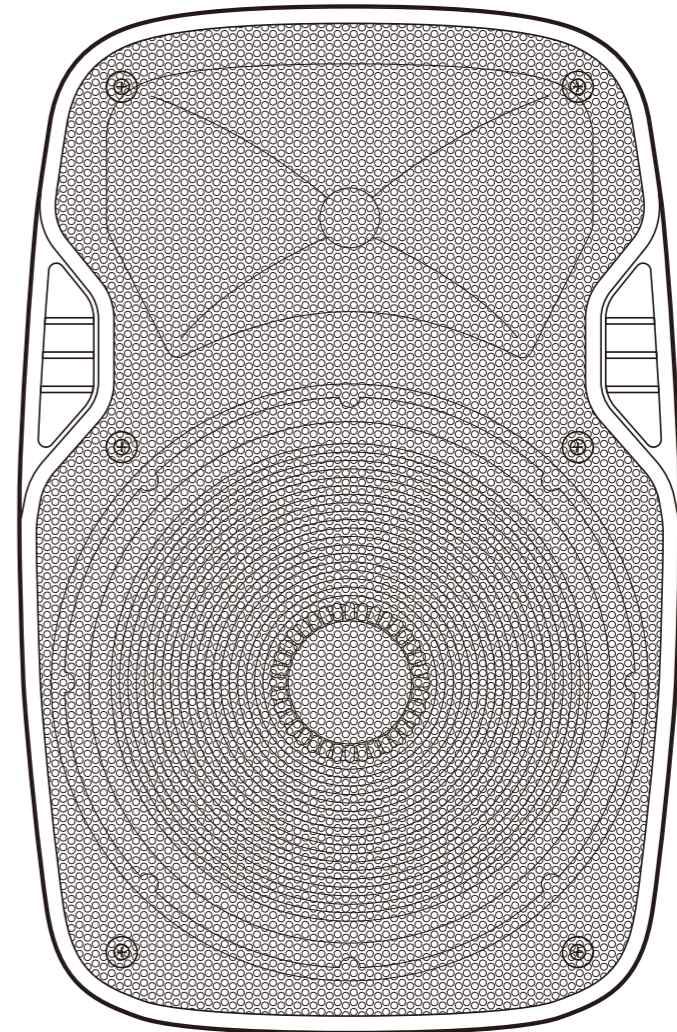


9. **MASTER OUTPUT LEVEL:** This knob controls the overall level of output. To increase the level, turn the knob to the right. To decrease the level, turn the knob to the left.
IMPORTANT: Turn this knob all the way to the left before powering up or connecting anything to the speaker. After all connections are made, turn the speaker on and turn this knob to about one third volume (10 o' clock position). Gradually turn it to the right to increase the volume of the overall output only after all channels have been adjusted to appropriate levels.
10. **CLIP INDICATOR:** The "CLIP" LED will be lit when the output signal is being overdriven. This should be avoided, as distortion in your sound can occur, as well as damage to the amplifier or your speaker. Reduce the master level and/or individual channel levels so that the CLIP indicator lights up only infrequently, if at all.
11. **POWER INDICATOR:** The "POWER" LED will be lit when power is engaged and the unit is on.
12. **MASTER GRAPHIC EQUALIZER:** This 5-band EQ is designed to provide up to 12 dB cut or boost to the frequencies as indicated below each slider. The master GEQ is used to make minor adjustments which will impact the overall mix and should be used sparingly.
13. **SPEAKER OUTPUT:** You may connect one external passive PA speaker to this jack with a standard two-pole twist-lock (speakON- or HPC-type) connector. Do not use any speaker with an impedance lower than 8 ohms.
14. **IEC POWER CABLE RECEPTACLE:** Connect the included AC power cable here. Do NOT attempt to defeat the ground pin. Disconnect the cable when replacing the fuse, just below the cable receptacle.
15. **AC MAINS SELECTOR:** Use this switch to select the appropriate AC MAINS power for your location; 110VAC @ 60Hz, or 220VAC @ 50 Hz.
16. **LED LIGHTING SWITCH:** Use this switch to turn the built-in LED lighting on or off.
17. **POWER SWITCH:** This switch is used to turn the unit on or off.

REMOTE CONTROL:

1. Switch modes: USB / SD card / Bluetooth / FM tuner
2. **▶▶** : Skip forward in MP3 mode, press and hold for fast forward; in FM tuner mode, advance to next station.
FOL+: Next folder in MP3 mode
3. Increase volume.
4. Decrease volume.
5. **◀◀** : Skip back in MP3 mode, press and hold for rewind; in FM tuner mode, back to previous station.
FOL-: Previous folder in MP3 mode.
6. Stop: Switch the MP3 player off.
7. Play/pause in MP3 mode; scan for available stations in FM tuner mode.
8. EQ presets: Normal / Rock / Pop / Classical / Jazz.
9. REP/FOL: Short press: Random / Single / Order
Long press: play music folders in USB or SD
10. 0-9: Direct track selection by track number.
11. Mute the sound of the MP3 player
12. This buttons is reserved for future implementation; no functions are assigned at this time.

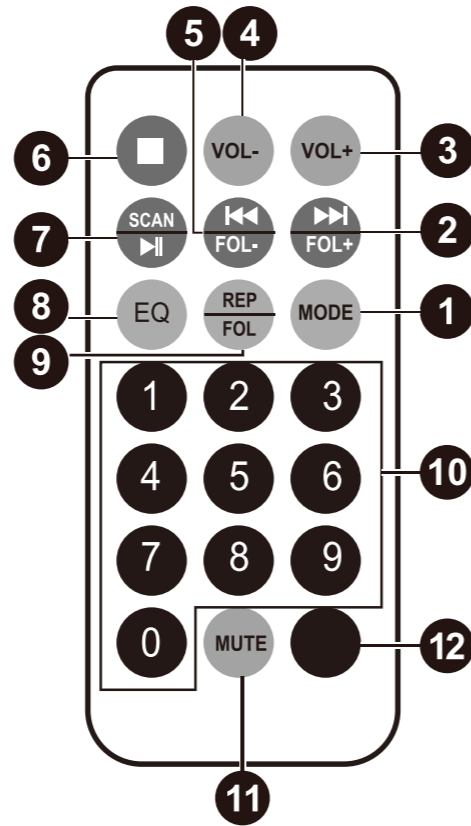

Talent Portable Powered PA Speaker Package

Model: PS215M4

User Manual

Please read all the safety and operating instructions carefully before using this product.



5-Year Warranty
See talentaudio.com for details

Thank you for purchasing the Talent PS215M4 Portable Powered PA Speaker Package. The PS215M4 provides a big sound and many features of a full-size PA system in a very lightweight, grab-n-go format. A variety of input options including mic, line, MP3 and Bluetooth make the PS215M4 perfect for a wide variety of applications, and the built-in LED light show adds an exciting splash of color to your performance or presentation.

WARNING: When using electrical products, basic cautions should always be followed, including the following:

1. Read all instructions thoroughly before operating this device.
2. Keep these instructions for future reference.
3. Pay attention to all warnings and follow all instructions as outlined here. Failure to do so can result in injury to yourself or others, and/or damage to your equipment.
4. Do not use this device near water or in environments with high humidity, or anywhere it can become wet.
5. Do not place drinks or other containers of fluids on the device.
6. Clean only with compressed air, and/or a dry cloth.
7. Do not cover any of the ventilation openings or the heatsink.
8. Do not install or use near any heat sources such as radiators, heat registers, stoves or other devices (including amplifiers) that produce heat.
9. Do not remove or bypass the grounding-type plug on this device. The plug has two blades and a third grounding plug, provided for your safety and protection of your equipment. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on, from being tripped over, or from being otherwise compromised in any way.
11. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the device. When a cart is used, use caution when moving the cart/device combination to avoid injury from tip-over.
12. Position the device with all feet resting firmly on a solid, stable, and level surface.
13. Unplug this device during lightning storms or when unused for long periods of time.
14. Refer all service to qualified service personnel. Service is required when the device has been damaged in any way, e.g., the power cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not open this device's case; there are no user serviceable parts inside.
16. Never break off the ground pin. Connect only to a power supply of the type marked on the unit adjacent to the power cord.
17. This device is sold with a standard U.S.-style IEC power cord. For use in other areas a different kind of cord may be required, and may be purchased locally.
18. The on/off switch in this unit does not break both sides of the primary mains. Hazardous electrical current can be present inside the chassis, even when the on/off switch is in the off position.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CONTROLS, CONNECTIONS, AND FUNCTIONS

1. **LED Display Screen:** Shows functions for the MP3/Bluetooth and FM tuner module.
2. **Media Module:** Play FM radio stations; insert your SD card or USB flash drive and use the provided controls to play, pause, stop, skip, or shuffle your MP3 files; or stream via Bluetooth from your mobile device.
 - a) **Mode:** USB → SD card → Bluetooth (BT network name: PS215M4; password 0000 if prompted) → FM tuner. Press and hold for 3 seconds to turn the MP3 player on/off.
 - b) **Pair/Shuffle/Folder:** Press and hold in Bluetooth mode to enter pairing mode. In MP3 mode, short press for RANDOM (shuffle) → RONE (repeat the currently playing track) → RALL (repeat all tracks in order). Press and hold in MP3 mode to enter folder mode; use skip forward/back buttons to select folders.
 - c) **Play/Pause/Scan:** Press in MP3 mode to play or pause tracks. Press and hold in FM mode to auto search stations.
 - d) **Skip Back/Volume Down:** Press in MP3 mode to skip back, or to select folder in folder mode. Press and hold for volume down in any mode.
 - e) **Skip Forward/Volume Up:** Press in MP3 mode to skip forward, or to select folder in folder mode. Press and hold for volume up in any mode.
3. **MIC LEVEL CONTROL:** Level control for the microphone channel; turn this knob all the way to the left before connecting anything to the channel, then gradually turn it to the right to increase the output level of the individual channel after all connections have been made.
4. **MIC INPUT:** Unbalanced 1/4" input for high impedance microphones.
5. **LINE OUTPUT:** Use these RCA jacks to send your mix to outboard equipment such as a recorder or additional amplifier.
6. **LINE LEVEL CONTROL:** Level control for the line channel; turn this knob all the way to the left before connecting anything to the channel, then gradually turn it to the right to increase the output level of the individual channel after all connections have been made.
7. **LINE LEVEL INPUT (1):** Use this stereo 3.5 mm jack to connect a line level device such as a cell phone, tablet, or laptop computer.
8. **LINE LEVEL INPUT (2):** Use these RCA jacks to connect a line level device such as a CD player.

