

SOUNDCADDYGOLF.COM

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2APLFSC100-BLK

CLUB ASSEMBLY



THE GRIP SCREWS OVER THE TOP OF THE LARGE SPIKE INTO THE TOP SHAFT SEGMENT



THE LARGE SPIKE SCREWS INTO THE THICKEST TOP SEGMENT OF THE SHAFT



THE SKINNIER MALE TO FEMALE SHAFT SEGMENT SCREWS IN BETWEEN THE DOUBLE MALE AND TOP SHAFT PIECE WITH THE FEMALE END TOWARDS THE CLUB HEAD



THE DOUBLE MALE THREADED SHAFT SEGMENT SCREWS INTO THE HOSEL, INSERTING THE SMALL SPIKE AT THE BOTTOM



THE SMALL SPIKE SCREWS INTO THE HOSEL OF THE CLUB HEAD

USE IT FULLY ASSEMBLED IN YOUR GOLF BAG. TAKE OFF THE HEAD AND USE IT IN YOUR CART WITH THE SMALL SPIKE INSERTED INTO YOUR TEE HOLDER, REMOVE THE GRIP AND SPIKE IT INTO THE GROUND, USE THE HEAD BY ITSELF ON YOUR DESK, OR HOWEVER YOU PREFER!




SOUND CADDY








USER MANUAL

QUICK START GUIDE


PAIRING WITH DEVICES:

- MAKE SURE THE SPEAKER IS CHARGED
- TURN ON BLUETOOTH ON YOUR DEVICE
- OPEN BLUETOOTH SETTINGS ON YOUR DEVICE WHERE YOU CAN SEE THE DEVICE CONNECTION OPTION LIST
- HOLD DOWN THE CENTER MULTIFUNCTION BUTTON  ON THE SOUND CADDY FOR 5 TO 10 SECONDS UNTIL IT APPEARS ON YOUR DEVICE LIST
- SELECT "SOUND CADDY" ON THAT DEVICE LIST TO CONNECT
- PLAY MUSIC AND HAVE FUN

LED INDICATOR:

-  ALTERNATING BLUE & RED:
POWER ON AND BLUETOOTH DISCOVERY MODE, READY TO PAIR
-  SOLID RED:
THE SPEAKER IS CHARGING
-  SOLID GREEN:
THE SPEAKER IS FULLY CHARGED
-  SOLID PINK:
BLUETOOTH CONNECTED AND CHARGING
-  ALTERNATING PINK & RED:
POWER ON AND BLUETOOTH DISCOVERY WHILE CHARGING

TECHNICAL SPECIFICATIONS

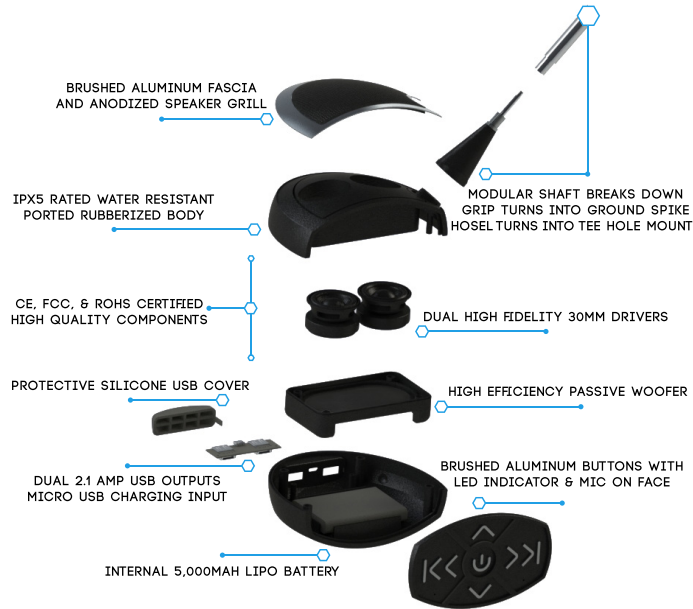

CLUB BACK



USB OUTPUT
TO CHARGE YOUR
PHONE

MICRO USB INPUT
TO CHARGE THE
SOUND CADDY

USB OUTPUT
TO CHARGE YOUR
FRIEND'S PHONE

CLUB FACE



MULTIFUNCTION BUTTON: POWER, ANSWER CALL, HANG UP
CALL, PAUSE SONG, PLAY SONG, ENABLE BLUETOOTH.

TRACK FORWARD

TRACK BACKWARD

VOLUME UP: BEEPS WHEN AT MAXIMUM VOLUME

VOLUME DOWN: BEEPS WHEN AT MINIMUM VOLUME

-  LED INDICATOR
-  MICROPHONE