 




USER MANUAL

Introduction

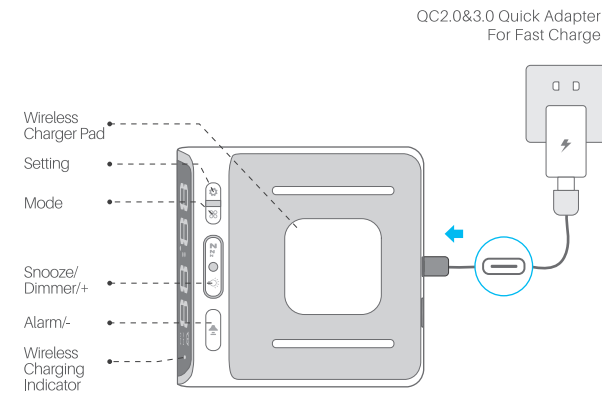

How to set the clock?

1. Press the **⏸** to enter the settings.
2. Press the **⏸** to optionally switch between the clocks and minutes.
3. Press the **⏸** to increase the value. (Press and hold the button for rapid adjustment)
4. Press the **⏸** to decrease the value. (Press and hold the button for rapid adjustment)
5. Press the **⏸** continuously to enter the management of time (24H/12H), year, month, and day.
6. Long press the **⏸** to exit the setting. Without any operation, the setting will automatically return to clock after 20 sec. (Setup is completed)
7. Press the mode button to check the year, month, day and alarm.

 
How to set an alarm?

1. Press the **⏸** to enter the Alarm settings.
2. Press the **⏸** to switch the hour and minute and to set.
3. Press the **⏸** to increase the value. (Press and hold the button for rapid adjustment)
4. Press the **⏸** to decrease the value. (Press and hold the button for rapid adjustment)
5. Long press the **⏸** to exit the setting. Without any operation, the setting will automatically return to the clock after 20 sec. (Setup completed)


6. While the alarm is sounding, press the **⏸** to temporarily silence the alarm (5 minutes is predefined). Snooze can be used two times during alarm.
7. While the alarm is sounding, long press the **⏸** to turn off the alarm.

How to adjust the brightness

3 levels of brightness. Press the **⏸** to adjust the brightness.




How to adjust the desired Alarm volume?

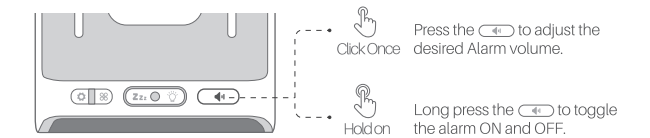 


Charging

 1. Input: 5V == 2A 9V == 1.67A
2. Output: 5W / 7.5W / 10W
3. Blue Light - Charging
4. Blue Light Flashing - Error

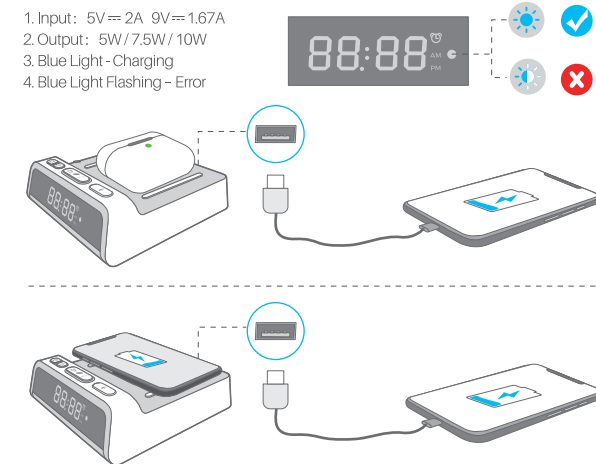

Attentions

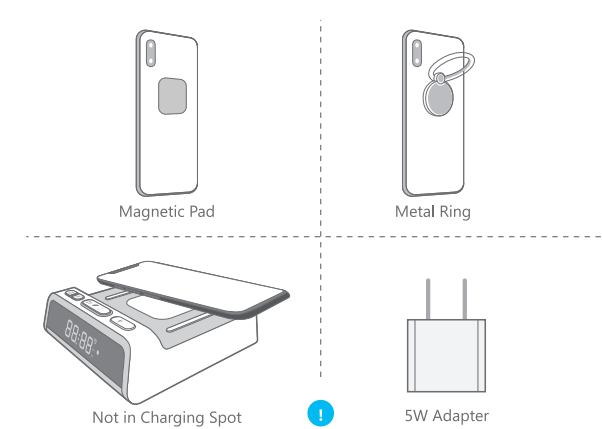 

1. Please keep the charger away from water or other liquids.
2. Do not place the charger too close to any magnetic stripe or clip card (ID card, bank cards, etc.) to avoid magnetic failure.
3. This item is not to be used on any mobile device with metal plates, as it will cause extreme heat that may burn and or damage the device.
4. Fast charge via the plug and USB charging cable (both support QC2.0 or QC3.0).
5. Usually we recommend that the thickness of phone case should be within 4mm (0.12 inch).
6. The standard temperature of wireless charger is 130 °F, but the temperature of our products should be controlled within 113 °F. The charger will cut off current when abnormal heating occurs. Please contact us if any damage occurs.
7. We recommend that you turn off the power-consumption software before charging to effectively prevent the phone from overheating. When the temperature exceeds 113 °F during charging, it is normal for the charging speed to slow down.

FCC Statement

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.
- This device complies with part 15 of the FCC Rules.
- Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Contact us: support@iseneo.com
Copyright © SENE0 Inc. All rights reserved.