



## Wi-Fi Smart Lamp Holder

Model:SlampherRF

 


### Specifications:

Max.Input : AC 100-240V 50/60Hz  
 Max.Output : AC 100-240V 50/60Hz  
 Max.load : 450W/2A  
 RF remote control : 433.92MHz  
 Wi-Fi: IEEE 802.11 b/g/n 2.4GHz  
 Material : PC 940  
 Base : E27 Screw

### Checklist before using the device

- Your smart phone or tablet has connected to a 2.4G WiFi with internet.
- You have the correct WiFi password.
- Your smart phone or tablet must have access to APP Store, Google Play.
- Make sure your router is MAC-open.



### User Guide

- 1 Start with "eWeLink" APP.



- 2 Register an eWeLink account.
- 3 If you have eWeLink account, just log in.

- 4 Install the device and power up



- 5 Add device: press the manual switch once to turn off the lamp. Press and hold the manual switch for about 7s until the WiFi LED fast blinks 3 times and repeats.

- 6 Tap on eWeLink app.

- 7 Select **Quick Pairing Mode (Touch)**.



- 8 Input your WiFi SSID & password.

- 9 Name your device to complete.

- 10 When the WiFi LED is on, the device is online. Start to control now!

**\*Slampher supports controlled by 433.92MHz RF Remote controller. This function allows to turn on/off lamps indoors, no WiFi needed.**

### Learning:

Press the button on Slampher RF for 3s, the RED LED will blink once, then press the button of your 433MHz remote controller for a while. Slampher RF can learn 14 buttons of 433MHz remote controllers.

### Clearing:

Press the button on Slampher RF for 5s, the RED LED will blink twice, then press any button of your 433MHz remote controller for a while.

## TROUBLESHOOTING

**Q: My device on the app stays "Offline" ?**

A: The new added device needs 1min to connect to WiFi and the Internet. If it stays offline for a long time, please judge the problem by the WiFi LED status:

WiFi LED quickly blinks one time every second:

Device failed to connect to your WiFi:

- ① Maybe you have entered wrong WiFi password.
- ② Device is too far away from your WiFi. Please take it closer.
- ③ Device can not be added to the 5G-wifi-router, only the 2.4G-wifi is OK.
- ④ Make sure your router is MAC-open.

If still failed, try to open a mobile hot spot and add again.

WiFi LED quickly blinks twice every second:

Device has connected to WiFi but failed to connect to server. Please check your network connectivity.

Scan the user guide to read [EWeLink works with Amazon Echo, Google Home and Google Nest tutorials](#).



Scan the QR code or visit the website (<https://www.sonoff.tech/usermanuals>) to learn the detailed user guide.

### FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.