

GW500

# WirelessHomePhoneBaseStation User Manual

Date:2019-07-18  
Version:Draft

---



# Contents

 
 
 
|  |   |
|--|---|
| Contents .....                         | 2 |
| 1. Getting Started .....               | 3 |
| 1.1 Know Your Device.....              | 3 |
| 1.2 Install Your Battery.....          | 4 |
| 1.3 Charge Your Battery .....          | 4 |
| 1.4 Status Indicators.....             | 4 |
| 1.5 Device Installation .....          | 5 |
| 2. Using Your GW500.....               | 5 |
| 2.1 Power On or Off.....               | 5 |
| 2.2 Connect Your GW500 to a Phone..... | 5 |
| 2.3 Phone Calls .....                  | 5 |
| 2.4 Adjust Volume .....                | 6 |

|  |    |
|--|----|
| 2.5 Manage Your Voicemail .....            | 6  |
| 2.6 Set Up a Conference Call.....          | 6  |
| 2.7 Use Call Waiting.....                  | 7  |
| 2.8 Forward Incoming Calls.....            | 7  |
| 2.9 Use TTY Mode.....                      | 7  |
| 2.10 Use Advanced Settings.....            | 8  |
| 3. Specifications.....                     | 8  |
| 4. Troubleshooting .....                   | 8  |
| 5. Regulatory and Safety Information ..... | 9  |
| 6. Warranty .....                          | 11 |

# 1. Getting Started

## 1.1 Know Your Device

Your GW500 Wireless Home Phone Base Station lets you make calls with your wireless service provider's cellular network.

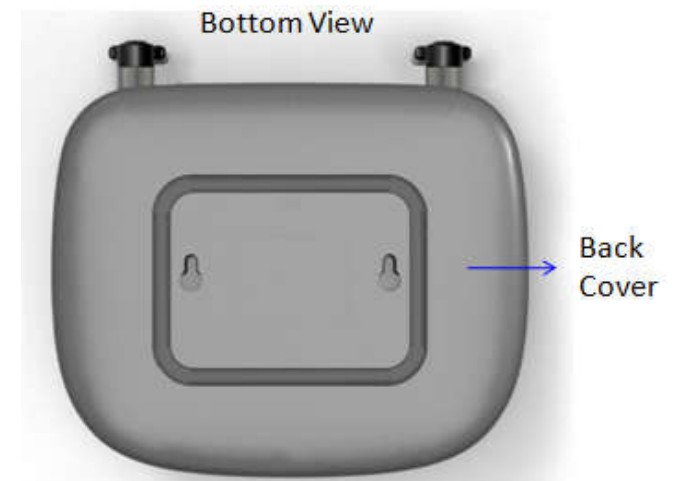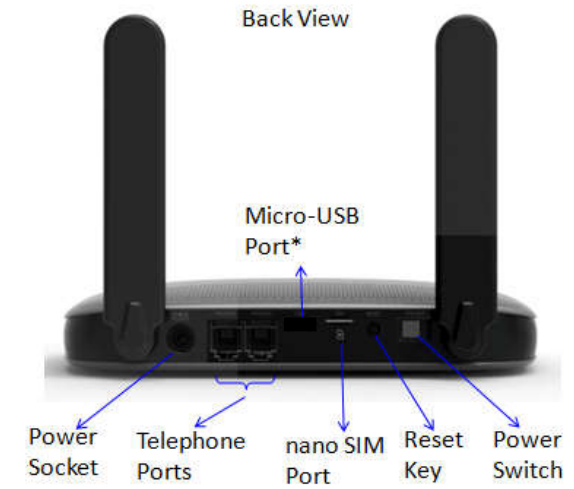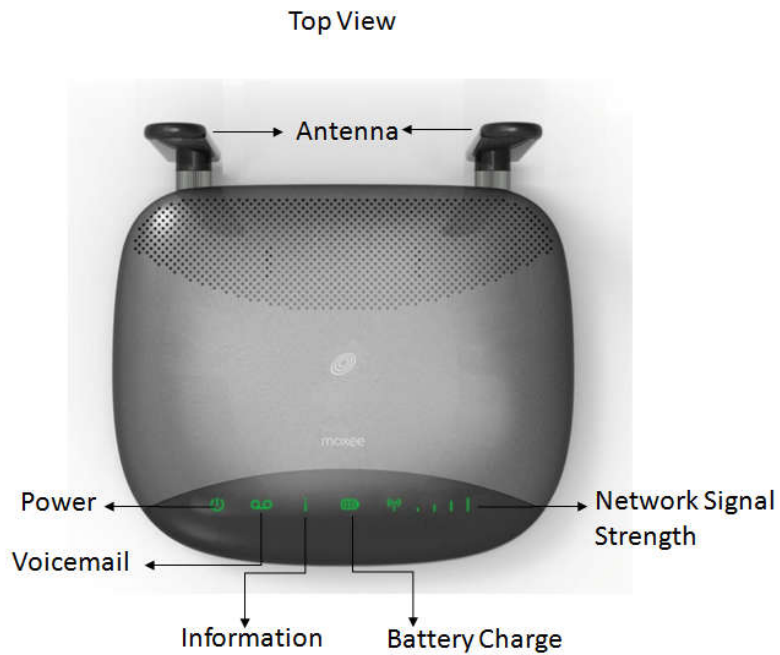

\*For use by manufacturer.

## 1.2 Install Your Battery

1. With the back cover facing upright, and slide your top hand down to remove the back cover.



2. Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.








3. Install the back cover.

## 1.3 Charge Your Battery

1. Connect the adapter(included) to the power socket on the GW500. Do not force the connector into the power socket.
2. Connect the charger to a standard AC power outlet.

## 1.4 Status Indicators

The indicator lights show the device's status.
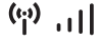
| Indicator  | Status                 | Description                               |
|--|------------------------|---|
| <br>Power       | Solid Green            | The device is Power on                    |
|  | Blinking Green         | The device is Shutting down               |
|  | Light off              | The device is Power off                   |
| <br>Voicemail   | Blinking Green         | New voicemail waiting                     |
|  | Light off              | No new voicemail                          |
| <br>Information | Blinking Green rapidly | Waiting for update                        |
|  | Solid Green            | Software update is in process             |
|  | Blinking Green slowly  | Software update success                   |
|  | Blinking Red           | Software Update end failed                |
| <br>Battery   | Solid Green            | High. Battery level $\geq 50\%$           |
|  | Blinking Green         | High (charging)                           |
|  | Solid Yellow           | Medium .20% $\leq$ Battery level $< 50\%$ |
|  | Blinking Yellow        | Medium(charging)                          |
|  | Solid Red              | Low. Battery level $< 20\%$               |
|  | Blinking Red           | Low(charging)                             |
|  | Light off              | No battery installed                      |
|               | Network blinking red   | Device is not working normally, i.e.      |

|         |  |  |
|---------|--|--|
| Service | with the 4 Bars lights off                   | Limited or no service, searching for service, IMS registration failed. |
|         | Network solid red with the 4 Bars lights off | No SIM or SIM error  |
|         | Network icon and 4Bars solid green           | Signal strength indicator, weak to strong signal                       |

## 1.5 Device Installation

The GW500 works with your wireless service provider’s cellular network instead of your home’s phone jacks.

Position your GW500 in a location that has a strong signal, typically near a window wall.

Connect the two antennas to the position of **the** antenna interface.

Insert the nano SIM card into the SIM card port in the direction as shown in the figure below.



## 2. Using Your GW500

### 2.1 Power ON or OFF

- To power on your GW500, slide the Power Switch to the ON position.
- To power OFF, slide the Power Switch to the OFF position.

Note: When powered off, the GW500 will not send or receive calls.



### 2.2 Connect Your GW500 to a Phone

Using a phone cable (RJ11, not included), connect your home phone to the Port named **PHONE 1**

Note: The PHONE 2 port can be used to connect an additional phone or cordless base station. All telephones connected to the GW500 will share the same telephone number.



### 2.3 Phone Calls

Place a Call by Dialing

1. Pick up the handset of the connected home phone.
2. Dial the phone number.
3. Wait approximately 4 to 12 seconds for the call to be connected automatically.

Note: You will need to dial 10 digits, even for local numbers.

#### Answer a Call

When the phone rings, pick up the handset to answer **the call**. If the telephone has a hands-free function, you can answer the call by pressing the hands-free button.

#### End a Call

During a call, hang up your home phone by pressing a hands-free function or returning the phone receiver to its base.

## 2.4 Adjust Volume

You can adjust the call volume using the volume controls of any connected phone or the GW500's Volume Setting Mode. There are four settings, volume levels 1-4; level 4 is the default.

1. While on a call, quickly press \*\* to turn the volume down or ## to turn the volume up.
2. When the volume is adjusted to level 1, press "\*\*\*" again can't decrease the volume and play the warntone to remind the user; when the volume is adjusted to level 4, press "###" again can't increase the volume and play an warn tone to alert the user.

Note: If your home phone(s) have volume controls, they are independent of the GW500's Volume Setting Mode.

## 2.5 Manage Your Voicemail

Your GW500 can divert calls to the voicemail, so callers can leave voicemail messages when they cannot reach you.

When a voicemail message is waiting, the voicemail indicator on the GW500 flashes, and an intermittent dial tone can be heard when any connected handset is picked up to place a call.

#### Check Your Voicemail Messages

1. Dial 1 or \*86 on the connected home phone. Wait approximately 4 to 12 seconds to be connected to your voicemail inbox.
2. If prompted, enter your voicemail password.
3. Follow the prompts to listen to and manage your voicemail messages.

#### Set Voicemail Options

1. Call voicemail, as explained above.
2. Follow the system prompts to set options such as a password and voice recording.

## 2.6 Set Up a Conference Call

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call. With this feature, you can talk to two people at the same time.

1. Place the first call.
2. Once you have established the connection, press the Flash (or Talk) key on your phone.

3. When you hear a dial tone, dial the second number.
4. When you're connected to the second party, press the 3 key and the Flash (or Talk) key to complete the three-way connection.
5. To end the conference call, hang up your home phone or return the phone receiver to its base.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

## 2.7 Use Call Waiting

Call waiting allows you to be notified of incoming calls while on a call.

To place the current call on hold and accept the incoming call, press the Flash (or Talk) key on your phone. You can then press the Flash (or Talk) key anytime to switch back and forth between calls.

To keep the current call and hang up the incoming call /the holding call, press the 0 key and the Flash(or Talk) key;

To hang up the current call and accept the incoming call/the holding call, press the 1 key and the Flash(or Talk) key.

Notes:

If your phone does not have a Flash (or Talk) key, use the off-hook mechanism supported by your phone instead.

The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

## 2.8 Forward Incoming Calls

The call forwarding feature allows you to forward your incoming calls to another phone number, such as your mobile phone or office number. If you've enabled call forwarding, your home phone will not receive calls until you turn this service off.

Note: Airtime applies to forwarded calls even if you send the call to landline phones. Contact your service provider for assistance on how to set an available option (Always forward, When busy, When unanswered, or When unreachable).

## 2.9 Use TTY Mode

Your GW500 is compatible with TTY devices. A TTY device can allow people who have hearing or speech disabilities to communicate by telephone.

To set the TTY mode or turn TTY support off, dial \*955\*889\*n# on your connected phone, replacing n with one of the following numbers:

- Replace n with 0 for TTY Off mode. Users who can hear and talk can turn off TTY support.
- Replace n with 1 for TTY Full mode. Users who cannot talk or hear can use this mode to send and receive text messages through a TTY device.
- Replace n with 2 for VCO mode. Users who can talk but cannot hear can use this mode to talk through the phone and receive responses via text messages.
- Replace n with 3 for HCO mode. Users who can hear but cannot talk can use this mode to listen to calls and respond via text messages.

## 2.10 Use Advanced Settings

| Command       | Description   |
|---------------|---|
| *955*3284#    | Reset your device to factory settings.  |
| *955*238*xx#  | Set the auto-dialing time. Replace xx with a number indicating the desired time in seconds, from 4 through 12. The default time is 4 s. |
| *955*866*xxx# | Set your voicemail number.<br>Note: need to be reset each time when you need to modify.   |
| *955*808*n#   | Set the data transmission mode for Caller ID. Replace n with 0 for FSK or 1 for DTMF. The default mode is FSK.                          |

## 3. Specifications

| GW500 Device         |  |
|----------------------|--|
| Model                | GW500  |
| Dimension            | 140.5 (height) x 67.4 (width) x 9.7 (thickness) mm |
| Weight               | 140g   |
| Platform Frequency   | 1.3GHz   |
| Supported Technology | LTE  |

| Battery   |                       |
|-----------|-----------------------|
| Type      | Lithium battery       |
| Capacity  | 2800mAh               |
| Talk Time | Approximately 4 hours |

|              |                        |
|--------------|------------------------|
| Standby Time | Approximately 36 hours |
|--------------|------------------------|

## 4. Troubleshooting

| Problem  | Suggested Solution   |
|--|--|
| There is no dial tone  | After turning the GW500 on, wait 1 to 2 minutes before making a call.                                    |
|  | Move the device to a location with better signal reception.  |
| The connection sounds distorted/noisy                                    | Remove any electrical appliances that are too close to the phone or router.                              |
|  | The cable or phone set might be damaged. Try using a different cable or phone and/or contact the dealer. |
| There is a busy tone when the phone is removed from the receiver         | Place the phone back on the receiver and try again.  |
| After dialing, there is no tone  | After dialing, wait 4 to 12 seconds for the call to connect.   |
| Both power and battery indicator lights are blinking repadly or both off | Battery is low, check if GW500 is connected to the adapter   |



## 5. Regulatory and Safety Information

### FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radiation exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

The FCC grant can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: **2APNR-GW500**.

### CTIA Requirements

- Do not disassemble or open, crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard. The device shall only be connected to CTIA certified adapters, products that bear the USB-IF logo or products that have completed the USB-IF compliance program.

#### **Safety Precautions**

Some electronic devices may be susceptible to electromagnetic interference. Position the device away from TV sets, radios, and other electronic equipment to avoid electromagnetic interference.

- The GW500 may interfere with medical devices such as hearing aids and pacemakers. Consult a physician or the manufacturer of the medical device before using the GW500.
- Please keep yourself at least 20 cm away from the GW500.
- Do not use your GW500 in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.
- Only use original accessories, or accessories that are authorized by GOSUNCN, with the GW500. Unauthorized accessories may affect the GW500 performance, damage the GW500, or cause danger to you.
- Do not attempt to dismantle the GW500. There are no user serviceable parts.

- Do not allow the GW500 or accessories to come into contact with liquid or moisture at any time. Do not immerse the GW500 in any liquid.
- Do not place objects on top of the GW500. This may lead to overheating of the device.
- The device must be placed in a ventilated environment for use.
- Do not expose the GW500 to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Do not allow children to play with the GW500 or charger.
- Keep the length of the cable between the GW500 and the phone less than 32 feet.
- The GW500 is for indoor use only. Do not use the GW500 outside. Do not connect telephone extensions that run outside of the building. These can result in lightning damage to your unit.

**WARNING:** This product contains a chemical known to the State of California to cause cancer, birth defects or other reproductive harm.  
Cancer and Reproductive Harm – [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

#### **Cleaning and Maintaining**

- Use an antistatic cloth to clean the GW500. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your GW500 before you clean it.
- Use the GW500 within the temperature range of 14°F to 113°F (-10°C to 45°C), and store within the temperature range of -40°F to 158°F (-40°C to 70°C). The humidity range is 5% to 95%.
- Do not use your GW500 during a thunderstorm. Remove the main power pack from the wall socket.

- Do not take out your nano-SIM card unnecessarily. The nano-SIM card may be easily lost or can be damaged by static electricity.

## 6. Warranty

### Limited Warranty

This warranty does not apply to defects or errors in the Product caused by:

1. Reasonable abrasion.
2. End User's failure to follow GOSUNCN's installation, operation, or maintenance instructions or procedures.
3. End User's mishandling, misuse, negligence, improper installation, disassembly, storage, servicing, or operation of the Product.
4. Modifications or repairs not made by GOSUNCN or a GOSUNCN-certified individual.
5. Power failure, surge, fire, flood, accident, action of third parties, or other event outside GOSUNCN's reasonable control.
6. Usage of third-party products, or usage in conjunction with third-party products provided that such defects are due to the combined usage.
7. Any other cause beyond the range of normal usage intended for the Product.

End User shall have no right to reject or return the Product, or receive a refund for the Product from GOSUNCN under the above-mentioned situations.

This warranty is End User's sole remedy and GOSUNCN's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied

warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

### Limitation of Liability

GOSUNCN shall not be liable for any loss of profits or indirect, special, incidental, or consequential damages resulting from or arising out of or in connection with use of this product, whether or not GOSUNCN had been advised, knew, or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.