

按照页码顺序,骑马钉装订成册

<div data-bbox="170 395 367 421"> <h1>REPLAY</h1> </div> <div data-bbox="247 441 311 449"> <p>HB802-1</p> </div> <div data-bbox="227 460 311 475"> <h2>VELOCITY</h2> </div> <div data-bbox="170 483 373 497"> <h3>Electronic Self Balancing Hoverboard</h3> </div> <div data-bbox="141 562 407 675"> </div> <div data-bbox="216 726 325 738"> <h4>Instruction Manual</h4> </div> <div data-bbox="170 749 387 774"> <p>PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE</p> </div>	<div data-bbox="453 387 645 401"> <h2>HELMET SAVES LIVES!</h2> </div> <div data-bbox="453 421 727 463"> <p>Always wear a properly fitted helmet certified by CPSC (Consumer Product Safety Commission) when you ride your hoverboard.</p> </div> <div data-bbox="453 486 716 497"> <p>Correct Fitting: Make sure your helmet covers your forehead.</p> </div> <div data-bbox="464 514 559 608"> </div> <div data-bbox="453 647 727 673"> <p>Incorrect Fitting: Forehead is exposed and vulnerable to serious injury.</p> </div> <div data-bbox="464 690 559 783"> </div>	<div data-bbox="774 387 849 395"> <h3>WARNING</h3> </div> <div data-bbox="774 410 995 421"> <p>PLEASE READ THE INSTRUCTION MANUAL THOROUGHLY.</p> </div> <div data-bbox="774 427 1059 480"> <p>Thank you for purchasing the VELOCITY Hoverboard. Failure to follow the basic instructions and safety precautions listed in the instruction manual can lead to damage to your device, other property damage, serious bodily injury and even death. Please retain this manual for future use and reference.</p> </div> <div data-bbox="774 500 820 511"> <h4>ATTENTION</h4> </div> <div data-bbox="774 517 1059 746"> <ol style="list-style-type: none"> 1. Use only the supplied charger with this hoverboard. Use of any other charger may create fire or explosion. 2. The operating temperature range of the hoverboard is 32-104°F(0-40°C). 3. Always wear shoes, helmet and appropriate safety gear such as knee and elbow pads. 4. Do not operate under the influence of drugs or alcohol. 5. You must comply with local laws and give way to pedestrians. 6. Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes. 7. Do not ride on icy or slippery surfaces. 8. Do not ride "double" with more than one rider on the hoverboard. Do not perform stunts or stop abruptly. 9. Do not operate near swimming pools or other bodies of water. 10. Read the instruction manual and warning labels before riding. 11. Store the hoverboard in a dry, ventilated environment. 12. When transporting the hoverboard, avoid violent crashes or impact. </div> <div data-bbox="774 766 893 777"> <h4>LOW TEMPERATURE WARNING</h4> </div> <div data-bbox="774 780 1059 820"> <p>Low temperature will affect the lubrication of moving parts inside the hoverboard, increasing internal resistance. At the same time, in low temperatures, the discharge capacity and the capacity itself of the battery will be significantly decreased.</p> </div>	<p>Use caution when riding the hoverboard in cold temperatures (below 40 degrees F).</p> <p>Doing so may increase the risk of mechanical failures of the hoverboard, which may lead to damage to your device, other property damage, serious bodily injury and even death.</p> <div data-bbox="1103 472 1190 480"> <h4>SAFETY INSTRUCTIONS</h4> </div> <ul style="list-style-type: none"> • Keep the device away from heat sources, direct sunlight, humidity, water and any other liquids. • Do not operate the device if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the device. • Do not use the device if it has been dropped or damaged in any way. • Repairs to electrical equipment should only be performed by the manufacturer. Improper repair voids the warranty and may place the user at serious risk. • Do not puncture or harm the exterior surface of the product in any way. • Keep the device free from dust, lint, etc. • Do not use this device for anything other than its intended use or purpose. Doing so may damage the device or lead to property damage, injury or death. • This product is not a toy. Keep out of reach of children. • Do not expose batteries, battery pack, or batteries installed to excessive heat, such as direct sunlight, or open flame. • Do not allow hands, feet, hair, body parts, clothing or similar articles to come in contact with moving parts, wheels or drive train, while the engine is running. • Do not operate or allow others to operate the hoverboard, until the user understands all instructions, warnings and safety features described in this manual. • Check with your doctor if you have a medical condition that could affect your ability to use this hoverboard. 	<ul style="list-style-type: none"> • Persons with head, back or neck ailments or prior surgeries to those areas of the body are not recommended to use this hoverboard. • Do not operate if you are pregnant, have a heart condition, or have both. • Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical or mental capabilities to recognize, understand and perform all of the safety instructions and to be able to assume the hazards inherent in unit use, should not use this hoverboard. <div data-bbox="1426 500 1499 511"> <h4>GETTING STARTED</h4> </div> <ul style="list-style-type: none"> • Remove the product from the box. • Please retain all packaging after you have checked and counted all the parts and the contents against the list. <div data-bbox="1426 574 1506 585"> <h4>PACKAGE CONTENTS</h4> </div> <ul style="list-style-type: none"> • Hoverboard • Wall Charger • Instruction Manual <div data-bbox="1426 650 1484 658"> <h4>KEY FEATURES</h4> </div> <ul style="list-style-type: none"> • Electronic Self Balancing Hoverboard • Traction and stability • Multi-colored LED footpad lights • Light bars and movement LEDs • Built-in Bluetooth speaker • Built-in rechargeable battery 	<div data-bbox="1747 387 1838 395"> <h4>DESCRIPTION OF PARTS</h4> </div> <div data-bbox="1756 410 2019 574"> </div> <div data-bbox="1747 599 1997 678"> <table border="1"> <tbody> <tr> <td>1 Fender</td><td>6 Tire</td></tr> <tr> <td>2 Right Foot Mat</td><td>7 LED Light</td></tr> <tr> <td>3 Battery Indicator</td><td>8 Power Button (located in rear)</td></tr> <tr> <td>4 System Indicator</td><td>9 Charge Port (located in rear)</td></tr> <tr> <td>5 Left Foot Mat</td><td>10 Speaker (bottom)</td></tr> </tbody> </table> </div> <div data-bbox="1747 695 1838 704"> <h4>INSTRUCTIONS FOR USE</h4> </div> <p>Please read the following instructions carefully.</p> <div data-bbox="1747 740 1847 752"> <h4>BATTERY SPECIFICATIONS</h4> </div> <p>Battery Type: Rechargeable lithium-ion battery Fully Charging Time: 5 hours Voltage: 30V Initial Capacity: 4.0 Ah</p>	1 Fender	6 Tire	2 Right Foot Mat	7 LED Light	3 Battery Indicator	8 Power Button (located in rear)	4 System Indicator	9 Charge Port (located in rear)	5 Left Foot Mat	10 Speaker (bottom)
1 Fender	6 Tire														
2 Right Foot Mat	7 LED Light														
3 Battery Indicator	8 Power Button (located in rear)														
4 System Indicator	9 Charge Port (located in rear)														
5 Left Foot Mat	10 Speaker (bottom)														

S

17