# **CONTENT**

Package List	1
• Disclaimer and Warning	2
Safety Operation Guidelines	4
• Get to know the Stabilizer	6
USB Connection	7
Mounting Camera, Checking Balance	9
Panel Introduction	10
Operating Mode	11
• Changing Orientation	12
• App Operation, and Bluetooth Connection	13
Product Specification	
Warranty Card	

# **PACKAGE LIST**

The product should be packed with following items (including this user manual), If you are missing any items or components, please contact your dealer immediately!







 $\mathsf{GIMBAL}\,\mathsf{STABILIZER}\,\times\!1$ 

MICRO USB CABLE ×1

User Manual ×1

1

### DISCLAIMER AND WARING

Thank you for purchasing our Stabilizer. Before you start PLEASE read this manual and become familiar with Stabilizer's components and operating modes to ensure proper operation. The information contains herein affects your safety and your legal rights and responsibility. Failure to read and follow the instructions and warnings may result in serious injury to you or damage to your device or property.

By using this product, you hereby signify that you have read this document carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for you conduct while using this product and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all terms, precautions, practices, policies and guidelines our company has made and may make available.

Our company accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to those set forth herein.

### **GLOSSARY**

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product.

- **—Warning:** Procedures, which if not properly followed, may incur property damage, grave accident, or serious injury
- CAUTION: Procedures, which if not properly followed, may incur property damage and serious injury. NOTICE: Procedures, which if not properly followed, may incur property damage or minor injury.

### WARNING:

Read the ENTIRE User guide to become familiar with the features of our Stabilizer before operating. Failure to operate the product correctly can result in damage to the product or personal property, and cause serious injury. This is a sophisticated product. It must be operated with caution and common sense and requires some basic mechanical ability. In-correct Use of product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. DO NOT use with incompatible components or in any way otherwise as mentioned or instructed in the product documents provided by our company. This Safety Guidelines herein contain instructions for safety, operation and maintenance. It is essential to read and follow all of the instructions and warnings in the user manual, prior to assembly, setup or use, in order to operate the product correctly and avoid damage or serious injury.

## **DISCLAIMER AND WARING**

### Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- •Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- •Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Shenzhen JX ROBOT Technology Co., Ltd. may void the FCC authorization to operate this device

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## **△** SAFETY OPERATION GUIDELINE

The Stabilizer should be used in temperatures from  $0^{\circ}$ C to  $40^{\circ}$ C.

Use of the battery in environments above 40°C can lead to a fire or explosion. Use of battery below 0°C can lead to serious damage.

### **■CHARING THE BATTERY**

- 1. Always use our company approved charger for charging. Our company takes no responsibility if the battery is charged using Non-Our company charger.
- 2. Do not put the stabilizer near flammable materials or on flammable surfaces (such as carpet or wood). Never leave the battery unattended during charging to prevent any accident.
- 3. Do not charge the battery immediately after use, when the Stabilizer temperature may be too high. Do not charge the battery until it cools down to near room temperature .Charging the battery with its temperature over 40°C or lower than 5°C may lead to leakage, overheating, or battery
- 4. Examine the charger and cable before use; make sure there is no damage to the enclosure, cord, plug, or other parts. Never use a damaged charger. Do not clean the charger with denature alcohol or other flammable solvents. Never use a damaged charger.
- 5. The Intelligent Battery will stop charging when it is full. Disconnect the batteries from the charger when fully charged.

### **■**STORAGE

- 1. DO NOT leave the Stabilizer near heat sources such as a furnace or heater, or expose inside of a vehicle on hot days.
- 2. Store Stabilizer in dry environment, and never store the Stabilizer in any environment with temperature of over 60°C.
- 3. Do not leave the Stabilizer unused for too long after it has been completely discharged to prevent over-discharge of battery which may result in battery damage and permanent damage.

#### ■TRAVEL NOTICE

Discharge the battery power to 5% or lower before carrying the battery on an air flight.

# SAFETY OPERATION GUIDELINE

### ■CAUTION:

- 1. The Stabilizers a high -precision control device, damaged may be caused to stabilizer if it is dropped or subject to external force, and this many result in malfunction.
- 2. Make sure the rotation of Stabilizer axes is not blocked by external force when the stabilizer is
- 3. The Stabilizer is not waterproof or water-resistant. Prevent contacts of any kind of liquid or clear

Prevent contacts of any kind of liquid or clear with.


- It is recommended to use dry cloth for cleaning.
- 4. Protect the Stabilizer from dust and sand during use.


#### ■ NOTICE

- 1. Hold the Stabilizer's Handle still in when it is powering up to ensure it starts up successfully.
- 2. Make sure the batteries are fully charged before each time of use.
- 3. Discharge the battery to 40%~65% if it will NOT be used for over 10 days. This can greatly extend
- 4. Charge and Discharge the battery completely once every 3 months to keep it active.

# **1** GET TO KNOW THE STABILIZER

The stabilizer is high-precision control device. Connect to APP, it has more face tracking, time-lapse function, etc. which can offer you professional grade video.

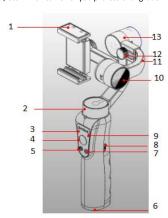

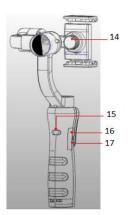

- 1. Smartphone Clamp
- 2. Pan Motor 3. Battery Level Indicator
- 4. Joystick
- 5. Power ON/OFF
- 6. 1/4 Thread screw
- (For extension poles or tripods) 13. Roll Motor
- 7. MODE Select

10. Tilt Motor

11. Arm Adjustment

- 8. Shifter Lever 14. Smartphone Clamp (Zoom Control) Adjustment Knob 9. Status indicator
  - 15.Shooting
  - 16. Micro USB Charging Port
  - 17. Power Output Port
- 12. Roll Balance Thumbscrew (For charging of Smartphone)

6

# **2 USB CONNECTION**



# **IN-USE CHARGING**

Connect the Micro USB Port on the side of stabilizer's handle to a power source SUCH AS a power pack (not include) to extend run-times.

## **MOBILE CHARGING**

The USB port at the bottom of the stabilizer handle can be used for charging of your Smartphone while in use on the Stabilizer.

■An L-shape charging connector is required when the Smartphone is mounted horizontally on the mobile clamp.

# **③ MOUNTING CAMERA**



Place Smartphone to mounting clip, as show. Slide the Smartphone all the way to right until it touches Tilt Motor.

### WARNING!



ALWAYS MOUNT YOUR CAMERA PRIOR TO POWERING ON.

FAILURE TO DO CAN DAMAGE THE UNIT!

# **4** CHECKING BALANCE

If the Smartphone does not stay leveled when mounted, please do as following: **Step 1**: Loosen the Roll balance Knob.

**Step 2**: Make small Adjustment t by sliding the horizontal arm, Until the mobile intersects stabilizer with a 70-100 degree.

**Step 3**: Tighten the Thumb Screw after the phone is well balanced in level to ensure normal operations.



**NOTEDS:** Proper adjustment of balance ensures better power saving during operation. The stabilizer may still function well when the gravity center is not properly configured; however, it may lead to more power consumption on the motors, and can greatly affect the torque output. 8

# **⑤** OPERATING

## To Power On

Step 2: Press & Hold the Power/Shooting button for 3-4 seconds until the Status Indicator light flashes blue, and then turns ON Green finally.




Power ON/OFF

9





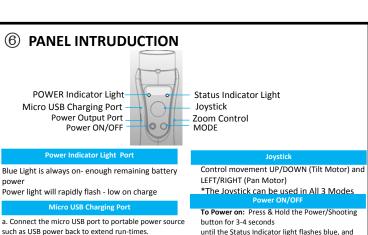

b. Use a cable for Charging stabilizer when no power.

**Zoom Control (In APP control only)** 

Status Indicator Light

1. Blue Light - The Stabilizer is in operation, that the

control unit goes through to process an instruction

2. Green Light - Stabilizer has gone into working

Red Light is always on - low on charge-shut down.

Red Light is blinking rapidly - Stabilizer overload-shut

Use the zoom slider to control UP (Zoom In)

and Down (Zoom Out);

condition.

down.

3. Red Light:

until the Status Indicator light flashes blue, and

then turns ON Green finally. To Power off: Press and holder the

POWER Button for 3 seconds Double-click the front and back lens to switch; Triple-click the photo and video switch. **Shooting Function** 

After Bluetooth Connected between the mobile and stabilizer, use SHOOT button to take photos or video; double click can be taken continuously

### **MODE Button**

Single Press to cycle through the 3 Modes that you set. Double click the MODE button to bring the camera to its original position.

Pan & Tilt Follow Mode

Locking

Roll axis is locked. The camera pans (Left/right) and tilts (Up/Down) are following the movement of

(7) OPERATING MODES

Pan

Following

mode

igle Follow

Mode

Single

Press

Push Joystick up and down to control the tilt of camera, use joystick left and right to manual pan left/right

camera.

10

Pan Following Mode

Tilt & Roll are locked. Pan axis rotates (Left/Right) smoothly with turn of wrist.

Push Joystick up and down to control the tilt of camera, use joystick left and right to manual pan left/right

Lock Mode

Please make notes of each motor and operating Mode details(showing on this page), as stabilizer

Press the Power Button, The stabilizer enters Lock Mode each

Single Click Mode button to Switch into Pan Following Mode

Single Click the MODE button to enter into Pan&Tilt Follow

comes pro-program with 3 different mode

**SWITCHING STABLIZER MODES** 

time when powered on. (Default Mode)

Pan, Tilt, Roll axis are all locked. The camera keep still and stable, which mean Camera cannot follow handle's movement.

Push Joystick up and down to control the tilt of camera, use joystick left and right to manual 11 pan left/right

 
# **® CHANGE ORIENTATION**

The Stabilizer comes with 2 different Way for Change Orientation

### **Switching From Horizonta**

Keep the phone facing yourself and rotate the Stabilizer handle over 70 degrees in counterclockwise direction, Stabilizer will enter vertical shooting Mode. (Phone camera upward)

Keep the phone facing yourself and rotate the Stabilizer handle over 70 degrees in clockwise direction, Stabilizer enter vertical shooting. (Phone camera upward)




### **Switching Mount**

Step 1: Loosen the Smartphone Clamp Thumbscrew and rotate the clamp to vertical direction

Step 2: Place your Smartphone on the Clamp

 Step 3: Tighten the Clamp Thumbscrew to ensure normal operations.



# **9 APP OPERATION & CONNECT TO BLUETOOTH**

### **Connect to Stabilizer APP**

Step 1: Scan QR Code (For Andriod +iOS) and Download below APP for accessing.



Step2: Power on the stabilizer

Step 3:Turn on Bluetooth in your Smartphone settings menu.

Step 4: Open the **Stabilizer APP**, and search for the **'Stabilizer'** Bluetooth signal by selecting the Bluetooth icon in the pop-up screen

In the APP Menu, use the zoom slider to control UP(Zoom In) and Down(Zoom Out) , and more function setting, such as Face Tracking, Smart Object Track, Panorama Shooting, Time-Lapse.

### **Connect to Bluetooth**

Step 1: Press the Power button for 3-4 seconds, stabilizer will power on.

Step 2: Turn on Bluetooth in your Smartphone settings menu.

Step 3: After Bluetooth Connected between Smartphone and stabilizer, you can start taking photo/Record video

# **(III)** PRODUCT SPECIFICATIONS

	Min.	Standard	Max.	Remarks
Input Vol.	3.4V	3.7V	4.2V	
Operation Current	150mA	1500mA	3000mA	
Opration Temperature	0℃		40℃	
Operation Time		12h		Well balanced with camera mounted
Weight		423g		
Pitch Angle Range		325°		
Roll Angle Range		180°		
Pan Angle Range		330°		
Compatibale Models	Smartphone wit	h sizes under 6.0 (	Gopro3/4/5/6	
Controllable Pitch Angle	-155°		+155°	
Controllable Roll Angle	-30°		+30°	
Controllable Pan Angle	-155°		+155°	
Payload		75~200g		
Charing Time		3H		
Charging Voltage		5V		
Charing Current		1A		
Power Output Voltage		5V		
Power Output Current		1A		
				1

# **WARRANTY CARD**

### **Warranty Period**

- 1. The warranty period is 1 year from the original date of purchase. During the warranty period, under normal use, our company will at its option, repair and/or replace parts which determined by defective situation
- 2. Warranty this product against effects in material or workmanship when it belong Normal consumer usage and conditions for the time periods.

### Warranty does not cover:

- 1. Products subjected to unauthorized Maintenance, misuse, collision, neglect, mishandling, soaking, accident, and unauthorized alteration.
- 2. Incorrect use of product: Removing serial number labels/tags
- 3. Products whose warranty has expired.
- 4. Products damaged due to force majeure, such as fire, flood, lighting, etc.

### **Warranty Claim Procedure**

If failure or any problem occurs to your product after purchase, please contact a local agent for assistant.

### **Latest Information**

For the latest user manuals, tutorial video, firmware and calibration instruction, please visit your dealer web page.

Many Stabilizer performances can be solved with a simple calibration sequences.

Custom Informa	ition	
Customer Name	e: Contact No:	
Address:		Certificate of Quality
Sales Informatio	on	
Sales Date: :	Product Serials No:	This product is confirmed to meet quality standards and Permitted for
Dealer:		sales after strict inspection.
Contact Tel No:		
#1 Maintenance	e Record	QC inspector:
Service Date:	Signature of Repairman:	
Cause of Proble	m: :	
Service Result:	☐ Solved ☐ Unsolved ☐ Refunded/Replaced	