



Instruction manual

Remote Control!

4+

62007W


Racecar

65 pcs



**MAGIC
BLOCKS**

No 1

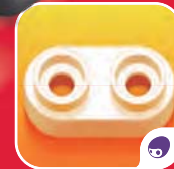


Download on the
App Store

ANDROID APP ON
Google play

Search **PaiBlok**
on the App Store.

List of parts

 Please clean the product with a clean soft cloth.





- | | | | | | | | | | | |
|----|----|----|----|----|-------------|--------------------|----|------------------------|----|----|
| | | | | | | | | | | |
| X2 | X4 | X2 | X1 | X1 | X1 | X1 | X2 | X3 | X1 | X1 |
| | | | | | | | | | | |
| X2 | X2 | X2 | X1 | X2 | X1 | X2 | X1 | X1 | | |
| | | | | | | | | | | |
| X1 | X2 | X2 | X2 | X2 | X2 | X1 | X1 | Main control block X 1 | | |
| | | | | | | | | | | |
| X1 | X4 | X4 | X4 | X1 | Sticker X 1 | Remote control X 1 | | | | |





WARNING:
CHOKING HAZARD—Small parts.
 Not for children under 3 yrs.

Preparation

Before assembly, please prepare four 1.5 V AA batteries and a Phillips head screwdriver (not included).

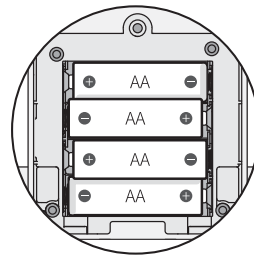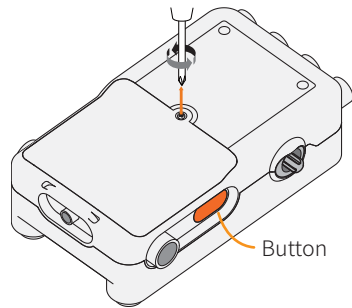

Main control block battery installation diagram

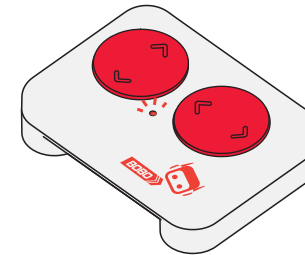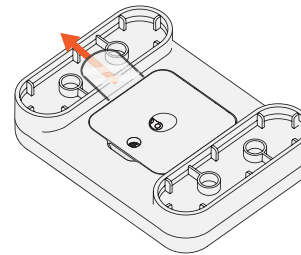

1

Installing the main control block battery

- Use a Phillips head screwdriver. Unscrew the bottom screws counter-clockwise and remove the battery cover.
- Insert four 1.5 V AA batteries in the direction indicated inside the battery compartment.
- Replace the battery cover. Use the screwdriver and screw clockwise to fasten.
- Press the buttons on the sides. The main control block indicator lights will flash, and it will enter sync mode.

2

Remote control sync

- First, remove the transparent insulation strap on the back. Confirm the red indicator light in the front has started to flash.
- Confirm the main control block is on, then press any button on the remote control. The remote control will sync with the main control block.
- After sync is complete, the light on the remote control will automatically go out. If the indicator light continues to flash after 30 seconds, it means sync was not successful. Please re-start the sync process again. (See the "Re-start sync" page.)

Note: The following steps should be done either by an adult or under adult supervision.

*If the remote control isn't used in 20 minutes, the main control block and remote control will go into standby mode. To use again, please first press the button on the side of the main control block.

1



X1



X1



2



X1




X1



3



X2

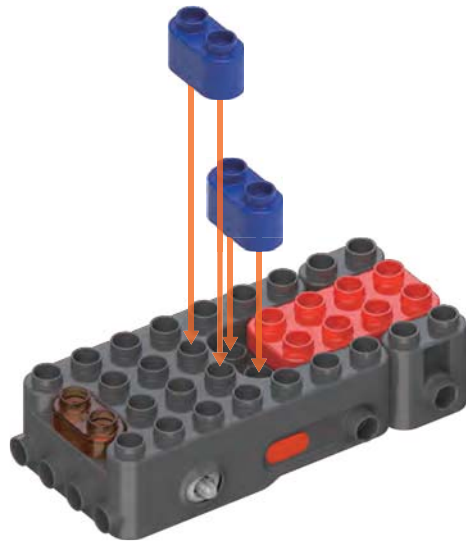

4



X2




5



X1



X1

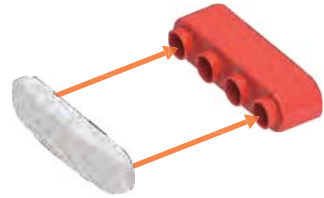


6



X1




X1

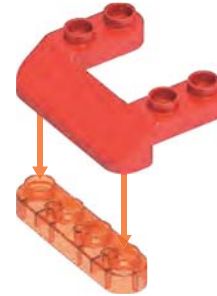

7




X1

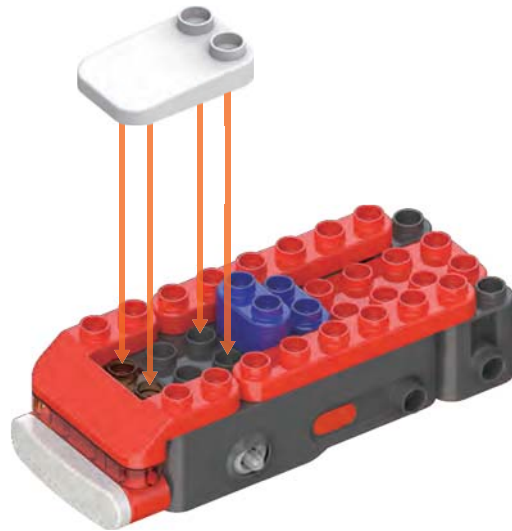

8



X1

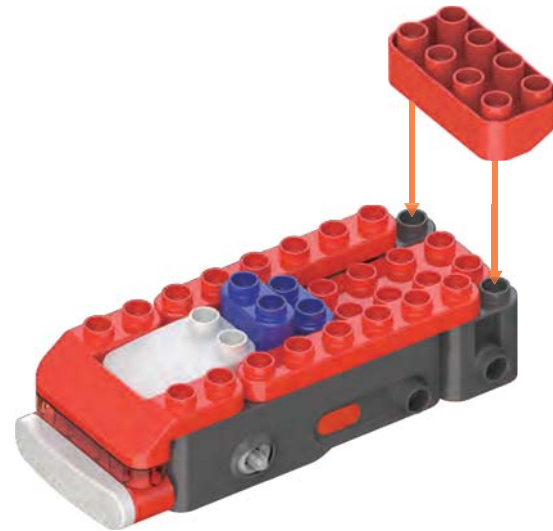

9



X1




10



X1



X1

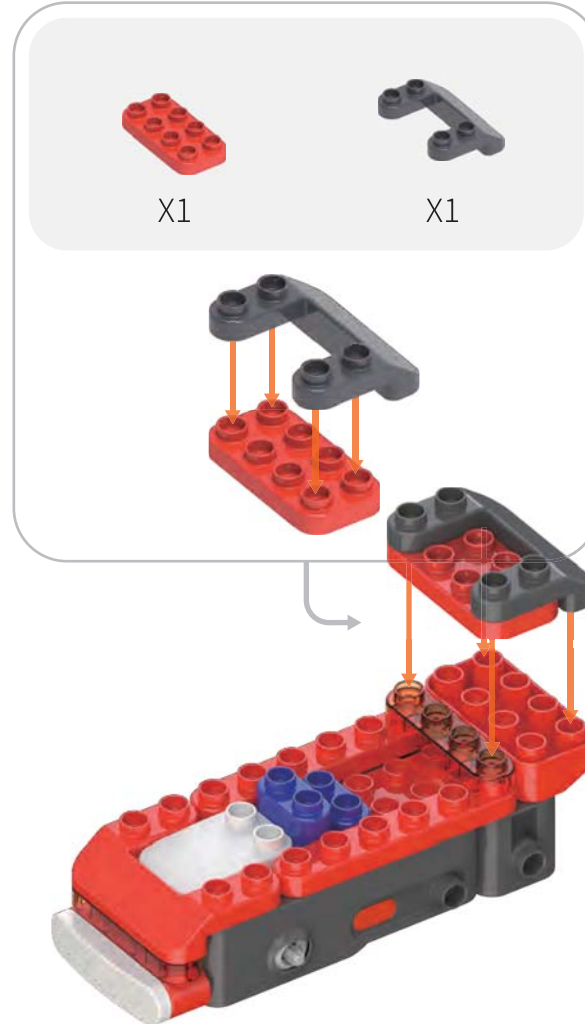

11




X1



12



X1

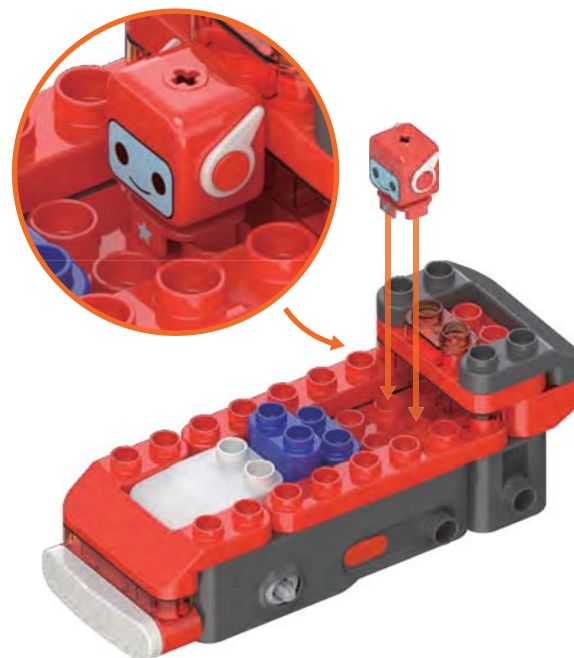

13



X1



14



X1



15



X1



16





X2



X1



X1

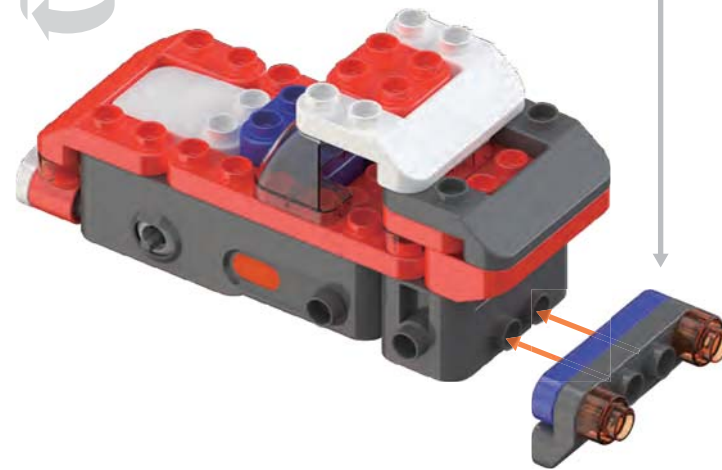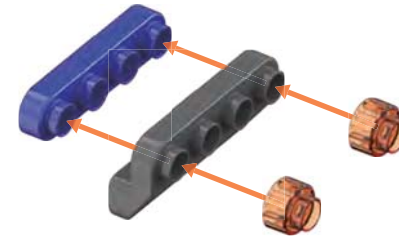

17




X2




18




X2

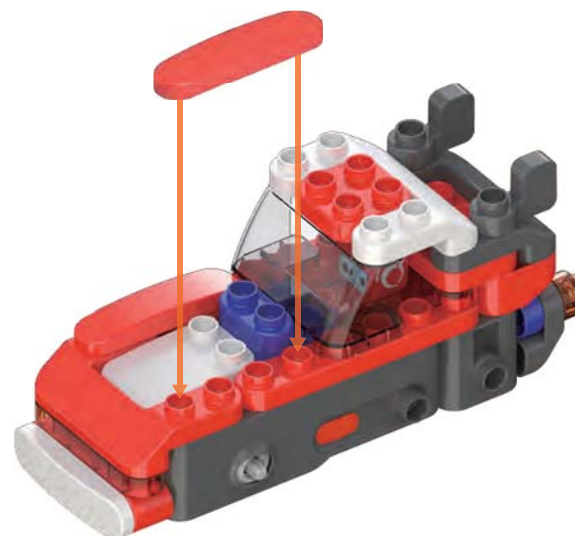

19

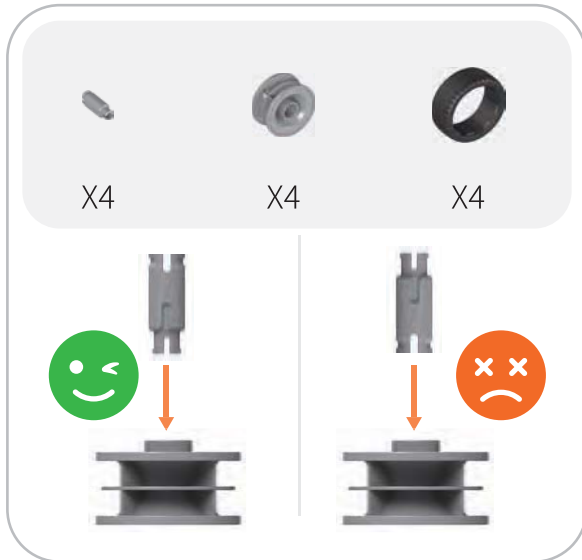


X4

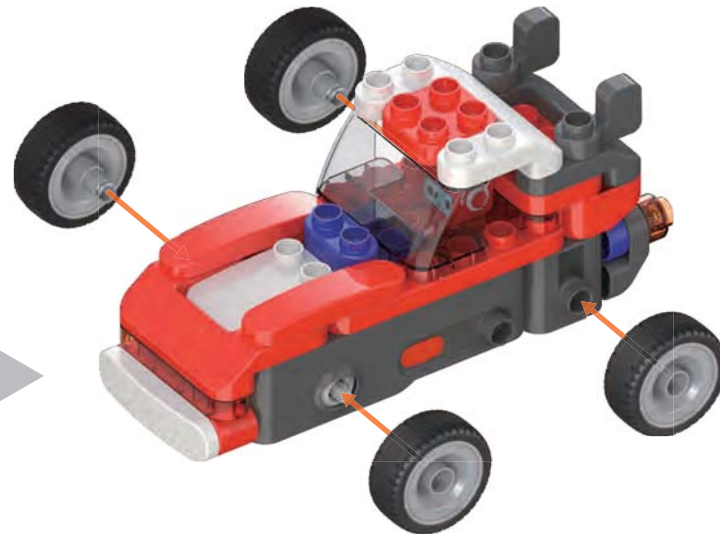

Let your parents help you!

20

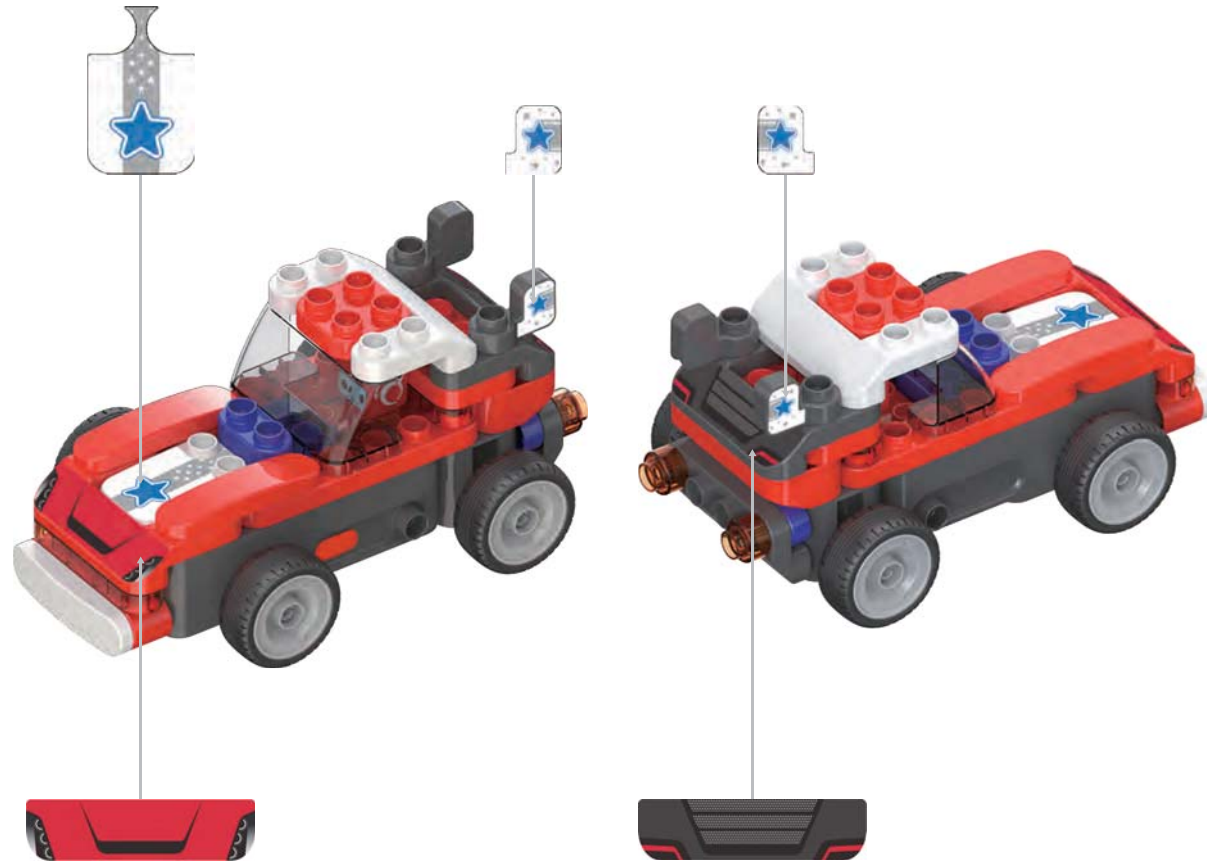

21




X2



X2



X1

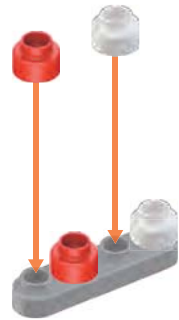

22



X2



X1



X2



23



X1



X2




X3



X4




X1

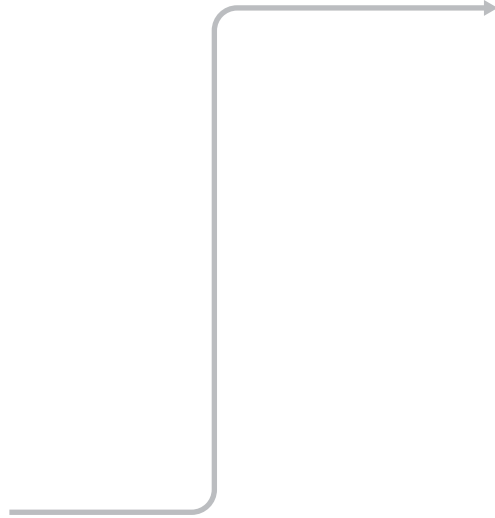


Preparation

Please search "PaiBlocs" on the App Store, or on Google Play for Android users, to download for free.

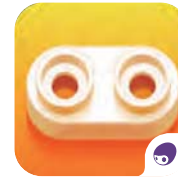

ANDROID APP ON
Google play

Download on the
App Store

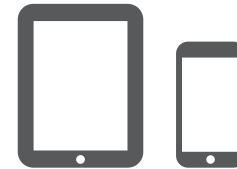

Compatible with

iPhone 5 or above
iPad 3 /iPad Air/iPad Mini2/iPad Pro
and above
Android 4.0 or higher




No 1




Scan the QR code to
unlock more ways to play
with PaiBlok

Installing and changing the batteries

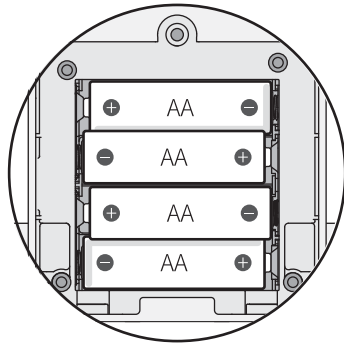

Main control block:
Four 1.5 V AA batteries

Note: The following steps should be done either by an adult or under adult supervision.

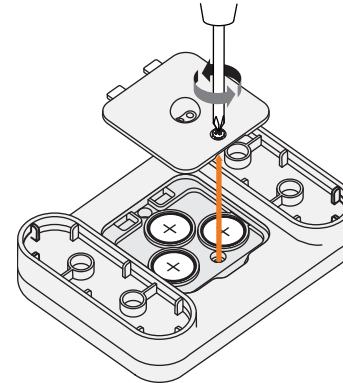

Remote control:
Three 1.5 V AG13/LR44 button batteries

Changing the batteries

Use a Phillips head screwdriver. Unscrew the screws on the battery cover counter-clockwise. Remove the battery cover and take out the batteries. Insert the batteries according to the positive and negative signs inside the battery compartment. Replace the battery compartment cover and screw clockwise to fasten.

FAQs

Q: How do I determine if the car battery is about to run out?

A: The amount of battery power left can be determined by the following situations:
Situation 1: The car's speed is noticeably slow.
Situation 2: Its actions are slow or unresponsive.
Situation 3: It won't start up.


Q: What do I do if the car won't start?

A. There are a few possibilities. Confirm which one applies:
1. The batteries have no power. Please change them.
2. The batteries are installed backward. Please re-install them.
3. The on-off switch isn't switched on. Please try turning it on again.
4. The first time you used the remote control it wasn't synced. Please sync it according to the directions.
5. You didn't remove the transparent insulation tape from the remote control. Please remove it.
6. The wheels have been stopped up with a foreign object, e.g., hair or trash. Please clear it away.
7. If you're still having issues, please contact Customer Service.

How to re-sync



Note: The following steps should be done either by an adult or under adult supervision.

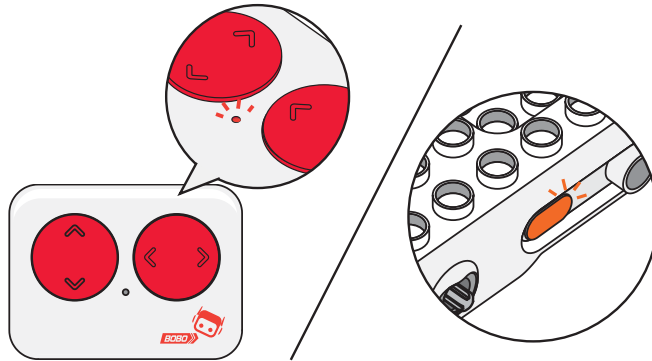

If you discover that the remote control indicator light or main control block indicator light is continuously flashing quickly, or if the remote control has no effect on the main control block, please re-start the sync process.

1. Remove the battery covers of the main control block and the remote control. Remove the batteries.
2. Re-install the batteries of the main control block according to the positive and negative signs indicated inside the battery compartment, then do the same for the remote control.
3. Press the main control block button, then press any button on the remote control to start sync. After sync is successful, the main control block and remote control indicator lights will turn off automatically.

Note:

1. If the lights or sounds are weak or stop working, change the batteries.
2. If the batteries have run out of power, or if you don't plan to use them for a long time, please remove them from the toy. Properly dispose of the old batteries. Do not place them within reach of children, as they pose a choking hazard.
3. Do not charge non-rechargeable batteries. Children should only charge batteries under adult supervision. The batteries should only be charged after removing them from the toy.
4. Do not mix old and new batteries. Do not mix different types of batteries.
5. Please insert the batteries in the correct position according to the positive and negative signs. Do not install them backwards.

Maintenance

1. Keep this product away from strong sunlight and heat.
 2. Do not submerge in water, otherwise it may cause damage to the electronic parts.
 3. Please check the batteries and other accessories before use.
- If you encounter anything broken, immediately stop using the product until the damage has been repaired. Aside from removing the battery, you should not attempt any further disassembly or maintenance on this product.



FCC Compliance Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/television technician for help.

Patent and trademark

©2017 All rights reserved

iPhone, iPad, iPad Mini and iPad Pro are trademarks of Apple Inc.

meets **ASTM_F963, CPSIA, EN71 and RoHS** related standard.
Made in China



Game introduction

PaiBlocs are the newest 2017 product developed by Pai Technology. They're a smart block product suitable for kids 3-12 years old. They can be built into various types of vehicles and objects, and can be moved by remote control and programmed with our app.

Product information

Product name: PaiBlocs Motor Controller
Suitable age range: 4+ years
Company name: PAI TECHNOLOGY LIMITED
11/F, Block 02, 101 King's Road, North Point, Hong Kong

Customer service information

Thank you for choosing Pai Technology. We want to ensure that you have the best experience with our products. If you encounter any technical difficulties or issues with this product, please email our customer service team at cs@putao.com



**MAGIC
BLOCKS**

www.Pai.Technology
FIND US ON FACEBOOK

