



**STOP:** This camera is NOT for standalone use and MUST be paired to a Night Owl® WNIP2 or BTWN8 Series Wi-Fi NVR. Only install a camera in its final location AFTER it's paired, and setup is completed.

## Hardware Setup

- 1 Install the batteries. Press the button on the camera's belly to release the battery cartridge and insert the batteries. Replace the cartridge and connect the USB cable to the port under the rubber piece.

**NOTE:** Each camera requires 2 rechargeable batteries, but can hold up to 4 batteries. Use of 3rd party batteries may damage the camera and void your warranty. Compatible batteries can be purchased at [NightOwlSP.com](http://NightOwlSP.com).



- 2 Charge the camera(s) for at least 3 hours. Lift the rubber piece on the camera's belly and connect the USB cable to the camera and a USB power supply. Please ensure the batteries are installed or the camera(s) will not charge.



- 3 This camera is not for standalone use and must be added to a compatible Night Owl® Wi-Fi NVR. Based on which Wi-Fi NVR you have, scan the QR Code for easy-to-follow instructions on pairing your new camera.

**a** **Wi-Fi NVR**

**Series:**    **Model #'s:**  
 WNIP2    WNVR-WNIP2-1



Option 3a Setup Video

**b** **Wi-Fi Bluetooth® NVR**

**Series:**    **Model #'s:**  
 BTWN8    WNVR-BTWN8-1



Option 3b Setup Article

## Placing the Camera in Pairing Mode

 
If the camera is not in pairing mode, press the button on the camera's belly to release the battery cartridge. Press and hold the reset button for 10 seconds or until the camera says, "Camera is in Pairing Mode."



**NOTE: The camera MUST be reset if it isn't paired to a Recorder within 2 minutes.**

## Status Light

Pairing Mode:	<b>GREEN</b> light flashes rapidly
Failed to Connect:	Solid <b>RED</b> light
Charging:	<b>GREEN</b> light flashes slowly
Fully Charged:	Solid <b>GREEN</b> light



**NOTE: For a complete list of Status Lights, see your owner's manual by visiting our support site and typing BWNIP2 into the search bar.**




# NEED HELP?

Why Call? Our Support Site Has it All!

For system manuals, troubleshooting guides, FAQs, video tutorials and more:


- 1 Please visit **Support.NightOwlSP.com**
- 2 Enter **BWNIP2** into the Search bar.

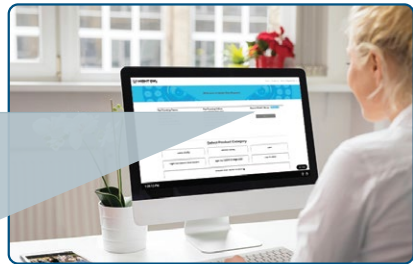

Search Model / Series [Show me](#)

Search

Search

 For more Support Videos, go to [www.youtube.com/nightowlsp](http://www.youtube.com/nightowlsp)

#### FCC RADIATION NORM

FCC  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC Compliance Statement These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### CAUTION!

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment should be installed and operated with a minimum distance of 8 inches between the radiator and your body.