

 **STOP:** Only install a camera in its final location AFTER it's connected and setup is complete.

Connecting your Wire Free Camera:

Step 1


If you are a first-time user, go ahead and download the Night Owl app. Quickly create an account and log in.

Already have an account? Simply log in.



Step 2

Tap the "Add New" button and the app will guide you through the setup process.

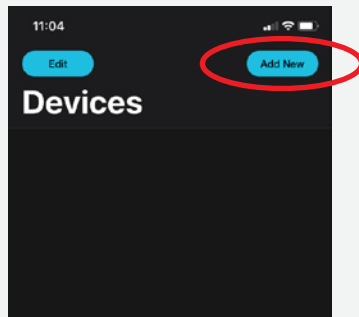

Step 3

For more detailed steps, use your Smart Device camera to scan the QR code below.






NEED HELP?

Why Call? Our Support Site Has it All!

For system manuals, troubleshooting guides, FAQs, video tutorials and more:

- 1 Please visit **Support.NightOwlSP.com**
- 2 Enter **BWNIP4** into the Search bar.

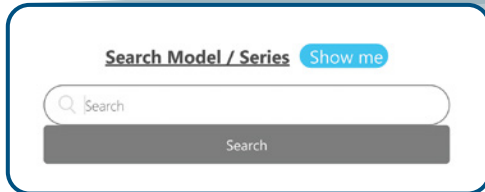

For more Support Videos, go to www.youtube.com/nightowlsp

FCC RADIATION NORM

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Compliance Statement These limits are designed to provide reasonable protection against frequency interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed or used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION!

The Federal Communications Commission warns the user that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance of 8 inches between the radiator and your body.