

---

# Auger Jogger

## **Powering your Auger Jogger on:**

There are 2 ways to turn the control box on and off:

1. Hold the on/off button on the control box for 3 seconds.
2. Remote control- hold buttons 1 and 2 down simultaneously for 3 seconds.

The green LED light indicates that the control box is turned on and ready to operate.

Note: If your Auger Jogger won't power up be sure you have 12 volts, as some tractors have 2-6 volt batteries in series. If this is the case, you will need to hook your positive to the positive battery post that goes to the starter and your negative to the frame.


## **Operation of the Auger Jogger control box:**

Once your control box is powered up, you can use the preprogrammed buttons 1 and 2 to move your auger tub left and right. You can also use the buttons on the front of the control box (swing buttons) left and right to manually move your auger.

## **Operation of optional LED work light:**

Optional light feature: powering on and off: The light will automatically turn on when you move your Auger Jogger. It will also shut itself off after 5 minutes of non-use.

The light can also be turned on and off manually. This is done by pressing the light button on the control box or by holding Buttons 1 and 2 on the remote simultaneously for 1 second.

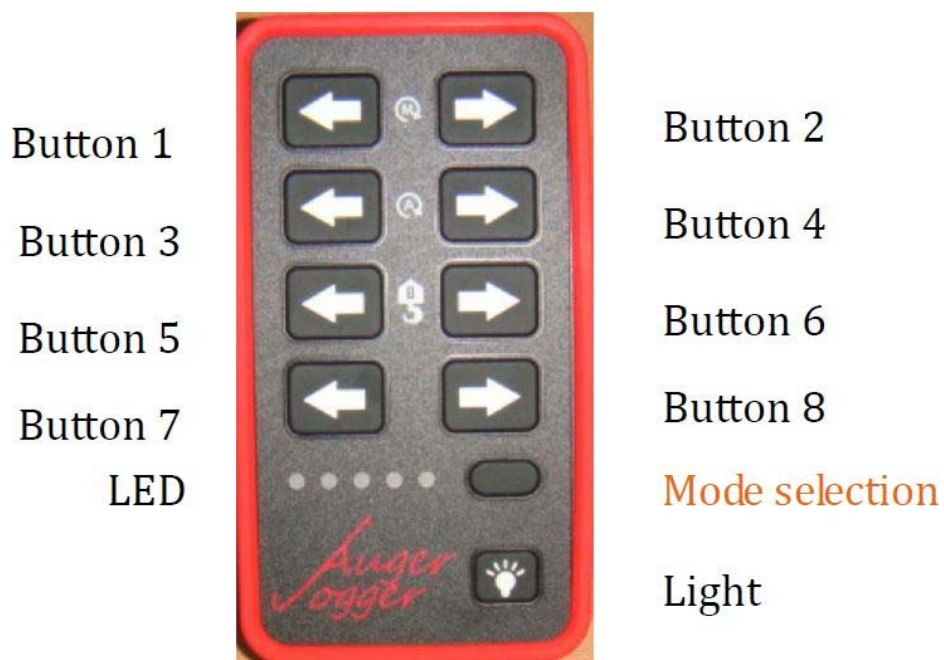

### **Remote Control Programming**

Your Auger Jogger comes preprogrammed with buttons 1 and 2 to operate the unit. If you need to add more remotes, or program multiple units to one remote, do the following:

Step 1: Press and hold on/off button and light button simultaneously until LED light blinks red.

Step 2: Press button 1 on each remote and let off. (You have seven seconds to program all of the remotes, so make haste).

\*If you desire to use buttons 3 and 4, press button 3 on each remote.

\*If you desire to use buttons 5 and 6, press button 5 on each remote.

\*If you desire to use buttons 7 and 8, press button 7 on each remote.

When the LED light on the control box turns green again, you're back in operation mode.

Every time you put your box into programming mode, it will erase all the previously stored remotes, so you will have to reprogram all the remotes during one programming session.

---

**Remote control features:**

The Auger Jogger remotes can run up to three Auger Jogger systems.

Only two buttons are needed per system. For example, buttons 1 and 2

can run one Auger Jogger. Buttons 3 and 4 can run a second Auger

Jogger. Buttons 5 and 6 can run a third Auger Jogger.

Buttons 7 and 8 can run a fourth Auger Jogger system

**Remote control functions:**

To remotely power up and power down control box press and hold

buttons 1 and 2 simultaneously for three seconds.

To remotely power up and power down the LED work light press and

hold buttons 1 and 2 for one second.

To move your tub left or right press and hold buttons 1 and 2 independently.

---

***FCC rule and regulation***

This device complies with Part 15 of the FCC Rules and Canada license-exempt RSS-210 standard. Operation is subject to the following two conditions:

**OPERATIONS ARE SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

**(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE**

**(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.**

Le manuel d'utilisation des appareils radio exempts de licence doit contenir l'énoncé qui suit, ou l'équivalent, à un endroit bien en vue et/ou sur les appareils :

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.