

288mm

64mm

TWS WIRELESS HEADSET

Operating instruction

BTE400

FCC ID: 2APU5-BTE400
Product parameters are laboratory test data, the specific data is subject to the use of data

Product diagram

Headset Configuration

Product model: BTE400 Version: 5.3
Running time: about 5 hours Call time: approximately 5 hours
Operation mode: touch operation Charging time: about 1 hour
Effective distance: >10 m Horn: copper ring 13mm

Packing list

1. charging box *1 2. Left and right earphones *1
3. Product Manual *1 4. Charging cable *1

Charging bin configuration parameters

Material: ABS
Charging time: about 1 hours

Wearing a way

Open the cover of the charging bin, take out the earphone of the right ear, gently put the speaker end of the earphone into the ear canal of the right ear, and then gently sway the earphone not to shake.

Mode of operation

1. The boot
(1) Open the charging compartment cover, take out the earphones, automatically turn on, earphones red and blue lights flashing
(2) When the headset is off, touch the touch pad of the headset for 3 seconds to start the headset

2. To turn it off
(1) Put the earphone e back into the charging bin and close the cover. The earphone will be turned off and charged
(2) When the headset is on, touch the touch pad of the headset for 4 seconds to turn it off

Pairs of ears connected

1. Open the cover of the charging compartment, take out the earphone and start it automatically. The earphone breathing light flashes, and enter the automatic team formation state, one of the earphone lights is off, indicating that the team formation is successful
2. Open the device wireless list and search for "BTE400"
3. Click "BTE400" to connect. If the connection fails put the earphone back into the charging bin and cover it, and then repeat the above steps

4. When both ears leave the normal connection distance with the device at the same time, the headset will enter the wireless headset connection state. If the connection is not successful within 5 minutes, the headset will automatically shut down.

After the device is connected for the first time, the headset will automatically connect to the last pair device when it is restarted next time

Binaural touch operation

- Play/pause music: Under music status, tap the L/R earphone once
- Play the previous song: Under music status tap L earphone 2 times
- Play next song: Under music status, tap R earphone 2 times
- Under music status, 3 times tap L earphone volume +
- Under music status, 3 times tap R earphone volume -
- Answer the phone: tap the L/R headset
- Refuse to answer the call: Long press L/R earphone for 2 seconds
- Voice assistant: Long press L/R for 1.5 seconds

Earphone charging: Put the earphone into the charging box to automatically charge, close charging cover, the red LEDs will be illuminated, red LEDs will turn off when fully charged.
Charging box low power: The single digit of the digital tube flashes.
Charging box charging: The single digit of the digital tube flashes, and it stops when it is fully charged and 100 is displayed in digital tube.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

288 x 64mm 70g书纸 单面印刷

说明书风琴页折法:

TWS WIRELESS HEADSET

Operating instruction

BTE400

FCC ID: 2APU5-BTE400
Product parameters are laboratory test data, the specific data is subject to the use of data

Product diagram

Headset Configuration

Product model: BTE400 Version: 5.3
Running time: about 5 hours Call time: approximately 5 hours
Operation mode: touch operation Charging time: about 1 hour
Effective distance: >10 m Horn: copper ring 13mm

Packing list

1. charging box *1 2. Left and right earphones *1
3. Product Manual *1 4. Charging cable *1

Charging bin configuration parameters

Material: ABS
Charging time: about 1 hours

Wearing a way

Open the cover of the charging bin, take out the earphone of the right ear, gently put the speaker end of the earphone into the ear canal of the right ear, and then gently sway the earphone not to shake.

Mode of operation

1. The boot
(1) Open the charging compartment cover, take out the earphones, automatically turn on, earphones red and blue lights flashing
(2) When the headset is off, touch the touch pad of the headset for 3 seconds to start the headset

2. To turn it off
(1) Put the earphone e back into the charging bin and close the cover. The earphone will be turned off and charged
(2) When the headset is on, touch the touch pad of the headset for 4 seconds to turn it off

Pairs of ears connected

1. Open the cover of the charging compartment, take out the earphone and start it automatically. The earphone breathing light flashes, and enter the automatic team formation state, one of the earphone lights is off, indicating that the team formation is successful
2. Open the device wireless list and search for "BTE400"
3. Click "BTE400" to connect. If the connection fails put the earphone back into the charging bin and cover it, and then repeat the above steps

4. When both ears leave the normal connection distance with the device at the same time, the headset will enter the wireless headset connection state. If the connection is not successful within 5 minutes, the headset will automatically shut down.

After the device is connected for the first time, the headset will automatically connect to the last pair device when it is restarted next time

Binaural touch operation

- Play/pause music: Under music status, tap the L/R earphone once
- Play the previous song: Under music status tap L earphone 2 times
- Play next song: Under music status, tap R earphone 2 times
- Under music status, 3 times tap L earphone volume +
- Under music status, 3 times tap R earphone volume -
- Answer the phone: tap the L/R headset
- Refuse to answer the call: Long press L/R earphone for 2 seconds
- Voice assistant: Long press L/R for 1.5 seconds

Earphone charging: Put the earphone into the charging box to automatically charge, close charging cover, the red LEDs will be illuminated, red LEDs will turn off when fully charged.
Charging box low power: The single digit of the digital tube flashes.
Charging box charging: The single digit of the digital tube flashes, and it stops when it is fully charged and 100 is displayed in digital tube.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

TWS WIRELESS HEADSET

Operating instruction

BTE400

FCC ID: 2APU5-BTE400
Product parameters are laboratory test data, the specific data is subject to the use of data

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

折后正面

折后背面

折后尺寸: 48 x 64mm

第1折痕

第2折痕

第3折痕

第4折痕

第5折痕

标准说明书

JMTek

图号
型号
料号

BTE400-SMS-JMT001

BTE400

版次
日期

第1版
240523

材料
设计

Steven

颜色
批准

单位
客户回签

mm

第三角度投影



第 1 张 共 1 张