FRONT

USER MANUAL



What's in the box?

- 1. Speaker*1
- 2. User manual*1
- 3. Type-C cable*1

MADE IN CHINA

Notice

- 1. Keep the product dry; do not place the product in damp places.
- Keep out of direct sunlight and high temperatures. High temperatures may result in damage.
- Keep out of cold temperatures, this will help avoid internal damage.
- 4. Do not disassemble the product.
- Avoid dropping the product.
- 6. Do not continue to charge the speaker over 10 hours
- 7. When charging, use the Type-C charging cable supplied with the speaker.

Instruction







- ① Power button
- ② TF card slot
 - lot ©
- 4 LED indicator
- ⑤ Type-C charging port
- Next track/Volume increase
 Previous track/Volume decrease

Function	Operation	LED indicator
Power on	Press and hold the power button for 2s	Blue for 1s
Pairing mode	Enter pairing mode automatically after on	Flash blue
Power off	Press and hold the power button for 2s	Off
Volume +	Short press "+" button	Blue
Volume -	Short press "-" button	Blue
Next track	Press and hold "+" button for 1s	Blue
Previous track	Press and hold "-" button for 1s	Blue

Charging the Speaker

- 1. Switch off the speaker before charging.
- 2. Plug the Type-C cable into the speaker charging port.
- Plug the other end of charging cable into a computer or power adapter.
- 4. Plug the power adapter into a power outlet.
- When charging the LED indicator will be solid on red, and will turn off automatically when fully charged.

Note: Please charge the speaker battery fully before use.

BACK

Pairing the speaker

- 1. Turn on the speaker by long pressing the power button for 2s.
- 2. The device's LED indicator will flash blue.
- On the mobile device (smartphone/tablet) turn on the BT connection.
- Select "BTS30" in the available wireless devices on your mobile device

TF card mode

Insert the TF Card (User-supplied) into the speaker, the speaker enter TF card mode, automatically play the audio in the card when power on. Note: TF card supports WAV/FLAC/APE/MP3 format, with capacity smaller than or equal to 32GB.

AUX-in mode

Simply connect the speaker with your non-Bluetooth device via the 3.5 mm audio jack calbe when the speaker power on.

Specification

Bluetooth version: 5.3 Working range: up to 10 meters Speaker: 4Ω 5W/each Battery: 3.7V, 1200mAh/each Input: DC 5V/1A

Charging time: about 2 hours

Playing time: about 6-8 hours (at 70% volume)

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not

cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from
- that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in

portable exposure condition without restriction.

Note 2: Any changes or modifications to this unit not expressly approved by the part responsible for compliance could avoid the user's authority to operate the equipment.

Trouble shooting

The twin speakers will be connected to each other automatically when both are on.

If two speakers could not be connected to each other successfully, please manually pair them as per the following steps:

- 1. Turn on twin speakers, and do not pair any Bluetooth devices;
- Press and hold "+" &"-"simultaneously on any one speaker, then you will hear a beep;
- 3. Then the twin speakers will connect to each other successfully;