

260mm

95mm

Microphone Bluetooth Speaker Instruction Manual

Please read the following carefully before using this device to ensure safe and proper usage.


**Important:** Before using your wireless speaker with microphones for the first time, fully charge it.

SPECIFICATIONS

Input (Type-C): 5V 2A at the back (for the main unit) or on the base (for the main unit and microphones). Designed with pogo pin connectors and mating pads for charging the main unit and microphones. Includes AUX input, TF/USB card playback.


Output value in Watt	5W
Bluetooth version	5.3
Charging time	160 minutes
Total play time at 50% volume (hours)	6 hours
Pick up function	No
Operating distance	10m.
Speaker driver	57mm.
S/N Ratio	>65dB
Frequency range	200Hz-18KHz
Pairing name	MBT200
Battery capacity speaker	2000mAh
Battery capacity microphones	1200mAh*2

DEVICE LAYOUT TOPPANEL

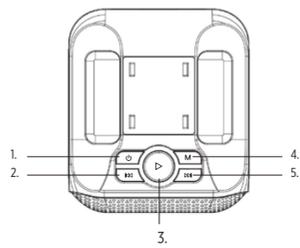

1. Turn the power on or off
2. Volume down or previous track
3. Play or pause
4. USB disk, TF card or Bluetooth; RGB lightcontrol
5. Volumeup or previous track


BACKPANEL

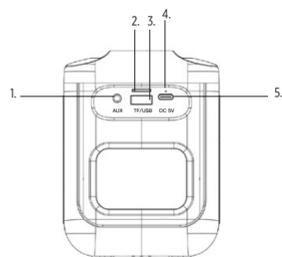

BACKPANEL

1. AUX IN  
Connect an external audio device using a 3.5mm audio cable.
2. TF CARD  
Insert a TF card to play.
3. USB DISK  
Insert a USB flash drive to play.
4. LED LIGHT  
Displays the status of charging and microphone connection.  
- The red LED lights up when charging and goes out when fully charged.  
- The blue LED lights up when connected and flashes when disconnected.
5. TYPE C PORT  
Connect to a power supply to charge the main unit.

POGO PINS AND MATING PADS

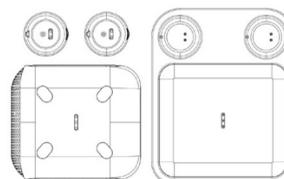


Please place the main unit and microphones into the base. They will be charged when needed.

**NOTE:** Ensure that the microphones slide down the slot into the base connecting the pogo pins to the mating pads.

正面  
(Front)

MICROPHONE PANEL

1. To control power and various volume settings:  
- Turn the power on or off.  
- Switch between music volume, micro volume, and reverberation volume.  
- Play or pause by double-clicking.
2. To increase volume or move to the next track.
3. To decrease volume or go to the previous track.
4. To control the microphone:  
- Switch between "original sound on" and "original sound off".

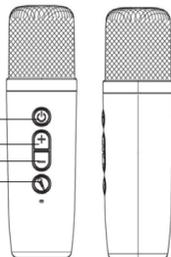

POWER ON

To power on the device and enter Bluetooth pairing mode, press and hold the power button for 3 seconds.

USING

- NOTES:**
- Only one sound source can be played at a time. The priority order is TF/USB/BLUETOOTH/AUX.
  - Starting a source with higher priority will always interrupt a source with lower priority.
  - To start a source with lower priority, stop the source with higher priority first.

BLUETOOTH CONNECTION:

- You can use the speaker with your Bluetooth-enabled smartphone or tablet.
- Choose "MBT200" on your Bluetooth device to connect.
- Once successfully connected, you can stream audio from your Bluetooth device to this speaker.
- To terminate the Bluetooth-enabled device:  
• Turn off this speaker or  
• Disable Bluetooth on your device.
- To reconnect the Bluetooth-enabled device:  
• When you turn on this speaker next time, it tries to reconnect the last connected device automatically.
- If not, manually select "MBT200" on your Bluetooth device to connect.

TF/USB CONNECTION

Insert a TF card or USB storage device containing playable audio content into the TF card slot or USB port of the speaker.

- The speaker will switch to the TF card or USB source automatically.
- Audio playback will begin automatically.

MUSIC CONTROL

Press the "play" button once to pause or resume playback.

AUX CONNECTION

1. Attach an external audio device to the speaker using a 3.5 mm AUX cable (cable not included).
2. Once playback from any other source has been stopped, commence audio playback on the external device.

MIXING SOUND WITH A MICROPHONE

When utilizing a microphone, you have the ability to blend sound with an audio source.

NOTES:

- Prior to connecting or disconnecting the microphone, ensure that the microphone volume is set to the minimum level.
- When not in use, always switch off the microphone.

CONNECTING THE MICROPHONE

The wireless microphone is pre-paired with the speaker by default at the factory.

- Turn on the speaker and then the supplied wireless microphones one by one. You will hear a prompt tone once the wireless connection is successfully set up.

SING THROUGH THE MICROPHONE

To adjust the volume of the audio source, press the "+" or "-" button once to increase or decrease it.

LIGHT EFFECT

You can switch between seven performance styles by double-clicking "M". Press and hold the "M" button for 3 seconds to turn off the light.

RECHARGING YOUR MAIN UNIT AND MICROPHONES:

To recharge your main unit and microphones, place them into the base and use the provided USB cable to connect the Type-C port on the base to a USB wall charging adapter. During the recharge process, the red LEDs will be illuminated. Once the main unit and microphones are fully charged, all red LEDs will turn off. You can also charge the main unit separately by connecting the supplied USB cable to the Type-C port on the back of the main unit to a USB wall charging adapter.


NOTICE

1. Keep the product dry; do not place the product in damp places.
2. Keep out of direct sunlight and high temperatures. High temperatures may result in damage.
3. Keep out of cold temperatures; this will help avoid internal damage.
4. Improper usage can lead to explosions or the risk of chemical burns. When damaged, batteries can cause chemical burns upon contact with human skin.
5. Do not disassemble the product.
6. Avoid dropping the product.
7. Do not continue to charge the product over 10 hours.
8. When charging use the Type-C charging cable that came with the product.
9. Only charge with devices rated and marked with 5V to avoid damage to the speaker.
10. Battery life and number of charge cycles varies by use and settings.
11. Keep away from small children. This is not a toy.
12. To maintain good battery health, the item should be recharged every 6 months. The battery will lose capacity when stored without charging.

背面  
(Back)

260 x 95mm 70g书写纸 双面印刷


说明书折法:

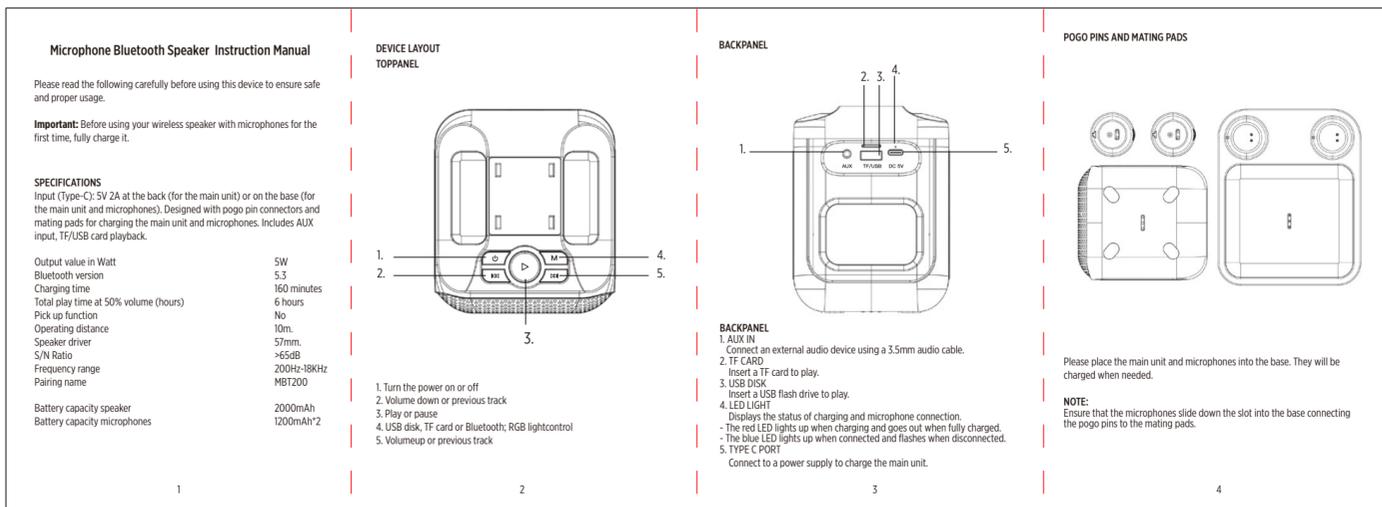


第1折痕

第2折痕

第3折痕

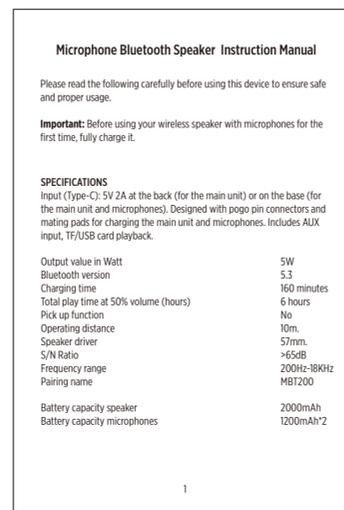

折后正面

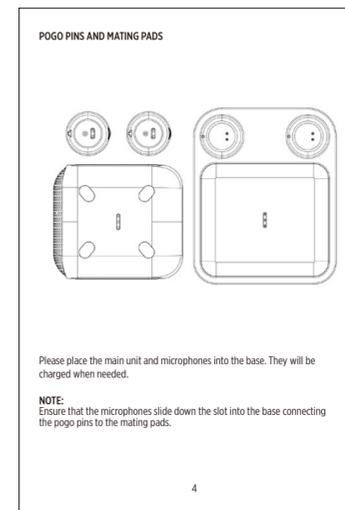

折后背面

折后尺寸: 65 x 95mm

标准说明书

JMTek

图号	MBT200-SMS-JMT001
型号	MBT200
料号	

版次	第1版	材料	
日期	240513	设计	Steven
第三角度投影			

颜色		单位	mm
批准		客户回签	
第 1 张		共 1 张	

## FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and

This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.