

Power Bank with Wireless Charging Instruction Manual

Congratulations on your purchase of this power bank with wireless charging. To ensure a long service life and optimal functionality of the product we recommend that you read this manual carefully.

Wireless charging at home/in office

Connect the device to the power outlet using the Type-C cable attached to the PC, laptop, or USB adapter. The LEDs will light up during the charging process. As long as one or more LEDs are flashing, the charging process has not yet been completed. If all LEDs are lit continuously, the charger is fully charged.

Make sure the device is secure and cannot wobble or fall down. Place your mobile phone (or other device) on the transfer surface. Please, see the sketch:

Package Content:

- 1 Power bank
- 1 USB Cable
- 1 User Manual

Specifications:

Capacity: 5000mAh/3.7V
Input: 5.0V/2A
Output: 5.0V/2.4A (USB Port)
Wireless Output: 5.0V/1.0A 5 watt

Product description:

First Use:

First make sure that the product is intact and the delivery is complete. Before using the appliance for the first time, charge the unit completely! We recommend devices with "2A output", then the charging time is about 2-3 hours

Battery indication:

The LED indication shows the current battery status. Please press the button to see the result:


1 LED < 25% 2 LEDs < 50% 3 LEDs < 75% 4 LEDs < 100%

In case only 0-1 LEDs are flashing, the battery status is less than 10%. Please recharge the charger.

Power bank function (wireless and by cable):

You can use this charger also as a power bank. Place your mobile phone on the charger as shown above. Press and release the button for starting charging procedure. To stop the charging function, press the button again twice or simply remove the mobile phone.

Make sure the device is correctly located on the wireless charger. See the following illustrations as it is correct (hook) and False (cross).

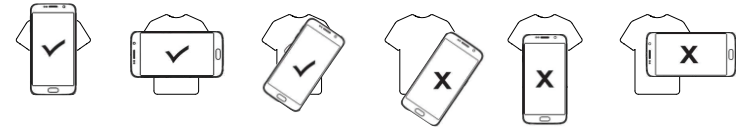

Note: In case your mobile phone does not support wireless charging, please connect it to the USB output of the charger by using the original cable.

Recharging:

Connect the charger to the USB port of computer, laptop or USB adaptor by using the Type-C cable. While charging procedure, all LEDs are ON. If there are one or some LEDs flashing, the charging is not completed. In case the charger is fully charged, all LEDs are illuminated constantly.

Security advice:

Attention

- Incorrect usage can cause explosions / danger of chemical burn.
 - Damages batteries can cause chemical burn when they get in contact with human skin.
- Do not disassemble the item.
- Never throw the item or parts of it into fire.
- Never expose the item to high temperature changes Hot/Cold or humidity or liquids.
- Keep away from children, no toy!
- Do not use if the items or parts of it are damaged.
- Store in a clean and dry space.
- To maintain 100% battery capacity and to prevent damage by depth discharge the item should be recharged every 6 months. Battery will loose capacity when stored without charging.
- If the product gets very hot, please disconnect the item and do not use it.

NOTE: This device complies with part 18 of the FCC Rules.

Information to the user.

1. The device has potential interference, but the interference is very small and meets the requirements of the FCC rule
2. Equipment system maintenance is simple, please refer to the manual
3. The user can take simple measures to correct the interference. Such as staying away from interference sources, turning off interference sources, etc.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure compliance statement:

This device has been evaluated to meet the general RF exposure requirement, it can be used in portable exposure condition without restriction.