

CQL1524-B Bluetooth Speaker

Instruction Manual (Read before proceeding)



Getting Started

- Please charge your Bluetooth speaker fully before its first use.
- To charge the battery:
Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located on the left of the speaker. Connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter.


The LED indicator will turn RED while charging and turn off when fully charged. On low power, a tone will be periodically heard, indicating that the speaker should be charged.

The speaker will power off automatically when there is no any device connected over 5 mins.


 
Powering ON/OFF

- Press and hold the  button, a voice will be heard indicating power on and the Bluetooth LED indicator will quickly flash .
- The speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any nearby previously paired devices.
- Press and hold the  button again, a voice will be heard indicating power off.

Playing Music via Bluetooth

- Press and hold the  button, the speaker will enter Bluetooth pairing mode and the Bluetooth LED indicator quickly flashing.
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named “ XXX ”.
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password” 0000” .)
- After a successful pairing, a voice will be heard and the Bluetooth LED indicator will be solid blue.
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

Adjusting Volume and Playback

- Press and hold the  and  buttons on speaker to adjust volume, or use the controls on a connected device. A voice will be heard when the volume reach maximum.

- Press the ⏮ and ⏭ buttons on the speaker to skip tracks
- Press the ⏸ button to pause and resume playback.
- Press and hold the ⏸ button, [a voice will be heard](#), Bluetooth will be disconnected, press again to reconnect.
- Press the 📞 button to answer an incoming phone call. Press again to end the call.
- Double press the 📞 button to redial the last outgoing number.
- Press and hold the 📞 button to reject an incoming call.

Caution:

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

Using the Speaker in Wet Conditions

This speaker has an Ingress Protection rating of IPX4. This means that it is protected against water splashes from all directions. It is NOT protected from submersion in water, such as flooding.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction