

**CQL1671-B Bluetooth Speaker**  
**Instruction Manual (Read before proceeding)**

**Power:**

- Please charge your Bluetooth speaker fully before its first use.  
To charge the battery:
- Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located on the back of the speaker. Connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter.
- When your Bluetooth speaker is charging, the indicator light will turn red.
- Once your Bluetooth speaker is fully charged, the red light will turn off.

**Playing Music via Bluetooth**

- Turn your Bluetooth speaker on by sliding the power switch located on the back of the speaker to ON position to activate the Bluetooth function.
- The blue indicator light will flash quickly. This indicates that the speaker is in pairing mode and is searching for your Bluetooth device.
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named, " **AR526**".
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password "0000".)
- Once your speaker is paired, the blue indicator light will begin to flash slowly.
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

**Light Operation**

- **Switch the on off button to ON position, the speaker will be activated with no lights.**
- **Press the lighting mode button, the lights will dance to the music when music comes in.**
- **Press the lighting mode button again, the lights will slowly change between 7 colors.**
- **Press the lighting mode button again to set a certain color from 7 colors.**
- **Press the lighting mode button again, the lights will become steady white color.**
- Press the lighting mode button one more time to turn the lights off. Or switch the on off button to off position to turn off the whole speaker.

**Caution:**

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.

- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

### **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.