

CQL1725-B Bluetooth Speaker SURE

Instruction Manual (Read before proceeding)

Getting Started

- Please charge your Bluetooth speaker fully before its first use.
- To charge the battery:
Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located on the left of the speaker. Connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter.

The LED indicator will turn RED while charging. On low power, a tone will be periodically heard, indicating that the speaker should be charged.

Powering ON/OFF

- Move the Power switch to the ON position. a voice will be heard and the speaker will enter Bluetooth pairing mode.
- The speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any nearby previously paired devices.
- Move the Power switch to the OFF position to power OFF.

Playing Music via Bluetooth

- Power the speaker ON. A VOICE will be heard and the speaker's light ring will flash
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named "XXX".
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password "0000".)
- After a successful pairing, a voice will be heard and the the speaker's light ring will continue to flash.
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

Using the FM Radio

- Press the M button until you hear a voice indicating FM mode.
- Press the [📶] button to search for stations.
- Press the ⏪ and ⏩ buttons to skip station.
-

For best reception, insert the small connector of the supplied USB charging cable into the USB charging port on the side of the speaker but do not plug the large connector into anything. The cable will operate as an antenna.

Position the speaker and the cable so that it has clear line of sight to the sky.

Using a TF Card

- While the speaker is powered off, insert a TF card into the TF card slot. A voice will be heard, indicating that the speaker is in TF card mode and will automatically play from the TF card.
- Skip tracks using the ⏮ and ⏭ buttons on the speaker
- Pause and resume playback with the [⏸] button.
-

Note: TF cards can only be inserted in one direction. If the card does not easily slide and clip into place, remove, turn it around, and re-insert into the slot.

Using the USB Audio Input

- Plug the USB connector of your music playing device into the USB audio input port on the speaker. If the speaker does not automatically switch to USB input Mode, press the M button until a voice indicates USB mode.
- Skip tracks using the ⏮ and ⏭ buttons on the speaker
- Pause and resume playback with the [⏸] button.

Adjusting Volume and Playback

- Press and hold the ⏮ and ⏭ buttons on speaker to adjust volume, or use the controls on a connected device.
- Press the ⏮ and ⏭ buttons on the speaker to skip tracks
- Press the [⏸] button to pause and resume playback.
- Press and hold the [⏸] button, Bluetooth will be disconnected, press again to reconnect.
- Press the [⏸] button to answer an incoming phone call. Press again to end the call.
- Double press the [⏸] button to redial the last outgoing number.
- Press and hold the [⏸] button to reject an incoming call.

Caution:

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.