


# CQL1820-B Bluetooth Speaker

## Instruction Manual (Read before proceeding)

### Getting Started

- Please charge your Bluetooth speaker fully before its first use.
- To charge the battery:  
Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located on the back of the speaker. Connect the other end of the USB cord into a powered USB source such as a computer, laptop or USB AC adapter.
- When your Bluetooth speaker is charging, the indicator light will turn red.
- Once your Bluetooth speaker is fully charged, the red light will turn off.

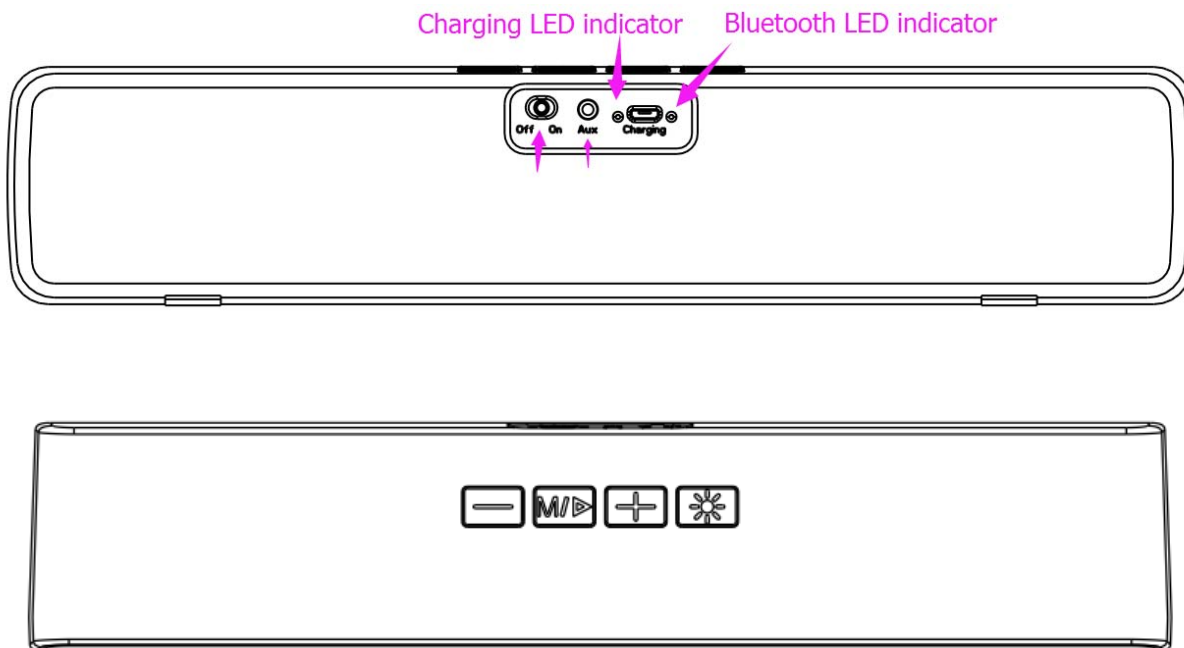

Button functions:



button to pause/resume playback.



[Press] Previous track

[Press + Hold] Decrease sound volume



[Press] Next track

[Press + Hold] Increase sound volume

### Powering ON/OFF






- Slide the [POWER] switch to the ON position to power on. A tone will be heard and the LED light on and the speaker will enter Bluetooth pairing mode. The speaker will automatically re-pair to any nearby previously paired devices.
- Slide the [POWER] switch to the OFF position to power off

### Playing Music via Bluetooth





- Turn your Bluetooth speaker on by sliding the power switch located on the back of the speaker to ON position to activate the Bluetooth function.
- A tone will be heard and the LED light on and the speaker will enter Bluetooth pairing mode.

- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named,"**XXX**".
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password"0000".)
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

### Adjusting Playback & Volume

- Press the  button to pause/resume playback.
- Press the  and  buttons to skip tracks
- Press and hold the  and  buttons to adjust volume. A voice will be heard indicating when the volume is at maximum level.

### Using the Light:

- Power the speaker ON
- Press the  button on the top of the speaker to switch to rainbow fade mode
- Press the  button again to freeze on the current color
- Press the  button again to power the light on in reactive mode, the lights will dance to your music
- Press the  button again to turn the lights OFF

### Using as A Wired Device

To use the speaker as a wired device, attach the 3.5mm end of the supplied charging cable to the headphone jack on your media device or computer and attach the micro USB end to the micro USB port on the back of the speaker.

### Caution:

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.
- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15

of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the in instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.