 


Wi-Fi Outdoor Smart Plug
User Manual WP7-B



Since the device only supports 2.4G Wi-Fi connection, please ensure that the mobile phone and the device are connected to 2.4G Wi-Fi simultaneously.

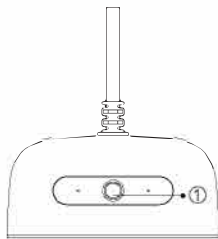 


Product Overview

① Power/Network Configuration Button

Short press one of the buttons to control independently on/off of the corresponding port.

Long press any button for 5 seconds to enter the network pairing mode.

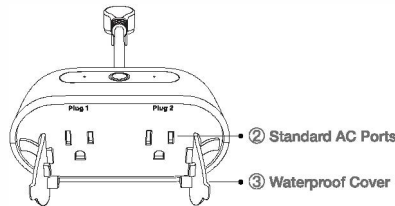


Parts Included

Wi-Fi Outdoor Smart Plug	x 1
User Manual	x 1
Binding Voice Assistants Guide	x 1

Specification

Model: WP7-B
Input: 120V~60Hz 15A
Rated Power: 1800W Max.
Cable Length: 16.5cm / 6.5in
Wi-Fi Network: only support 802.11 b/g/n, 2.4GHz

 Main Features

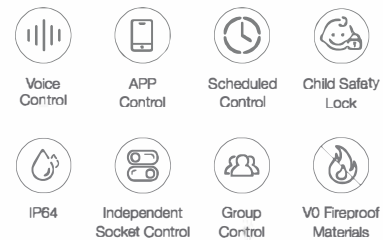

How to Download the Gosund App

Option 1: Search for "Gosund" in the Apple APP Store or Google Play.

Option 2: Scan the QR code to enter the download page.



How to Pair with the Our App

1. Open the APP and create your account.
2. Turn on the plug and put it close to the router when pairing.
3. Press and hold the ON/OFF button for 5 seconds and release it when the plug starts blinking fast to enter the network pairing mode.

You can add a device in two ways.

Option 1: Tap "+" on the upper right corner and select "Auto Scan".

Option 2: Tap "+" on the upper right corner to select "Add Manually", and then select "Smart Outdoor Plug (Wi-Fi)".

Follow the App instructions to complete the operation.

Reset

When the device is powered on, press and hold the Power / Network configuration button for five seconds. Release the button when the power indicator blinks quickly. The device is reset.

When using the outlet in a new network environment, you need to reset the device and pair it again.

Warnings and Precautions

- Operating Temperature: 20°C~40°C (4°F~104°F)
- Operating Humidity: 10%~90%RH, Non-condensing
- Storage Humidity: 5%~90%RH, Non-condensing
- DO NOT attempt to disassemble, repair, or modify the device.
- DO NOT use the device where wireless devices are not allowed.
- DO NOT plug into another relocatable power tap or an extension cord.
- DO NOT open
- DO NOT expose to heavy rain or immerse in water or any other liquid.
- DO NOT remove ground pin (middle pin) or use with 3 to 2 prong adapter.
- DO NOT use with devices that should not be operated unattended, such as power tools.
- DO NOT use in precision timing applications where inaccurate timing could be dangerous (sunlamps, Saunas, etc)
- DO NOT open or tamper with unit.
- DO NOT discard the stopper, the plug should be covered when the socket is not in use.
- For outdoor usage, use this product with ground fault circuit interrupter (GFCI) outlet
- Risk of electric shock.
- Timer could turn-on unexpectedly without the user being present. To Reduce the Hazardous Condition – Unplug the appliance that is plugged into the receptacle(s) controlled by the timer before servicing
- No user serviceable parts inside
- Refer servicing to qualified service personnel
- Remove smart plug from outlet before cleaning.
 - When plugged into grounded 3-prong outlet, always ensure that the housing is facing downward and is at least 2 feet off the ground. Use the plug's mounting tag to hang from a screw to ensure correct orientation.
- Keep children away from smart plug and outlet
- No Serviceable parts inside

Note: The image shown in the manual is indicative only. If there is inconsistent between the image and the actual product, the actual product shall govern

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- RF Exposure Warning Statements:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

