


### 触摸真立体蓝牙耳机

M48-ENC 全新蓝牙5.1



使用前请仔细阅读本手册

### 双耳模式

**第一步**  
将两只耳机从包装中拿出

**第二步**  
将两只耳机都放置在充电舱内,使用原装无线充电器充电30分钟,然后进行第三步

**第三步**  
打开充电舱盖子,等待3-5秒后两只耳机指示灯缓慢的闪烁(如果没反应请重试),请单击右边两下,等待配对(两只耳机配对成功)

**第四步**  
手机蓝牙搜索并选择"M48-ENC"确认配对

### 单耳模式/控制功能

**第一步**  
将任意一只耳机从充电舱中取出

**第二步**  
手机蓝牙搜索并选择"M48-ENC"确认连接

备注:如果手机已经连接过耳机成功,任意拿单边耳机出仓,也会自动连接手机。

**长按**  
长按2秒 智能语音  
长按2秒 挂断来电  
长按4秒 开机/关机

**短触**  
点触2下 播放/暂停  
点触3下 上一曲  
点触2下 接听/挂断

**短触**  
点触2下 播放/暂停  
点触2下 下一曲  
点触2下 接听/挂断

### 充电

请使用原装充电器,禁止使用快充充电器

耳机充满需要1小时

输入:5V 250MA  
输出:5V 35MA

充电仓电量显示  
充电仓充满需1.5-2小时

耳机电量显示

- 14%-25% 电量
- 25%-50% 电量
- 50%-75% 电量
- 75%-100% 电量

### 故障处理

如果使用耳机的过程中,出现下面任何一种情况,可以按照此条独立处理

1.左、右耳不能配对  
两个耳机取出充电仓,两个耳机都是红灯闪烁,或者搜索蓝牙时,手机出现两个"M48-ENC".  
解决方法:先打开手机蓝牙删除所有耳机配对名(M48-ENC),双击下右边耳机,让两个耳机进行配对,当发现两边耳机灯慢闪时,即表示耳机配对成功,然后打开蓝牙搜索"M48-ENC"连接。

2.单边没声音  
耳机连接手机只有单边有声音,另一边不闪灯或者红灯交叉闪烁。  
解决方法:先打开手机蓝牙删除所有耳机配对名(M48-ENC),将对耳机回舱中,关盖再将对耳取出充电仓,如果两边耳机红灯闪烁时,此时双击右边耳机进行配对,配对成功时,两边耳机都为蓝灯慢闪,然后打开手机蓝牙搜索"M48-ENC"连接。

3.耳机无法连接到手机  
1.关闭手机蓝牙以及耳机,然后再将手机蓝牙和耳机打开,并搜索确认配对;  
2.如果耳机之前已经连接过手机,在手机蓝牙列表选择耳机名字,点击连接;  
3.删除手机蓝牙连接列表记录然后选择"M48-ENC"确认配对


### 规格

**耳机:**  
蓝牙版本:杰里5.1  
蓝牙距离:10米  
电池容量:35毫安  
充电时间:1小时  
使用时间:3-4小时  
耳机重量:8g

**充电仓:**  
电池容量:250毫安  
充电时间:2小时  
输入:5V 250MA  
输出:5V 35MA  
尺寸:60\*48\*27mm  
充电仓重量:34g

### TOUCH CONTROL TWS

M48-ENC BT 5.1



Please read this manual carefully before using

### Twin Mode

**Step 1**  
Take two earbuds out of the package

**Step 2**  
Put two earbuds in the charging case, and charge the case 30 minutes, then go to step 3

**Step 3**  
Open the charging case, the earbuds will flash blue light slowly after 3-5 seconds of always flash blue and red light, please double click the right earbuds, wait until the flash blue light slowly.

**Step 4**  
Turn on the Bluetooth on device and search "M48-ENC" to connect

### Single Mode / Functions

**Step 1**  
Take out any one of the earbud from charging case

**Step 2**  
Turn on the Bluetooth on device and search "M48-ENC" to connect

Remark: the earbuds will be connected automatically with mobile if it has been connected before

**Long Press**  
Long press 2s Voice assistant  
Long press 2s Answer call  
Long press 4s Power on / off

**Short Press**  
2 click Play / Pause  
3 click Last music  
2 click Receive / hang up call

**Short Press**  
2 click Play / Pause  
3 click Next music  
2 click Receive / hang up call

### Charge

Please use the original charging cable. Fast charging is prohibited.

Earbuds Full charge time: 1H

Input: 5V 250MA  
Output: 5V 35MA

Headset charging display

- 14%-25% Power
- 25%-50% Power
- 50%-75% Power
- 75%-100% Power

Case charging display  
Full charge time: 1.5-2H

if any of the following conditions occur while using this product, it can be resolved independently,

1. Left & Right earbud can not pairing with each other  
Take out the earbuds from charging case, two earbuds always flash red and blue or there are two Bluetooth name of M48-ENC on the mobile  
Solution: Turn off both ear buds, delete the connection record M48-ENC displayed in the connection list of the phone or other bluetooth devices. Then 2 click the right earbud quickly after 2-3s, both earbuds will flash blue slowly, that means they have paired with each other successfully

2. Only one earbud working  
When connected the mobile, only one earbud working, and the other one flashes red and blue light, or no light flashes.  
Solution: Turn off both earbuds, delete the connection record M48-ENC displayed in the connection list of the phone or other bluetooth devices. Then 2 click the right earbud quickly after 2-3s, both earbuds will flash blue slowly, that means they have paired with each other successfully.

3. Earbuds can not be connected with mobile  
Solution:  
1. Turn off the earbuds and turn off the bluetooth on mobile, then turn on earbuds and turn on bluetooth on mobile, to search the bluetooth name M48-ENC again.  
2. If the earbuds has been connected by the mobile before, then just need to find the bluetooth name in the bluetooth list, and connected.  
3. Delete the bluetooth list record on mobile, then search M48-ENC to connect

**Earbuds:**  
Bluetooth version: J1, 5.1  
Distance: 10M  
Battery: 35mAh  
Full charge time: 1 hours  
Play time: 3-4 hours  
Weight: 8g

**Charging case:**  
Battery: 250mAh  
Full charge time: 2 hour  
Input: 5V 250MA  
Output: 5V 35MA  
Size: 60\*48\*27mm  
Weight: 34g

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.