MMO

IPX7 WATERPROOF FLOATING BLUETOOTH SHOWER SPEAKER USER MANUAL

Model Number: 4083 Mode NATION: 4003

Feature: IFX7 waterproof speaker with a sucker. Can be fixed on the mirror of bathroom or float it on the water in bathtub.

ten	Specications
Pgrade	IPX7
Ellustooth Version	4.2
Eluetooth frequency	2.402-2.480 GHz
Speaker frequency	150Hz-20kHz
Effective connection range	10 Meter
Input	5v===0.5A
Output power	3W
Power supply	4.8V5.5V DC
Sensitivity	-82dSm
Impedance	4 ohms
Built-in rechargeable Lithium battery	3.7V 400mAh
Charging line	TPE, mirco cable

Product overview









Charging Integrated Battery: This Bluetooth speaker is powered by integrated rechargeable Lithium Battery. Charge the battery as follows: 1. Insert the charging cable into the DC SV 1000 0 SA socket on the unit

2. Connect the USB plug into a PC or AC/DC adaptor. 3. The LED indicator at front of speaker turns red when the battery is charging.

-Charge Time: USB appear, 4 hours -Working Time: approx. 2 hours

Pairing "FINDYOURMAGIC" to mobile phone or other device: Please make sure the speaker is in power on mode. To activate the Bluetooth speaker's pairing mode.

When trying to activate the pairing mode. Turn on your mobile phone or other device and activate the Bluetooth function.

3. Pair your mobile phone or device with "FINDYOURMAGIC". If password is needed, type in "0000".

Once this speaker is paired and connected to your mobile phone, next time when you switch on this speaker

Button description:

On/O : To switch on or a the device

Short press for the next sons, long press for turningup the volume.

Short press for the previous sons, long press for turningdown the volume. Play/pause the music

Freehinshaating		
Symptoms	Counter	Solutions
Cannot switch the earphone	Battery empty	Change the battery
Unable to pair the speaker	Speaker is already switched on, and it is not in pairing mode.	Refer to the section of "Pairing "FINDYOURBMAGE" to mobile phone or other device."

Sound clarity may be affected if the sneaker is charged longer than the stitudated time of 4 hours. Once in play mode the sneaker will self-regulate to its optimized state after some time.



NWO

Take care of your speaker Do not charge the speaker for longer than 4 hours. Avoid charging overnight or leaving the product unattended.

 Do not use excessive force when inserting or removing the cable from the speaker to avoid damage to the socket or your devices. · Do not modify, disassemble, open, drop, crush, puncture or shred the product. short circuiting the product internally.



Finding to read and follow these safety and usons interacting could result in the abortic shock or other hazard that could not entitle the

Do not simultaneously rechange the speaker and charge your device at the same time.

 Please use USB cable to charge this product. Using an incompatible cable could result in the product malfunctioning. · Keep the product away from any heat sources and direct sunlight to prevent heat build-up. . Keep away from children and ensure that all persons who use the product read and follow these instructions and warmings

 Minimum distances, Scm. around the apparatus for sufficient ventilation: -The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.; - No raised flame sources, such as lighted candles, should be placed on the apparatus: - Attention should be drawn to the environmental aspects of battery disposal;

FCC Statements: ECC ID-18-DVC-400350E-84TD

This device compiles with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class II digital device, pursuant to Part 15 of the FCC Pulse. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to

- Recrient or relocate the receiving antenna

NOTE: Retain these instructions for future reference.

_

NWO

Imported by: ASI, USA, 5201 Blue Lappon Drive, 9th Floor (Suite 974), Marri, Florida 33126, USA Made in China



