

4.13 SPLIT SCREEN

Note

Please pair the camera via Wi-Fi with the KODAK Smart Home App to get the latest firmware version for this feature.

1. Press "☰" on the Parent Unit for the menu bar.
2. Press "▲" or "▼" button to select "📺", then press "OK" to proceed to the next step. If there is only one connecting camera, there will be a message "Please add more monitor to use this feature"
3. The screen will split to left screen and right screen.
4. The left screen shows the current camera.
5. The right screen shows the camera number of the next available camera.
6. If there are more than 3 cameras (max4), you can press "▲" or "▼" button to select another camera "1", "2", "3", "4" within 10 seconds.
7. Press "OK" to apply.

Important Information

- The audio of camera on the left screen has higher priority to be played on the Parent Unit. If both cameras have sound at the same time, you will hear the audio from the left screen camera, whereas the right camera will show the sound detection icon on. If the left camera has no sound and the right one does then the audio of the right camera will play as normal.
- When in split screen mode, talk mode, "🎤", "◀", "▶" and Pan-Tilt Zoom function(C525P) are disabled on the Parent Unit.
- All battery/temperature alerts (if any) are for the camera selected and shown on the left screen.
- The camera number on the left screen cannot be modified. You can change the camera on the left screen by viewing it first before turning ON the

ICON DEFINITION OF SPLIT SCREEN



1. **Sound Indication** (Audio output coming from selected camera number)
2. **Sound Detection** (Sound is detected on the selected camera number)
3. **Camera Numbers**

5. PROPER DISPOSAL OF THE DEVICE



When the product comes to the end of its lifecycle, you should not dispose of it with normal household waste. Take the product to a collection point for the recycling of its electrical and electronic components.

This is indicated by the symbol on the product, User Manual and/or packaging.

Some of the product materials may be reused if you take them to a recycling point. By reusing some parts or raw materials from used products, you make a significant contribution to environmental conservancy.

Please contact your local authorities if you require any further information on the collection points in your area.

Please dispose of the battery pack in an environmentally-friendly manner in accordance with your local regulations.

6. CLEANING YOUR DEVICE

Wipe your Baby Monitor with a slightly moistened or anti-static cloth. Refrain from using cleaning agents or abrasive solvents.

Cleaning and Maintenance

- Never clean any part of the product with thinners or other solvents and chemicals – this may result in permanent damage to the product which is out of the scope of coverage of the Warranty.
- Make sure that your Baby Monitor stays away from hot, humid areas or conditions, strong sunlight and avoid moisture.

Note:

- Always turn off and disconnect the power adapter prior to cleaning your Baby Monitor.
- We have made every effort to ensure that your Baby Monitor is highly reliable. Yet, if anything goes wrong, please do not try to repair it yourself. Instead, please contact our Customer Support team for help at support@kodaksmarhome.com or visit www.kodaksmarhome.com/support

7. TROUBLESHOOTING

We suggest to pair the camera via Wi-Fi with the KODAK Smart Home App to get the latest firmware version for your devices

Power Indicator on the Parent Unit does not come on

- Check whether the Parent Unit is powered on.
- Check whether the battery is charged.
- Recharge the Parent Unit by connecting it to the power supply.

The Parent Unit beeps repeatedly

- The Parent Unit and the Camera may be out of range with each other.
- Reduce the distance between the units, but not closer than 3 feet/0.9 meters.
- The Camera may be switched off. Slide the ON/OFF switch to the ON position to switch on the Camera.
- The battery in the Parent Unit is running low. Connect the Parent Unit to an electrical outlet with the supplied power adapter to recharge the battery.

The Battery icon on the Parent Unit flashes

- The Parent Unit maybe running low on battery. Connect the Parent Unit to an electrical outlet with the supplied power adapter to recharge the battery.

Unable to hear sound or baby crying from the Parent Unit

- The volume level in the Parent Unit may be set too low. Refer to section 4.12 for volume level settings.
- The Parent Unit and the monitoring Camera may be out of range with each other. Reduce the distance between the units, but not closer than 3 feet/0.9 meters.

The baby monitor system produces a high-pitched noise

- The Parent Unit and the Camera are too close to each other. Make sure the Parent Unit and Camera are at least 3 feet/0.9 meters away from each other.
- The speaker volume of the Parent Unit may be set too high. Decrease the volume of the Parent Unit.

Battery life in the Parent Unit runs low quickly

- The LCD brightness may be set too high. Try to decrease the brightness level. Refer to section 4.7 for details.
- The volume level of the Parent Unit may be set too high, which consumes power. Decrease the volume level of the Parent Unit. Refer to section 4.12 for volume level settings.

Parent Unit image is not in color

- If the Camera is placed in a dark room, it will turn ON infra-red illumination and the picture image changes from 'color' to 'black and white'. When the room becomes brighter, the picture will resume back to 'color'.

There is no transmission from the Camera to the Parent Unit

- Switch on both the Camera and Parent Units.
- Pair the Camera again as described in see "4.2.1 Add (Pair) a Camera".
- If there is no free camera location, delete a location first, as described in see "4.2.2 Delete a Camera".

The Parent Unit is in standby

- To turn on the Parent Unit screen, slide the ON/OFF switch to the ON position.

Temperature reading on the Parent Unit display does not reflect a correct reading.

- Upon power on, the temperature reading on the parent unit will indicate an accurate reading up to 15 minutes, as the Camera requires to adjust to surrounding ambient temperature.

8. "KODAK SMART HOME" IN-APP SETUP

You can also connect the Camera with your mobile device. Read on for a step-by-step guide.

Step 1: Download the "KODAK Smart Home" App

To download the KODAK Smart Home app:

- On your mobile device, visit the App Store (iOS) or Google Play (Android)
- Search for "KODAK Smart Home"
- Download and install the "KODAK Smart Home" app on your mobile device

 


scan to install

Step 2: Create or Login to Your Account

If this is your first **KODAK Smart Home** product, you will be asked to create an account. To set up an account:

- On your mobile device, open the **KODAK Smart Home** app
- Tap **SIGN UP**
- Follow the in-app instructions to create a new account

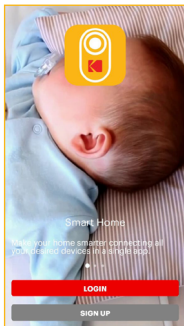A screenshot of the KODAK Smart Home app's sign-up screen. It has a yellow background. At the top, there are four input fields: "Last name", "Email", "Phone number", and "Password". Below these is a "Reconfirm Password" field. There are two radio buttons: one for "I have read and agreed to our [Terms of Service](#) and [Privacy Policy](#)." and another for "I'd like to opt in receiving products services, promotions, news and events." At the bottom is a red "SIGN UP" button.




If you already have another **KODAK Smart Home** product installed, simply select **LOGIN**:

A screenshot of the KODAK Smart Home app's login screen. It has a yellow background. At the top, it says "Login with" followed by two social media icons: Facebook (f) and Google (G). Below these is the word "Or". There are two input fields: "Username" and "Password". Below the password field, there is a note: "8 to 20 chars, must have at least 1 digit, 1 uppercase & 1 lowercase". At the bottom is a red "LOGIN" button and a link "Forgot Password?".

Step 3: Add the Baby Monitor to Your App

Having your Wi-Fi network name and password handy, you will now pair your Baby Monitor near your wireless router with the **KODAK Smart Home** app:

   - Select **Add new device...**
- Select **Baby Series > KODAK CHERISH C525P**
- The app will then walk you through the setup process

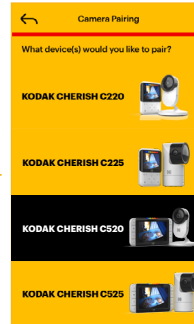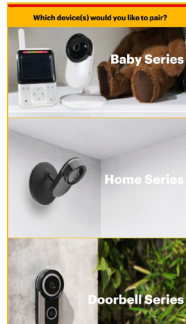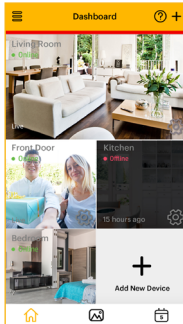

Step 4: Get Your Camera into the Setup Mode

In the middle of the setup process, you will be required to get your **KODAK CHERISH C525P** Wi-Fi Baby Monitor into the setup mode. To do this:

- Press and hold the Pair button for 3 seconds until you hear a beep sound
- You will then hear **Start Pairing Mode** indicating that the Camera has entered the setup mode. You may now release the **Pair** button and tap **Continue** on your mobile device

 
 


Step 4.1: Connect to the Camera's Wi-Fi from Your Phone(For IOS Only)

For IOS devices, you will have to connect to the camera's Wi-Fi through your Wi-Fi settings of your phone.

To do this:


- Tap the **Go To Settings** button to access to the Wi-Fi settings on your phone
- In the Wi-Fi settings of your phone, connect to **KODAKCam-CXXXXXXX** and return to the app.

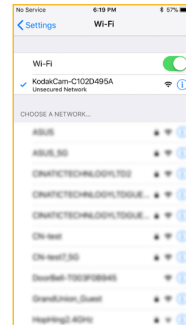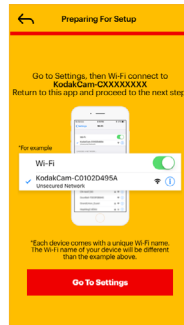

Step 5: Wait While Pairing is in Progress

Your Baby Monitor should now start pairing with your mobile device automatically:

 
- You will hear **Setup Completed** when the Baby Monitor is successfully paired
- You may choose one of the recommended names or rename your Baby Monitor by selecting **Custom**.

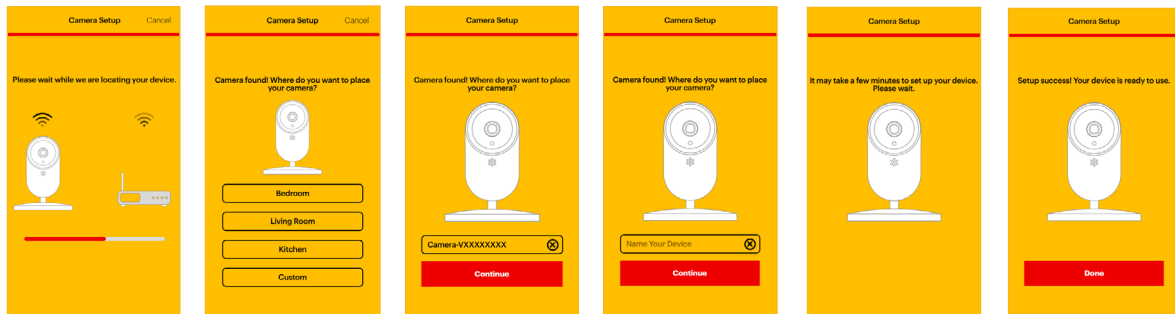

Step 6: Test Your Baby Monitor



The Baby Monitor is now added to the Dashboard of the KODAK Smart Home app:

 - You may now run a test by clicking on the snapshot view from your desired Camera in order to access the live view
- You should be able to see video from the Camera (Camera) of your Baby Monitor in the “KODAK Smart Home” app

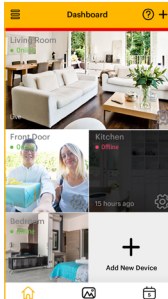





Step 7: Explore the Basic Setting of Your Baby Monitor in the App

  - **When you monitor remotely via the app (using your mobile data or another WiFi) the live streaming will need to be refreshed every 5 minutes.**
- When there is movement in the environment, the camera will start to record. You can set the level of the motion under the camera settings. **Low** means that the camera will detect and capture stronger motions while **High** means the camera will detect and capture any motions like even the movement of a curtain.

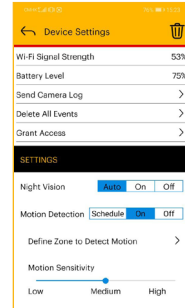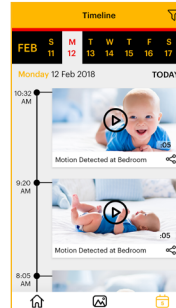


9. MONITORING YOUR BABY VIA THE APP

    - After you have created an account and installed a Camera, simply click on the **KODAK Smart Home** app icon to monitor your baby by visiting the dashboard.
- You can pinch outwards to zoom in on the video image, or pinch inwards to zoom out.
- You can swipe left and right, up and down on the video image for pan and tilt.

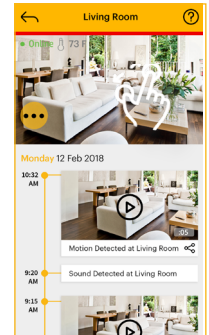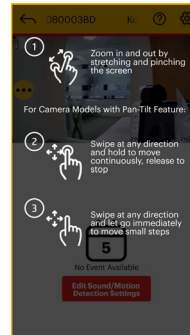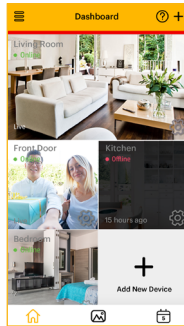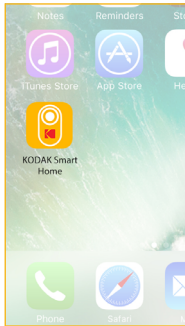

KODAK Smart Home Icons

 You may also perform one or more of the following actions by clicking on the MENU icon:

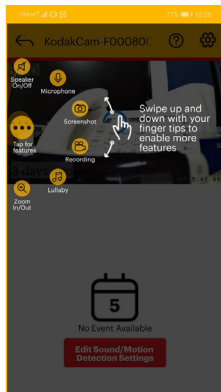

Menu

Click to open/close menu



Mute

Press this button to toggle between mute/unmute



Talk

Press this button to talk to your baby



Record a Video

Press this button to record a video



Take a Photo

Press this button to take a photo



 
Melody

Press this to play music to your baby



Zoom in/out

Press this to zoom in/out

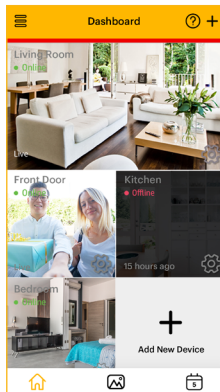

Dashboard

Tap here to return to the "Home" screen



Video Gallery

Tap here to view your recorded footage



Timeline

Tap here to check history of your actions



Add New Device

Tap to add new device



Side Menu

Press this open/close the side menu



Camera Settings

Tap to open and edit the settings of a device



Hints

 
Tap to open hints on the operations of the app

For additional help and further information about our products, visit www.kodaksmarthome.com or email to support@kodaksmarthome.com.


10. GRANT ACCESS

10.1 Add Friend


You may grant access to your family and friends using the feature called **Grant Access** which is located on the side menu of the Dashboard.

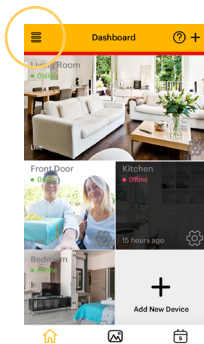

 
1. Click on “**≡**” which is located on the Dashboard

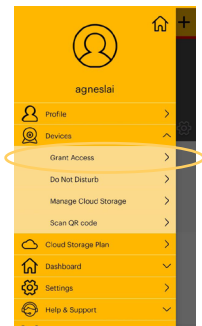

 2. Select **Grant Access** under Devices

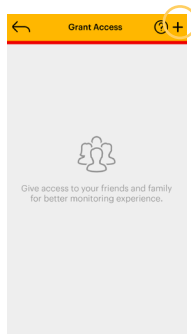


 3. Click on **+** which is located on the top right

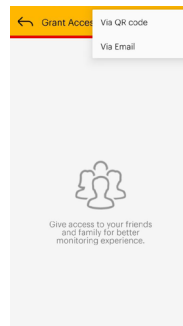


4. Simply follow the instructions on the app and click **Save** to add a friend

 
10.2.1 Add a Friend-via QR Code

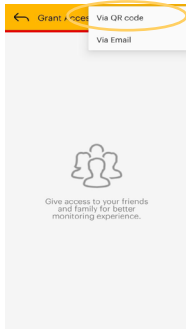

 1. Click on **via QR code** to generate a QR code to add friend

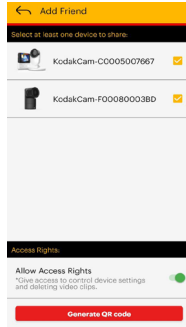


 2. Select the camera you want to share and turn on or off the **Access rights**

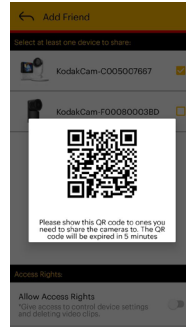


3. Let your friend scan the QR code from your device

 10.2.2 Add a Friend-via Email

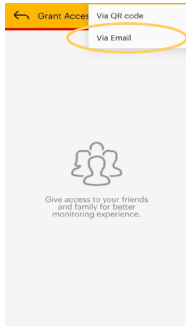

 
1. Click on **via Email**

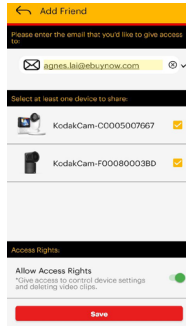


2. Add an email and select the camera(s) that you want to give access to

10.3 Edit a Friend

   
You can edit friends and make changes to the settings/permissions anytime you want.

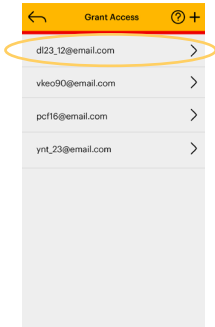


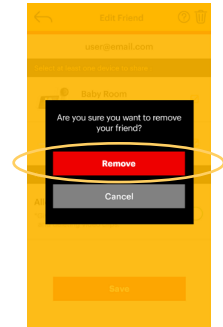 
1. Click on the email of the person that you would like to make changes to

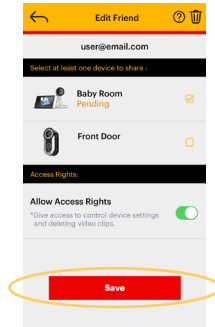

2. Click **Save** to save changes

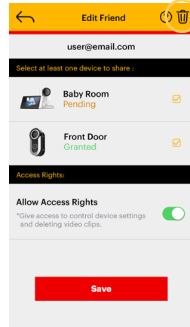

3. Click on “” to remove friend

 


4. Click **Remove** to confirm


11. ZONE DETECTION

11.1 Zone Detection Set up


If you want to monitor only specific areas, you can do this up by setting zones on the app. The app will notify you when there is motion detected in the zone.

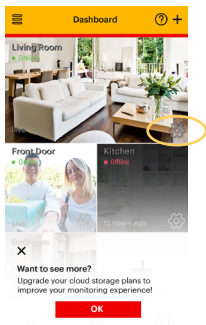

 
1. Click on “⚙️” that is located at the right bottom corner

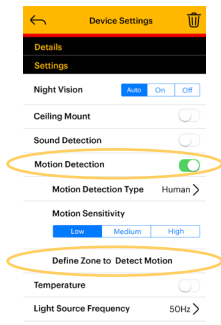

 2. Switch on **Motion Detection**, click **Define Zone to Detect Motion**.

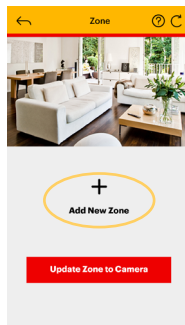

 
3. Click on + which is located at the middle of your screen.

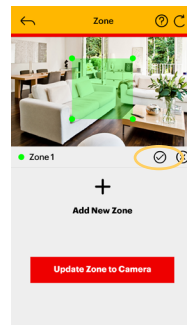


4. Use your finger to draw the zone, Press “✓” when finished and click on **Update Zone to Camera** to save

12. TIMELINE

 
12.1 Recording

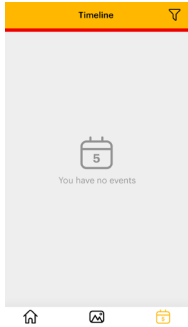

 
1. At first, the timeline will not have any video clips

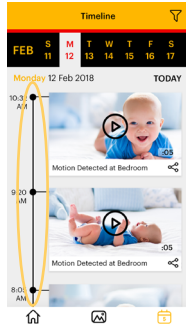

 2. When your monitor detects motion, the timeline function will record it

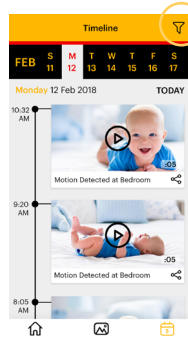

 3. Click on "☰" which is located on the Timeline

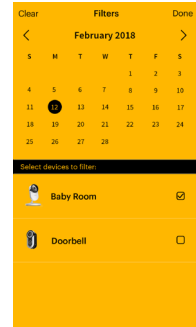

4. Choose the date range you want to review the video clips for

14. FURTHER INFORMATION

If your product is not functioning properly:

- Consult this User Manual or the Quick Start Guide.
- Check out our support website at **www.kodaksmarthome.com/support**
- Get in touch with our Customer Service, simply email us at: **support@kodaksmarthome.com**
- To order a replacement battery pack, please get in touch with our Customer Service.

Consumer Products and Accessories Limited Warranty (“Warranty”)

What does this warranty cover?

- Subject to the exclusions contained below, eBuyNow warrants that this product or certified accessory sold for use with this product is manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is non-transferable.

Who is covered?

- This Warranty extends only to the first consumer purchaser and is non-transferable.

What will eBuyNow do?

- eBuyNow or its authorised distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that do not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What other limitations are there?

- ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL EBUYNOW OR ITS AUTHORISED DISTRIBUTOR BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

- Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	Two (2) years from the date of the Products' original purchase by the first consumer purchaser of the product.
Consumer Accessories	One (1) year from the date of the Accessories' original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired and Replace	The balance of the original warranty or for Ninety (90) days from the date returned to the consumer, whichever is longer.

EXCLUSIONS FROM COVERAGE

- **Normal Wear and Tear:** Regular maintenance, repair and replacement of parts and components due to normal wear and tear are not covered.
- **Batteries:** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are within the coverage of this Warranty.
- **Abuse & Misuse:** Defects or damage due to:
 - (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (such as cracks and scratches) to the surface of the product resulting from misuse;
 - (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food;
 - (c) use of the Products or Accessories for commercial purposes or subjecting the Product or any Accessory to abnormal usage or conditions; or
 - (d) other acts which are not the fault of eBuyNow or its authorised distributor, are not covered.
- **Use of Non-eBuyNow branded Products and Accessories:** Defects or damage due to the use of non-eBuyNow branded or certified Products or Accessories or other peripheral equipment are not covered.
- **Unauthorised Service or Modification:** Defects or damage due to service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than eBuyNow, or its authorised service centers, are not covered.
- **Altered Products:** Products or Accessories with
 - (a) serial numbers or date tags that have been removed, altered or obliterated;
 - (b) broken seals or that show evidence of tampering;
 - (c) mismatched board serial numbers; or
 - (d) nonconforming or eBuyNow branded housings, or parts, are not covered.
- **Communication Services:** Defects, damages, or the failure of Products or Accessories resulting from any communication service or signal you may subscribe to or use with the Products or Accessories are not covered.

HOW TO OBTAIN WARRANTY SERVICE OR OTHER INFORMATION?

To obtain service or information, please email to **support@kodaksmarhome.com**.

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to an eBuyNow Authorised Repair Center.

To obtain service, you must include:

- (a) the Product or Accessory;
- (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product;
- (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product;
- (d) a written description of the problem; and, most importantly;
- (e) your address and telephone number.

These Terms and Conditions constitute the complete warranty agreement between you and eBuyNow regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by eBuyNow or representations made by any agent employee or staff of eBuyNow, that may have been made in connection with the said purchase.

FCC, IC AND CE REGULATIONS

Trade Name: KODAK
Model: C525P
Responsible Party: eBuyNow
Address: eBuyNow LLC 470 Olde
Worthington Road, suite 200
Westerville, OH43082 USA

Telephone Number: 1 (250) 661-0291

FCC Part 15



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communication may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003. CAN ICES-3(B)/NMB-3(B)

WARNING

Changes or modifications, to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Industry Canada

This device complies with Industry Canada license-exempt RSS standard(s): Operation is subject to the following Two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF Radiation Exposure Statement Caution:

This Transmitter must be installed to provide a separation distance of at least 20cm from all persons.

IC Radiation Déclaration d'exposition Attention:

Cet émetteur doit être installé pour fournir une distance de séparation d'au moins 20cm de toute personne.

EC DECLARATION OF CONFORMITY

We the manufacturer/ Importer: PerimeterSafe/
eBuyNow declare under our sole responsibility that
the following product

Type of equipment: Smart Baby Monitor
Model Name: C525P
Brand: KODAK

complies with the essential protection requirements
of RED Directive 2014/53/EU on the approximation
of the laws of the Member States relating to Radio
Spectrum Matters, the Council Directive 2004/108/
EC on the approximation of the laws of the Member
States relating to electromagnetic compatibility (EMC)
and the European Community Directive 2006/95/EC
relating to Electrical Safety. Directive 2011/65/EC on
the restriction of use of hazardous substances (RoHS)
and 2009/125/EC relating to eco-design requirement
for Energy-Related Products (ErP).

Assessment of compliance of the product with the
requirements relating to the essential requirements:

Radio Spectrum: EN300328 V2.1.1
EN62311
EN62209

EMC: Draft EN301489-1 V2.2.1
EN301489-17 V3.1.1
EN55032:2015
EN55035:2017
EN61000-3-2:2019
EN61000-3-3:2013+A1:2019

Safety: IEC/EN 62368-1: 2014 (Second Edition)

ErP: Test according to the requirement of Directive
2009/125EC

The product is labelled with the European Approval
Marking CE as shown. Any unauthorised modification
of the product voids this Declaration.



15. TECHNICAL SPECIFICATIONS

Camera	
Camera Sensor	color CMOS 1Mpixel 720p sensor
Lens Viewing Angle	M12 4G lens FOV 70 degrees
Power Adapter	Input: 100-240V AC, Output: 5.0V DC, 2000mA
	WARNING Use only with supplied power supply. Battery: 3.8V, 2100mAh Lithium-Ion Polymer, rechargeable battery pack
Frequency Band	2400-2483.5 MHz
Operating Temperature	0°C - 40°C
Maximum RF Power	20dBm (for CE)

Parent Unit	
Display	5" IPS LCD: 800 x 480 resolution
Brightness Control	5 levels Default: 3
Volume Control	5 levels Default: 3
Temperature Display	Included
Power Adapter	Input: 100-240V AC, Output: 5.0V DC, 2000mA
	WARNING Use only with supplied power supply. Battery: 3.8V, 2100mAh Lithium-Ion Polymer, rechargeable battery pack
Frequency Band	2400-2483.5 MHz
Operating Temperature	0°C - 40°C
Maximum RF Power	20dBm (for CE)

KODAKSMARTHOME.COM

Manufactured, distributed or sold by eBuynow eCommerce Ltd.
All other trademarks are the property of their respective owners.

© 2021 eBuynow eCommerce Ltd. All rights reserved.

