

1. Most operational issues can be resolved by restarting iNite™, iNite™ App, or smart device.
2. If device will not connect, make sure iNITE™ is within 22 feet of smart device
3. If iNITE™ won't turn on, replace with fresh batteries.

6+
YEARS

IMPORTANT INFORMATION

ATTENTION: User is responsible for complying with all local and state privacy laws.

Remove all packaging and retain for future reference. Content may vary from pictures. An adult should periodically check this toy to ensure no damage or hazards exist, if so, remove from use. Children should be supervised during play.

NOTE: If normal function of the product is disturbed or interrupted, strong electro-magnetic interference may be causing the issue. To reset product, turn it completely off, then turn it back on. If normal operation does not resume, move the product to another location and try again. To ensure normal performance, change the batteries, as low batteries may not allow full function.

Care and Maintenance: Always remove batteries from the toy when it is not being used for a long period of time. Wipe the toy gently with a clean damp cloth. Keep the toy away from direct heat. Do not submerge the toy in water. This can damage the electronic assemblies.

Special Note to Adults: Parental guidance is recommended when installing or replacing batteries. Regularly examine the toy for damage. In the event of any damage, the toy must not be used until the damage has been repaired. This toy is not intended for children under 3 years old.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App store is a service mark of Apple Inc., registered in the U.S. and other countries.

Google Play and the Google Play logo are trademarks of Google Inc.



© 2018 Tastemakers LLC. All rights reserved.
980 Avenue of the America, New York, NY 10018
www.tastemakersllc.com | 212-967-5091



 
© 2018. All rights reserved. SPY GEAR™ and the Spin Master logo are trademarks of Spin Master Ltd., used under license.

MADE IN CHINA

iNITE™ NIGHT VISION CAMERA

USER GUIDE

CONTENTS: 1 iNITE™ Night Vision Camera, 1 User guide

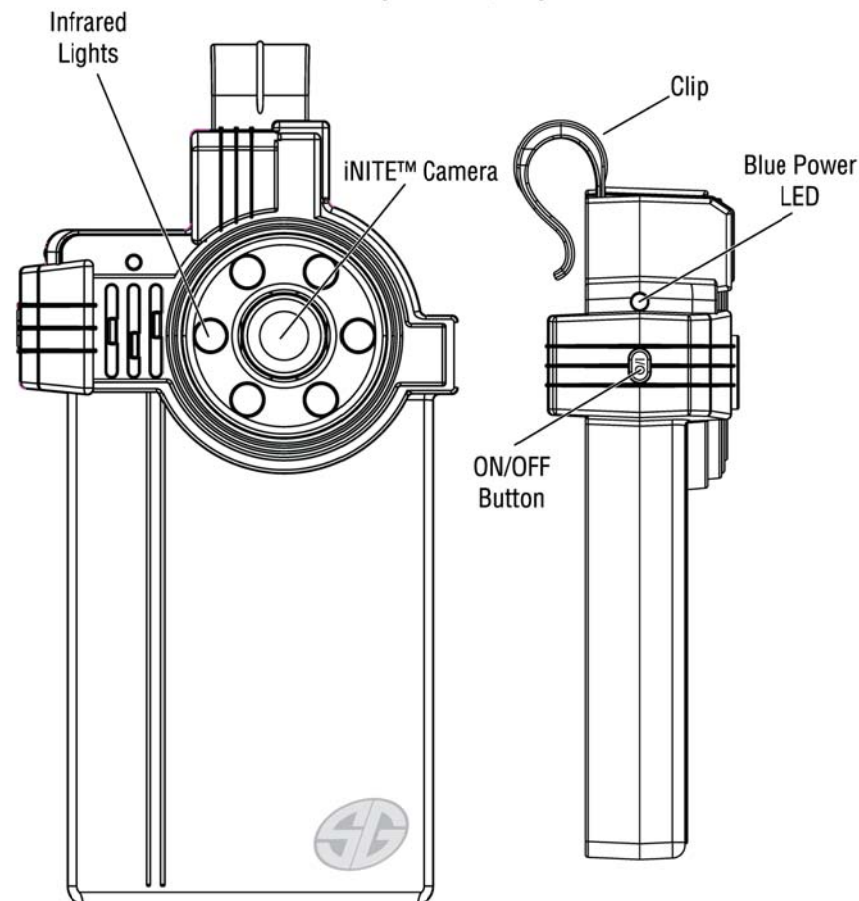

4-AAA(LR3) 1.5V
Not included



 
FCC STATEMENT

FCC Statement: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation. This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help. **NOTE:** Changes, adjustments or modifications to this unit, including but not limited to, replacement of any transmitter component (crystal, semiconductor, etc.) could result in a violation of FCC rules under part 15 and/or 95 and must be expressly approved by Spin Master Ltd. or they could void the user's authority to operate the equipment.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

HOW TO INSTALL BATTERIES

1. Open the battery door with a screwdriver.
2. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery. **DO NOT** remove or install batteries using sharp or metal tools.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.
5. Check your local laws and regulations for correct recycling and/or battery disposal. It is recommend to isolate terminals with electrical tape.

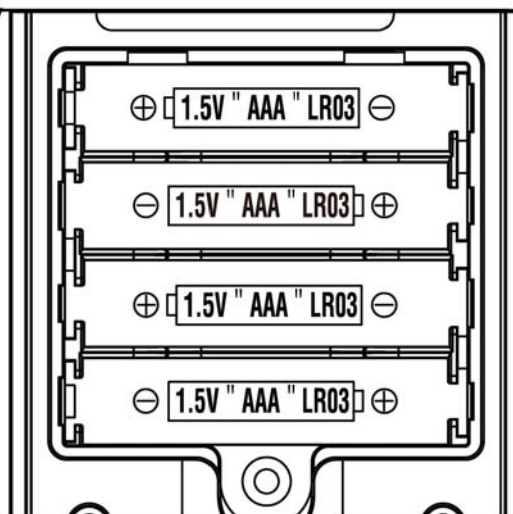

BATTERY SAFETY INFORMATION

BATTERY SAFETY INFORMATION: Requires 4 x AAA (LR03) alkaline batteries (not included). Batteries are small objects. - Replacement of batteries must be done by adults. - Follow the polarity (+/-) diagram in the battery compartment. - Promptly remove dead batteries from the toy. - Dispose of used batteries properly, ensure terminals are covered by electrical tape. - Remove batteries for prolonged storage. - Only batteries of the same or equivalent type as recommended are to be used. - **DO NOT** incinerate used batteries. - **DO NOT** dispose of this product in fire, as batteries inside may explode or leak. - **DO NOT** mix old and new batteries or types of batteries (i.e. alkaline/standard). - **DO NOT** use rechargeable batteries. - **DO NOT** recharge non-rechargeable batteries. - **DO NOT** short-circuit the supply terminals.

 
HOW TO USE YOUR iNITE™ NIGHT VISION CAMERA

NOTE: iNITE™ clip may not fit over all protective/decorative phone cases. It may be necessary to remove case before clipping to iNITE™.'

1. Download the iNITE™ App from the Apple® App Store® or Google Play
2. Press ON/OFF Button on iNITE™.
3. Blue ON/OFF Button lights up.
4. When Blue Power LED starts to blink, iNITE™ is ready to pair with your smart device through iNITE™'s Wi-Fi.
5. Go to your smart device's settings.
6. Open Wi-Fi connection.
7. Connect to iNITE™ Wi-Fi Network as shown in Wi-Fi settings.
8. When connected, Blue Power LED glows.
Built-in Wi-fi Range - 22 Ft. **SMART DEVICE MUST BE WITHIN RANGE TO CONNECT.**
9. Open iNITE™ App.
10. Welcome screen displays for 3 seconds.




11. Live view camera screen.

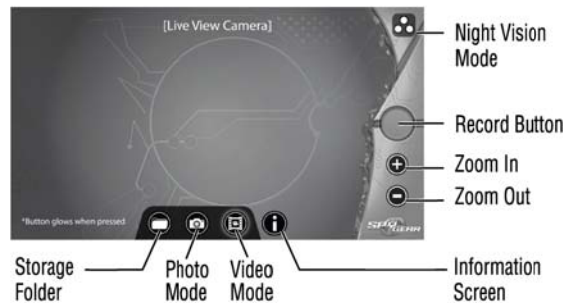

12. Tap Photo Mode Icon to put iNITE™ into photo mode (CAMERA icon glows green).
13. Tap Record Button to take a photo.
14. Tap Video Mode Icon to put iNITE™ into video mode (VIDEO icon glows green).
15. Tap Record Button to film a video.
16. Tap Record Button to stop video.
17. Tap Night Vision Icon to turn ON/OFF night vision.

 18. Storage Folder

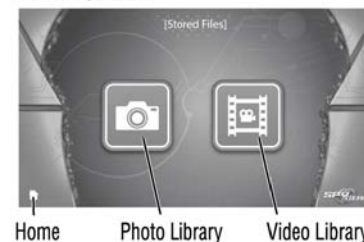

19. Photo Library



20. Video Library



21. iNITE™ clips on to most smart devices. Use built in clip for handheld use. (external cases may affect fit).
22. For remote recording iNITE™ can stand up to 22 feet from smart device.