

WARNING

TO ENJOY A SAFE GAMING ENVIRONMENT
Please use the wall anchor kit that is included with the product.



WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Set up Arcade1UP on a level floor.
Never allow children to climb or hang on product.
Always set up an anti-tip device!

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.

Make sure to locate your Arcade1UP on a flat surface

FCC RF RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

ISED RF RADIATION EXPOSURE STATEMENT:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

TROUBLESHOOTING

Table with 3 columns: PROBLEM, POSSIBLE CAUSE, SOLUTION. Contains troubleshooting steps for various issues like power cord, volume, frozen screen, etc.

COLLECT THEM ALL

Colors, style and decoration may vary.



visit Arcade1up.com

TO SIGN UP FOR OUR MAILING LIST AND SEE A COMPLETE LIST OF GAMES



MADE IN CHINA REV 08.25.21



TRON



WARNING

To ensure safe operation of the product, be sure to read this Owners Manual before use. Keep this Owners Manual in a safe place for easy reference when needed.

AGES 14+

OWNERS MANUAL



WARNING

READ BEFORE USING THE Arcade1UP SAFETY PRECAUTIONS

The following symbols are used in labels on the game to draw attention to potentially hazardous situations:

WARNING: Failure to avoid the risk may result in death or serious injury

Electrical Shock Hazard. Disconnect power before removing cover. Should only be done by a qualified technician.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1. Please read and comprehend all warnings stated in this manual.
2. Do not get arcade wet when cleaning.
3. Parents and guardians: Please read entire manual before allowing gamer to play.
4. The AC/DC adapter and apparatus shall not be exposed to dripping or splashing and that no object filled with liquids, such as water, shall be placed on apparatus.
5. If appliance is provided with protective earth terminal, it should be connected to main outlet with a protective earth connection.
6. Minimum distances 10 cm / 3.94 inches around the apparatus for sufficient ventilation.
7. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
8. No naked flame sources such as lighted candles should be placed on the apparatus.
9. The apparatus should only be used in moderate climates.

EPILEPSY WARNING

A very small percentage of individuals may experience epileptic seizures or blackouts when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or when playing video games may trigger epileptic seizures or blackouts in these individuals. To reduce the risk of such a seizure incident, it is recommended to take a 10-15 minute break at each hour of playing.

FCC/ISED STATEMENT

This device complies with part 15 of the FCC rules / Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC/ISED rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio / TV technician for help.



WARNING: Arcade1UP assumes no liability for improper installation or excessive loads placed on screws or bracket. This wall anchor is not a substitute for proper adult supervision.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Use only with a riser specified by the manufacturer, or sold with the apparatus. When a riser is used, use caution when moving the riser/apparatus combination to avoid injury from tip-over.
15. The equipment shall be used at working ambient temperature 32° - 95°F (0° - 35°C).
16. TIP OVER HAZARD - This apparatus should be secured in place by using the provided mounting means. Free standing is capable of resulting in instability causing possible injury. Refer to the installation instruction for detail.

INSTALLATION

This game is designed for indoor and personal use only. It must not be installed outdoors. The following conditions must be avoided.

- 1. Direct exposure to sunlight, high humidity, direct water contact, dust, high heat, or extreme cold.
2. Vibration. The game must be installed on a level surface.
Do not install in an area such that the game would present an obstacle in case of an emergency (i.e., near fire equipment or emergency exits).

SPECIFICATIONS

This product is intended for use only with the adapter provided: Manufacturer: Blue Iron Holdings Ltd. Model: B165-120400-E2

POWER SUPPLY: AC/DC Adapter INPUT POWER: AC 100-240V ~ 50/60Hz 2A Max OUTPUT POWER: DC12V 4A MONITOR: 17" LCD CABINET ASSEMBLED DIMENSIONS: 49.7" x 18.75" x 22.25" (126cm x 47.62cm x 56.50cm)

- The AC/DC adapter is used as disconnect device.
The AC/DC adapter of apparatus should not be obstructed OR should be easily accessed during intended use.
To completely disconnect the power input, the AC/DC adapter of apparatus shall be disconnected from the mains.

 
 
ASSISTANCE OR SERVICE

Before contacting us for assistance or service, please check the "Troubleshooting" section in the User Manual. If you still have questions regarding your Arcade1UP product or require technical support. Contact Arcade1UP Customer Service at www.Arcade1Up.com and click on "Support".



GAME SETTINGS

- 1. MOVE JOYSTICK TO SCROLL THROUGH GAME LIST
2. MOVE JOYSTICK TO LEFT THEN PRESS TRIGGER / PLAYER 1 / PLAYER 2 TO ENTER GAME SETTINGS
3. MOVE JOYSTICK TO ADJUST SETTINGS
4. SELECT "DEFAULT SETTINGS" AND PRESS THE TRIGGER / PLAYER 1 / PLAYER 2, THEN CHOOSE "YES" AND PRESS THE TRIGGER / PLAYER 1 / PLAYER 2 TO RETURN THE GAME TO ITS ORIGINAL STATE

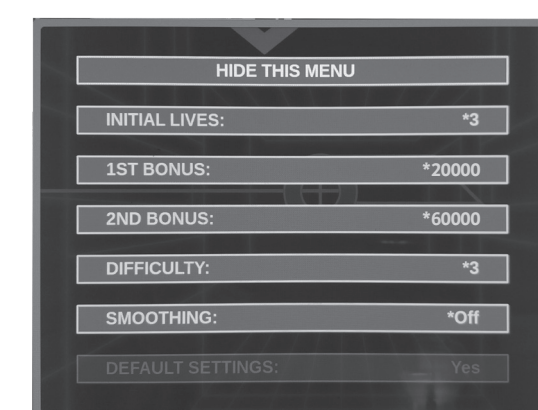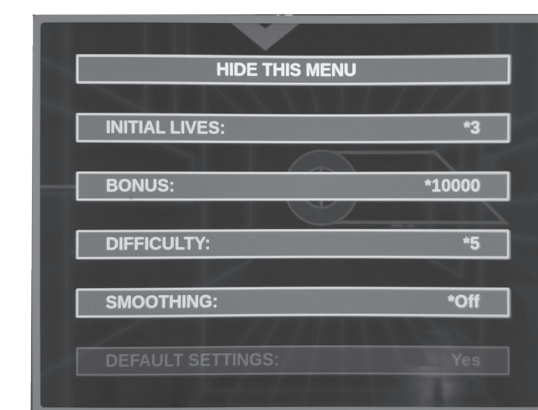

CAUTION

Servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.



ALL PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY. ACTUAL PRODUCT MAY VARY DUE TO PRODUCT ENHANCEMENT.



GAME CONTROLS

*ARCADE MAY TAKE 10-15 SECONDS TO POWER ON AFTER SWITCHING ON

  - 1. MOVE JOYSTICK TO SCROLL THROUGH GAME LIST
2. PRESS TRIGGER / PLAYER 1 / PLAYER 2 TO CHOOSE GAME
3. FOLLOW GAME CONTROLS BELOW FOR EACH GAME
4. HOLD PLAYER 1 (5 SECONDS) TO RETURN TO MENU
5. HOLD PLAYER 2 (5 SECONDS) TO RESET GAME

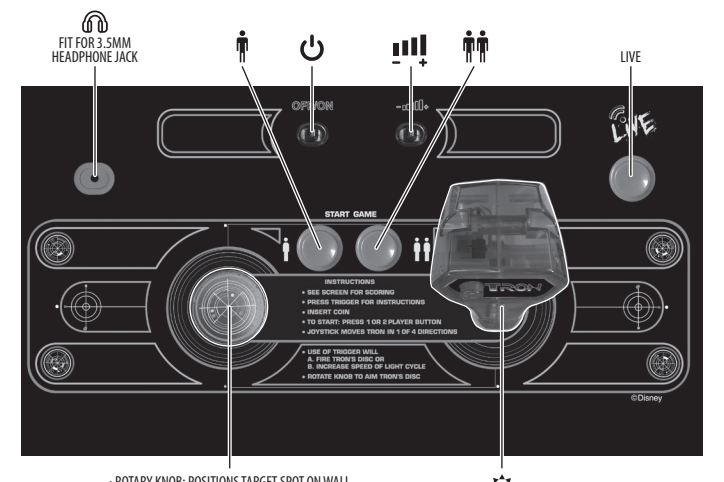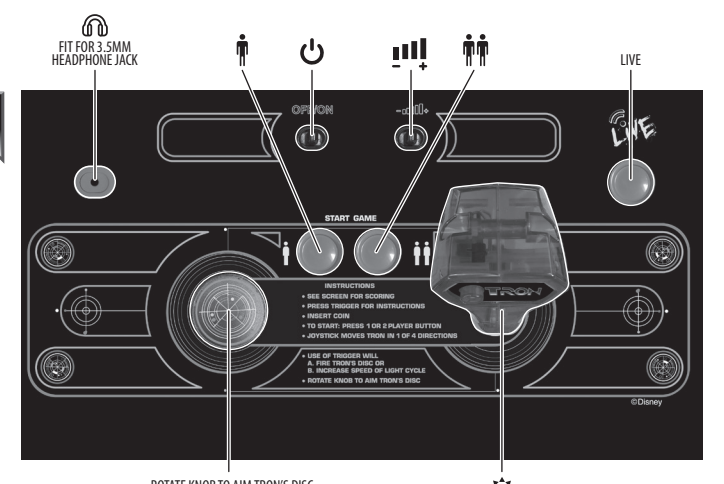

ROTARY KNOB: POSITIONS TARGET SPOT ON WALL (MAY BE POSITIONED VERTICALLY UP & DOWN IN LATER RACKS)
*CONTROLLER GRIP: MOVES TRON ON PINES. CAUTION: TRON CAN FALL OFF PINES. TO FIRE: SELECT TRIGGER. PRESS BUTTON ON BACK OF CONTROLLER GRIP TO DEFLECT SAR'S DISCS.

