 
 


Trex Projector


& Room Guard

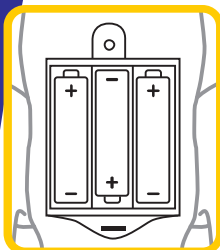


Unscrew the battery cover with a Philips screwdriver and insert 3 AA (1.5V LR6) batteries, noting the battery guidelines below. Replace the cover and screw it back in place. Batteries not included.

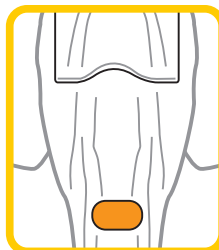

Turn ON your T rex by pressing the orange button beneath the tail. Your T rex will give a mighty ROAR!

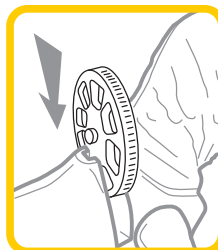


PROJECTOR There are three discs with 24 dinosaur images in total. Insert one disc into the slot on top of the T rex.

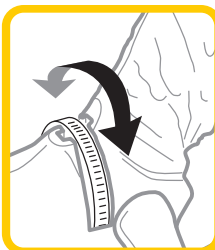


Turn the disc to select the image.



To focus the image, gently move the right arm up and down.

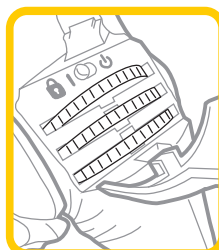

Hidden storage area for your discs.

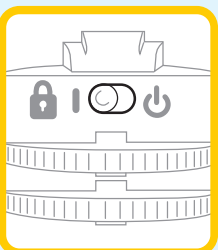

ROOM GUARD Leave the T rex switched on via the orange button under the tail. The orange Room Guard switch, indicated with a lock symbol, is in the disc storage area. Switch the Room Guard to the ON position. The

motion sensor is in the chest of the T rex. If movement is detected by the motion sensor, up to 1.5 metres away, your T rex will ROAR. A trembler alert will make your T rex ROAR if picked up and will only stop roaring when put back down again.

Note: The motion sensor is activated by changes in light patterns, so will not work in a dark room. This is a toy and is not a substitute for an alarm system. When the Room Guard is ON the Projector is automatically switched OFF. Turn OFF the Room Guard switch and the button beneath the tail to preserve battery life.

PLEASE NOTE

Please keep this leaflet as it bears important information. Do not look directly into the light source. Always use new batteries, as per specification. Made in China. If there is any damage to this product, do not use. Help the environment by disposing of your products responsibly. The wheeled bin symbol indicates that the product and batteries must not be disposed of in domestic waste, as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the product or batteries.

BATTERY SAFETY GUIDELINES

Batteries must be replaced by an adult. Switch toy off before opening battery compartment. Remove exhausted batteries from toy. Fit batteries correctly observing '+' and '-' marks on the battery & appliance. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the product before being charged.



Einiosaurus



Tyrannosaurus rex



Velociraptor



Stegosaurus



Styracosaurus



Ceratosaurus



Spinosaurus



Ankylosaurus



Tarbosaurus



Triceratops



Spinosaurus



Tyrannosaurus rex



Dicraeosaurus



Tyrannosaurus rex



Utahraptor



Brachiosaurus



Tyrannosaurus rex



Brachiosaurus



Achelosaurus



Ceratosaurus



Diceratops



Monolophosaurus



Diplodocus



Parasaurolophus