

Wireless Headset



Thank you for selecting the Wireless Headset from us. The product headset Wireless 4.2 and provides high grade tone due to the noise cancellation technology with the function of Hands Free, Please carefully read the User Manual before using the product.



Function	Operation
Enable Pairing Mode	Hold the Multi-function Button for 3s
Power On	Turn the Power button to ON state
Power Off	Turn the Power button to OFF state
Answer Telephone	Click the Multi-function Button once
End up Calling	Click the Multi-function Button once
Reject the Incoming Cal	Hold the Multi-function Button for 1s
Latest Number Redialing	Double click the Multi-function Button
Stop the Outbound Call	Click the Multi-function Button once
Voice Dialing	Hold the Multi-function Button for 1s
Microphone Mute Switching	Click the Mute Button once
Volume Up/Down	Click the volume +/- Button once
Pause/Play	Click the Multi-function Button once
Previous/next Track	Hold the volume +/- Button for 2s

Micro USB Charging Port

1. 1.0-2.0h (full charging); 5.0V, 500mAh: 2. Best performance with full battery.

Noise Cancelling

Double Microphones Noise Cancelling for Wind Noise Reduction.

Microphone Mute Button

Press Mute-button once to mute the Microphone.

LED Liaht

1. Under charging, red indicator is on; 2. After charging full, the blue indicator is on;

3. Low battery, red indicator flashes with prompt.

Step to connect Wireless Headset with the Mobile Phone

1. Turn on the power button, then hold the Multi-function Button (for about 3s) till the headset indicator flashes in red and blue by turn to enter in the Searching state. (Voice prompt "pairing", under the pairing state, and then it can be found by Mobile Phone):

2. Enable Wireless of the mobile phone, click Search Wireless Device till the mobile phone finds the headset signal, and then the name of headset will be displayed; 3. Click the headset name to connect, after successfully connected, voice prompt "connected", the headset indicator flashes in blue:

Input password: 0000 if needed (default password is 0000).

Here, congratulations, you have successfully connected the Headset, enjoy music and make calling with it,

Step to Connect with Two Mobile Phones

1. Turn on the power button, then hold the Multi-function Button for about 3s till the headset indicator flashes in red and blue by turn to enter in the Searching state, voice prompt "pairing";

2. Enable the Wireless function of mobile phone 1, click Search Wireless Device to search the headset name, and then click Pairing to connect, voice prompt "connected"; 3. Turn off the Wireless function of mobile phone 1, hold the headset Multi-function Button till the red indicator lights on, then turn off the headset: Enable the Wireless headset again to enter in the Searching state; 5. Enable the Wireless function of mobile phone 2. click Search Wireless Device to search the headset name, and then click Pairing to connect;

6. Enable the Wireless function of mobile phone 1 and find the targeted headset, and

then dick to connect. Please use headset near your mobile phone. The straight distance between your mobile phone and headset reaches 10m without obstacle, if it exceeds 10m, it may possibly cause tone drop and disconnection. How to Reconnect: 1. Your headset will try to reconnect the lost connection: 2. If the headset doesn't try to reconnect, please dick the Multi-function Button once or manually connect with the Wireless equipment menu of the mobile phone. Recover Default Settings When charging, hold the Multi-function Button for about 5s till the blue indicator flashes to recover default settings. Troubleshooting I. The mobile phone can't find the headset Possible Reasons: 1. The headset is not under ON and standby state: 2. The headset program is error; 3. The program of the mobile phone is error. Solutions: 1. After turning off the headset, hold the Multi-function Button (red and blue indicator flashes by turn) to enable pairing state; Recover the Wireless headset's default settings: 3. After restart the mobile phone, remove all pairing data in the Wireless of the mobile phone. Cautions:

1. After the Wireless headset has entered in the pairing mode, it will connect within 2min, otherwise, the headset will automatically turn off;

2. When charging, hold the Multi-function Button for about 4s till the blue indicator flashes to recover default setting.

II. No sound from the headset

Possible Reasons:

1. The volume of the mobile phone is unsuitable:

The Wireless headset and mobile phone are not connected correctly:

3. The Wireless headset is out of the working range.

Solutions:

1. Adjust the volume in the mobile phone:

Operate with the reference of the use steps;

Keep the headset in the range of 10m to the mobile phone without any obstacle.

Cautions:

1. Do not have any other operation when searching headset for avoiding program error;

2. Please use headset near the mobile phone to assure best effect.

III. Charging red indicator doesn't light on

Possible Reasons:

The headset has not been used for a long period.

Solutions:

Charge headset for about 30min, and then the red indicator may light on.

Cautions:

It will drop the capacity and service life of the battery if it is over charged or the Wireless headset is stored in the environment such as closed car

4



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.