

 
74mm

89mm

I13 True Wireless Stereo Earphones

User manual

Imported Wireless 5.3 chips

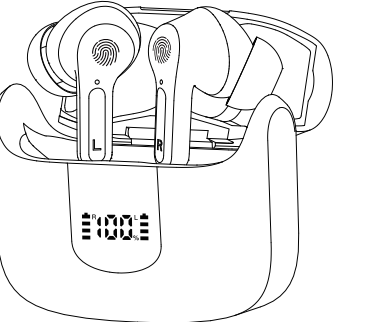

Compatibility:
This product is compatible with all Bluetooth-enabled mobile phones (iOS/Android/Windows Phone), tablet PCs, smart watches, notebooks and desktop computers.

EN
ACTIVATE WARRANTY
Support permanent replacement for damaged, defective, upgraded or lost item(No need to return the original one). Please activate within 15 days via below e-mail.
earbudsvip26@gmail.com

FR
ACTIVER LA GARANTIE
Prend en charge le remplacement permanent des articles endommagés, défectueux, mis à niveau ou perdus (pas besoin de retourner l'original). Veuillez activer dans les 15 jours via l'e-mail ci-dessous.
earbudsvip26@gmail.com

DE
GARANTIE AKTIVIEREN
Unterstützen Sie den dauerhaften Ersatz für beschädigte, defekte, aktualisierte oder verlorene Artikel (keine Notwendigkeit, das Original zurückzugeben). Bitte aktivieren Sie innerhalb von 15 Tagen über die untenstehende E-Mail.
earbudsvip26@gmail.com

IT
ATTIVARE LA GARANZIA
Supporta la sostituzione permanente di articoli danneggiati, difettosi, aggiornati o smarriti (non è necessario restituire quello originale). Si prega di attivare entro 15 giorni tramite l'e-mail di seguito.
earbudsvip26@gmail.com

ES
ACTIVAR GARANTÍA
Admite el reemplazo permanente de artículos dañados, defectuosos, actualizados o perdidos (no es necesario devolver el original). Actívalo dentro de los 15 días a través del siguiente correo electrónico.
earbudsvip26@gmail.com

English ----- 04

Français ----- 10

Deutsch ----- 16

Italiano ----- 22

Español ----- 28

1. Package Accessories



2 x Wireless Earbuds



1 x USB Cable



1 x User Manual



3 x Pairs of Ear Tips(L/M/S)

EN
2 * Bluetooth Earbuds
1 * Charging Case
1 * USB Cable
1 * User Manual
3 * Pairs of Ear Tips

FR
2 * Écouteurs Bluetooth
1 * Boîtier de charge
1 * Câble USB
1 * Mode d'emploi
3 paires de bouchons d'oreilles

DE
2 * Bluetooth-Kopfhörer
1 * Ladebox
1 * Datenkabel
1 * Handbuch
3 Paar* Ohrstöpsel

IT
2 * Auricolare Bluetooth
1 * Custodia di Ricarica
1 * Cavo USB
1 * Manuale di Istruzioni
3 Coppie di gommini

ES
2 * Auriculares Bluetooth
1 * Caja de carga
1 * Cable USB
1 * Manual de instrucciones
3 Pares de auriculares

EN
2 * Bluetooth Earbuds
1 * Charging Case
1 * USB Cable
1 * User Manual
3 * Pairs of Ear Tips

FR
2 * Écouteurs Bluetooth
1 * Boîtier de charge
1 * Câble USB
1 * Mode d'emploi
3 paires de bouchons d'oreilles

DE
2 * Bluetooth-Kopfhörer
1 * Ladebox
1 * Datenkabel
1 * Handbuch
3 Paar* Ohrstöpsel

IT
2 * Auricolare Bluetooth
1 * Custodia di Ricarica
1 * Cavo USB
1 * Manuale di Istruzioni
3 Coppie di gommini

ES
2 * Auriculares Bluetooth
1 * Caja de carga
1 * Cable USB
1 * Manual de instrucciones
3 Pares de auriculares

EN
2 * Bluetooth Earbuds
1 * Charging Case
1 * USB Cable
1 * User Manual
3 * Pairs of Ear Tips

FR
2 * Écouteurs Bluetooth
1 * Boîtier de charge
1 * Câble USB
1 * Mode d'emploi
3 paires de bouchons d'oreilles

DE
2 * Bluetooth-Kopfhörer
1 * Ladebox
1 * Datenkabel
1 * Handbuch
3 Paar* Ohrstöpsel

IT
2 * Auricolare Bluetooth
1 * Custodia di Ricarica
1 * Cavo USB
1 * Manuale di Istruzioni
3 Coppie di gommini

ES
2 * Auriculares Bluetooth
1 * Caja de carga
1 * Cable USB
1 * Manual de instrucciones
3 Pares de auriculares

Noted:



EN
Regular cleaning with a cotton swab is recommended, as shown in the image above. When the earbuds are not charging, you can use a cotton swab dipped in alcohol to gently wipe the bullet needle and copper column

 
FR
Un nettoyage régulier avec un coton-tige est recommandé, comme le montre l'image ci-dessus. Lorsque les écouteurs ne se chargent pas, vous pouvez utiliser un coton-tige imbibé d'alcool pour essuyer délicatement l'aiguille à balles et la colonne de cuivre

DE
Eine regelmäßige Reinigung mit einem Wattestäbchen wird empfohlen, wie im Bild oben gezeigt. Wenn die Ohrhörer nicht aufgeladen werden, können Sie die Kugelnadel und die Kupfersäule mit einem in Alkohol getauchten Wattestäbchen vorsichtig abwischen

IT
Si consiglia una pulizia regolare con un batuffolo di cotone, come mostrato nell'immagine sopra. Quando gli auricolari non si stanno caricando, puoi utilizzare un batuffolo di cotone imbevuto di alcol per pulire delicatamente l'ago del proiettile e la colonna di rame

ES
Se recomienda una limpieza regular con un hisopo de algodón, como se muestra en la imagen de arriba. Cuando los auriculares no se están cargando, puede usar un bastoncillo de algodón humedecido en alcohol para limpiar suavemente la aguja de la bala y la columna de cobre.

Product details:

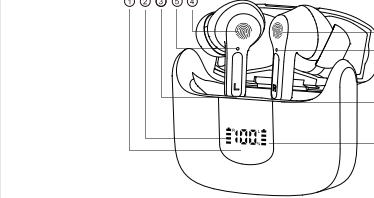

- ① Charging case digital display
- ② ④ Earphone digital display
- ③ ⑤ Earphone charging port
- ④ ⑦ Touch Button
- ⑤ ⑥ Earphone indicator

Usage:

In order to get the best audio experience, please wear the left and right earphones correctly, and you will feel close, comfortable and stable in your ears after wearing them correctly. And please put your cellphones in the same side of left earphone during outdoor.




L



R

Powering ON:

 
Method 1: Take out the earphones from the charger case, and they will "power on"



L earphone blue light flashes

R earphone blue light flashes

 Method 2: When the earphones are OFF, Keep the touch button of both earphones for 3-5seconds. The Led light flashes once and with a sound prompt: "power on".



Keep the touch button pressed for 3 seconds

Powering OFF:

Method 1: The earphones will switch off when put into the charger case.

Method 2: Keep the earphones touch button pressed for 3-5 until the Blue LED flashes with a sound prompt: "power off".

Note: If the earphones were disconnect with the device, the earphones will be power off automatically after 5mins.

 
Stereo Mode:

- ① Taking the earbuds out of the charging box, they will auto power on. After a few seconds, the left and right earbuds will auto connect each other. When the earbuds are connected to each other, the LED light will flash quickly. If they connect successfully, the earbuds LED light will flash slowly.



Blue light flashing

- ② Open the bluetooth devices page inside settings. Search for "I13" and select it to pair, the Earphone lights be off after the earphones connected with device.



Keep the touch button pressed for 3 seconds

Reset Mode:

In the power-on state, after 5 quick clicks L/R, the earphones is turned off (the blue light is off), and the pairing information between the earphones and the mobile phone is cleared after restarting.

Play Music:

- ① Touch the button once to Pause/Play.
- ② Keep press the touch button for 1 seconds and release it ("L" for previous song, "R" for next song)
- ③ Touch the button twice to adjust the volume("L" for decreasing, "R" for increasing)

Voice Assistant:

Touch the button three times to activate the Siri voice assistant

Calling:

- ① When a call comes in, short press one of the touch buttons in order to answer the call or long press it to reject it.
- ② During a phone call, short press the earphone button to end the call and the earphone will resume its previous working state.
- ③ During a call, the volume can be controlled via the mobile phone.
- ④ Stereo mode: both ears have voice.

Specifications:

- Model : I13
- Bluetooth version: V5.3
- Voltage rating and energy capacity: 3.7V/400mAh
- Battery capacity: 2*3.7V/40mAh
- Earphone Charge time: Around 1.5 hour
- Music playing time: About 6-8h
- Bluetooth profiles supported: HFP/A2DP/AVRCP
- Operating frequency: 2.40 GHZ-2.48 GHZ
- RF Sensitivity: -92dBm
- Working temperature range: -10+50 °C
- Maximum transmission range: ≤15M

Packing list:

- Earphones *2
- USB cable *1
- Charging case *1
- Earbuds *4(L/S)
- User manual *1

Important:

- ① Host device is a connection between second device and your mobile phone, it is normal status under high power consumption.
- ② When not connected to any device, the earphones will power off automatically after 5 minutes.
- ③ On iPhones the battery level of the earphones will be displayed in real time.
- ④ When the earphones and the charger case are not used for long periods of time, it is recommended to keep them in a dry place and to recharge them at least every 2 months.

Fault:

Fault	Cause	Solutions
Can't power on	Earbuds are low battery / Crash	Charge the Earbuds / Keep the earphones touch button pressed for 8 seconds
No charging indication	The Earbuds are not well put into the charging case There are foreign objects in the spring needle and copper column	Adjust Earbuds position/ Clean the spring needle and copper column
Automatically shut down	Earbuds are low battery	Charge the Earbuds
The Earbuds have an echo	The volume is too high or the environment is too noisy	Adjust the volume or change position
The Earbuds are noisy	Outside environment interference or too far away from mobile phone	Change position or move closer to the mobile phone
Small sound	wearing Earbuds incorrectly or the volume is too low	Adjust the Earbuds position or the mobile phone volume
Signal intermittent	Outside environment interference or too far away from mobile phone	Change to better environment or move closer to the mobile phone
Earbuds have no sound	Pairing unsuccessful between L and R Earbuds	Put the earphones into the charger case

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.