



T18 TWS BLUETOOTH SPEAKER

Please read the user manual carefully before you use the T18 TWS Bluetooth speaker

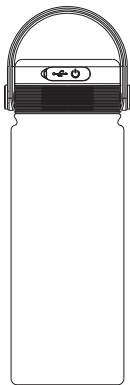

Main Function Instruction

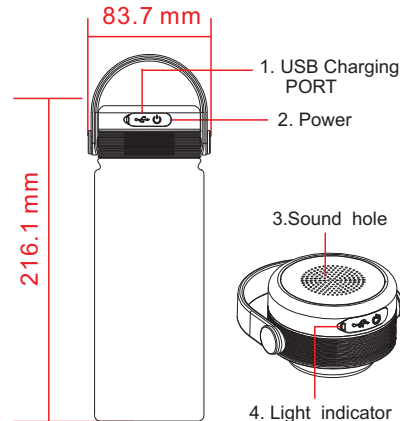

Product Parameters

- ◇ Bluetooth name: T18
- ◇ Bluetooth version: V5.0
- ◇ Input: DV 5V/2A
- ◇ Distance: 10m
- ◇ Audio output power: 3W
- ◇ Battery: 3.7V /600mah
- ◇ Play time: around 2-3 h
- ◇ Charging time: around 1.5h
- ◇ SNR: ≥ 90 dB
- ◇ Executive standard: GB/T 29606-2013 《stainless steel vacuum cup》

Function Instruction

- ◇ Long press "ON/OFF" to turn on the device, the blue light will flash quickly; When the device is connected successfully, the blue light will be on everlastingly; When the device is playing music, the blue light will flash slowly; If turn on the 2 Bluetooth speakers synchronously, they will connect automatically (TWS function), and the key speaker will flash blue light quickly, the following speaker will be blue light everlastingly; When playing music, both speakers will flash blue light slowly.

- ◇ The red light will be on when charging, and the light will be off when fully charged.
- ◇ It will remind "DIDI" sound when the speaker is out of power.
- ◇ The device will be off automatically if it's out of connection for 5 minutes.

Attention

- ◇ Do not wash the inside of the charging box during use. The surface of the charging box can only be quickly washed with a small amount of water or wiped with a wet towel.
- ◇ Minors should be used under the guidance of an adult.
- ◇ Wash the cup with warm detergent in warm water before use.
- ◇ In order to achieve the best cold preservation effect, it is recommended to add hot water or ice first to be preheated or pre-cooled.
- ◇ Tighten the lid clockwise when the cup is tilted. To prevent leakage.
- ◇ When adding boiling water to the cup, it should not be too full and there is a danger of spilling and scalding.
- ◇ Avoid falling, bumping or strong impact, which will cause deformation of the cup and affect the product use efficacy.
- ◇ Avoid any form of direct heating or place at high temperatures. It is strictly forbidden to place the

product in Heating in open flames, induction cookers, microwave ovens, and dishwashers.

- ◇ Do not add dry ice, carbonated drinks, etc., which are prone to high pressure, do not add soy sauce, soup and other liquids containing alkaline and acidic ingredients to avoid cup corrosion.
- ◇ After loading a perishable beverage such as milk, please drink it as soon as possible and wash it to avoid the liner decay. Do not use it for other purposes except heat preservation and cold preservation.
- ◇ When not in use for a long time, clean it and keep it dry.
- ◇ Please charge in a safe environment. When charging the charging box, please pull out the charging cable as soon as possible after the charging indicator indicates full charge, so as to avoid damage to the charging box caused by long time of charging.

Tips: when you use it for the first time, please connect the attached data cable to the power adapter to charge for 1-2 hours to achieve the best effect of the built-in battery.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.