# Wireless speaker

# MODEL:S-208



**User Instruction** 

# Functions

these information, turn on the speaker (connected or disconnected are both ok), and long press the Play / Pause button for 6 seconds until you hear the "di~di" prompt tone, the pairing information list are cleared now.

14. Low Battery Warning: When the speaker's battery is less than 20%, the red indicator light will flash, then please charge the speaker with provided charging cable and the AC adapter(≧ DC 5V/1A). If you do not charge the speaker in time, when its battery is less than 5%,it will turn off automatically.

Note: If the speaker is not to be used for a long time, please fully charge it at least once a month to avoid shorten the speaker's lifespan because of over discharge.

16.two speaker paring: Power on the two speaker , then long press "button . the blue indicator flash slowly with "di-di" prompt tone . blue indicator light flash quickly twice mean two speaker in pairing state. then the indicator light flash slowly means the two speaker pairing successfully . press the "  $\not \ensuremath{Z}$ " button again will disconnect the two speaker

# Precaution


1. It is normal that the speaker will get a bit hot in correct use or charging.

Please turn off the speaker and disconnect it with all audio devices before cleaning. Do not use alcohol, benzene or other chemicals to clean the speaker.

We recommend to use the speaker in dry and clean environment.
 Do not throw or tread on the speaker. Please place it on a stable surface when in use.

5. Do not place the speaker close to extremely cold or hot objects. 6. Please use the original accessories provided by us.

7. Do not disassemble the speaker without authorization.

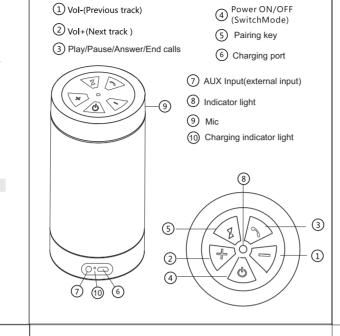

#### Warranty Service

Product Overview

We provide following warranty services:

1. 30-day money-back guarantee for any reason: Within 30 days after the date of purchase, return your undamaged speaker and receive a full refund for any reason.

 18-month warranty for quality-related issues: Within 18 months after the date of purchase, we take care of all quality-related issues with a replacement or full refund.

3. Within the warranty validity, we provide free after sale service, except for following cases:

A. No original warranty card or valid invoice.

B. The speaker's malfunction or damage is caused by force majeure, incorrect operation (not as this instruction manual directed) or any man-made factors.

C. The speaker is not purchased from authorized dealer and no authorized dealer's stamp on the warranty card.

D. The date of purchase on the warranty card has been changed.

D. The date of purchase of the warranty card has been change

E. The speaker's malfunction or damage appears during shipment.F. The speaker's malfunction or damage is caused by disassembly or repairing without authorization.

## Functions

1. Charging: Please fully charge the speaker for about 7.5~8 hours before first use. Use the original charging cable to connect to the power adapter ( $\geqq$  DC 5V/1A) to get charged, otherwise it will need more time to get the speaker fully charged. 2. Power On/Off: Long press the power button until the blue indicator light flashes twice, then release the power button, the speaker turns on with a prompt tone. Long press the power button again until you hear the "di~di"promt tone, the speaker is turned off.

3. Play/Pause Music: When the speaker is playing the music, short press the Play/Pause button to play or pause music.
4. Bluetooth Pairing: After turning on, the blue indicator light keeps flashing quickly. Then open your smartphone's Bluetooth function, search for and choose "S-208". After successful paring, you will hear the"di~di" prompt tone with blue indicator light keep on. Now you can enjoy music or video on your smartphone with this speaker.And you also can find speaker battery level display in your smartphone.

 Automatic Repairing: When the speaker turns on (not for the first time), if the last paired cellphone is within the Bluetooth range and it's Bluetooth function is on, the speaker will automatically repair to this smartphone. No need of repeated pairing.
 Volume Control: Short press the Vol+ or Vol- button to increase or decrease the volume or adjust the volumewith your smartphone (when paired successfully and uses iOS operating system).
 7. next or previous track or choose the music with your smartphone (when paired successfully and uses iOS operating system).
 Pickup/Reject/End Call: In successful paring, if your smartphone gets a incoming call, the spearker will play your ring tone. Then short press the Plav/Pause button to answer the call

with the speaker, or you can long press the Play/Pause button for 2 seconds to reject this call. When answering the call, short press the

#### Specifications

Product Model	CSR4.2 With handfree function	
Output channel	2.0	
Voltage input	DC5V/1A	
Effective power	4.5W*2	
Speaker	Φ45*2 4Ω5W build-in vibrating diaphragm	
Battery	18650 3.7V/4400 mAH	
Product Size	Ф79mm * H166mm	
Product Weight	428G	

#### FCC Statement

This exploment has been tested and found to comply with the limits for a Class B digital device, protection against harmful interference in a residential installation. This exploment generates uses and can addite radio frequency energy and, if not installation. This exploment generates uses and can addite radio frequency energy and, if not installation. This exploment does cause harmful interference with not courd in a particular installation. This exploment does cause harmful interference with not courd in a particular installation. This exploment does cause harmful interference with not courd in a particular installation. This exploment does cause harmful interference with not courding to be correct the interference by one or more of the following measures: - Restrict or rotocate the meaning startmat. - increase the separation tablenese. The equipment of and rocoiver.

connected. -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) This device may not cause harmful interference, and (2) this device m ust accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Troubleshooting

1. The "S-208" device is in smartphone' s Bluetooth device list, but failed to pair to.

Reason A: The speaker is not waiting to be paired (means that it has paired to another smartphone).

Solution: Long press the Play/Pause button for about 3 seconds to shut off current pairing, when the blue indicator light starts to flash slowly. choose "S-208" to pair to.

Reason B: The speaker's paired information has been cleared. Solution: Use your smartphone to forget the device named "S-208". Then search for "S-208" and choose it to pair again.

- Then search for S-208 and choose it to pair again
- The smartphone could not search out "S-208". Reason A: The speaker is not waiting to be paired (means that it has paired with another smartphone).

Solution: Long press the "Play/Pause" button for about 3 seconds to shut off current pairing, when the blue indicator light starts to flash slowly, choose "S-208" to pair.

Reason B: Paired devices information is lost or not remembered (caused by unpredictable operation).

Solution: Long press the Play/Pause button for about 6 seconds to clear all paired information, and then search for "S-208" and choose it to pair to.

3. The charging time is too long. Reason A: The adapter's output is too low, so the charging cable needs too much current while charging. Solution: Please choose the adapter whose output is higher than DC 5V/1A and use the original charging cable.

Accessories

AUX Audio Cable x 1

USB Charging Cable x 1

Instruction x 1

Hook x 1

#### Functions

Play/Pause button to end it.

9. Redial Last Outgoing Call: In successful paring with your smartphone, double press the Play/Pause button, your smartphone will redial your most recently dialed number.

10.Afterthespeakersuccessfullyconnectedwithyoursmartphone ,acallingiscoming(thephoneringwillplaybyspeaker),shortpre ssplay/pausebuttontwillstartacallbythisspeaker,longpressth ePlay/Pausebuttonfor2secondstorejectthiscall.Whenanswer ingthecall,shortpressthePlay/Pausebuttontoendit.Redial do ublepressthePlay/Pausebutton,yoursmartphonewillredialyour mostrecentlydialednumber.

11. Automatic Power Off: When the speaker is on, if one of the following situations last for over 10 minutes, the speaker will power off automatically to save battery power:

A. The spearker keeps waiting to be paired;

B. After successful pairing with your smartphone, the smartphone exceeds the speaker's Bluetooth range;
C. After successful pairing with your smartphone, the smartphone's Bluetooth function is turned off.
12. Pair to Another Smartphone: Method A: Turn off the

smartphone A's Bluetooth function, you will hear the "di~di" prompt tone and the blue indicator light will turn to flash quickly. Then the smartphone B can search for "S-208" and choose it to pair. Method B: Long press the

Play/Pause button for 3 seconds until you hear the "di~di" prompt tone,the blue indicator light will turn to flash quickly, it means that the smartphone B could

search for "S-208" and choose it to pair .

13. Clear Paired Information: The speaker can remember up to 8 device's pairing information, if you need to clear

# Warranty Card

Please ask the dealer to fill the warranty card immediately after purchasing. We recommend to keep this card for future reference.

Name	Age	
Tel Num.	Postcode	
Gender	Product	
Date of Purchase	Product Code	
Part Num.	Sale Num.	
Postal Address		

Dealer Stamp: